


1. Walking transmission box

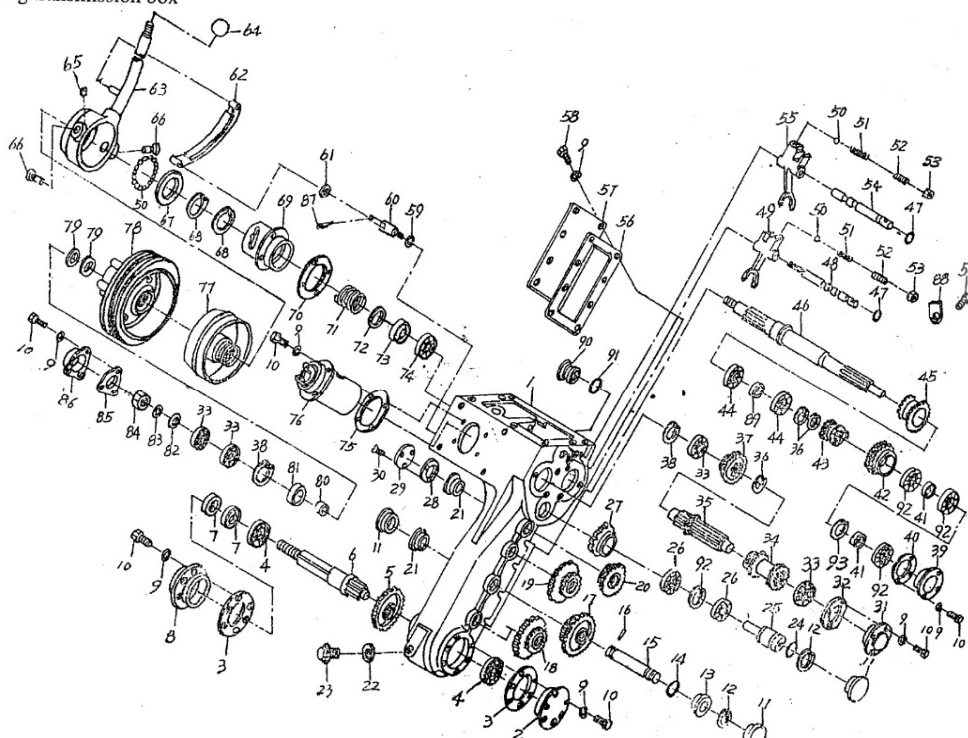


No.	Number of part	Name of part	Quantity	No.	Number of part	Name of part	Quantity
1	2ZT-1-1-1A	Walking Transmission box body	1	26	GB276-64	Bearing 103	2
2	2ZT-1-1-02	Landwheel shaft right bearing base	1	27	2ZT-1-1-19-01A	Shaft III gear	1
3	2ZT-1-1-05	Landwheel shaft bearing base gasket	2	28	2ZT-1-1-17	Shaft IV left end cover gasket	1
4	GB276-64	bearing 207	2	29	2ZT-1-1-16	Shaft IV left end cover	1
5	2ZT-1-1-04	Landwheel shaft gear	1	30	GB68-85	Screw M6×16	3
6	2ZT-1-1-03	Landwheel shaft	1	31	2ZT-1-1-26	Shaft II bearing base	1
7	HG4-692-67	Oil seal PD35×60×12	2	32	2ZT-1-1-27	Shaft II bearing base gasket	1
8	2ZT-1-1-06	Landwheel shaft left bearing base	1	33	GB276-64	Bearing 203	4
9	GB93-76	Washer 6	38	34	2ZT-1-1-28-02	Shaft II gears 14/16	1
10	GB5782-86	Bolt M6×20	29	35	2ZT-1-1-28-01A	Shaft II	1
11	2ZT-4-1-6-2	End cap	8	36	GB894.1-86	Collar 25	2
12	GB894.1-86	Collar 18	4	37	2ZT-1-1-28-03A	Shaft II gears 14/31	1
13	2ZT-1-1-09	Positioner shaft sleeve(I)	4	38	GB893.1-86	Collar 40	2
14	GB1235-76	Model oil seal ring 18×2.4	8	39	2ZT-1-1-21A	Shaft I right bearing base	1
15	2ZT-1-1-07	Shafts IV . V . VI . VII	4	40	2ZT-1-1-20	Shaft I right bearing gasket	1
16	2ZT-4-1-2-7-7	Long steel wire pin	4	41	2ZT-1-1-22-05A	Shaft I sleeve	2
17	2ZT-1-1-13-00	Shaft VI gear combination	1	42	2ZT-1-1-22-04A	Shaft I gears 30/32	1
18	2ZT-1-1-8-00	Shaft VII gear combination	1	43	2ZT-1-1-22-03A	Shaft I quick slow gears	1
19	2ZT-1-1-14-00	Shaft V gear combination	1	44	GB276-64	Bearing 105	2
20	2ZT-1-1-15-00	Shaft IV gear combination	1	45	2ZT-1-1-22-02A	Shaft I bevel gear	1
21	2ZT-1-1-12	Positioner shaft sleeve(II)	4	46	2ZT-1-1-22-01A	Shaft I	1
22	ZB71-62	Oil ring 22×14	1	47	GB1235-76	Model O oil seal ring 14×2.4	2
23	Q/ZB220-77	Screw plug M14×1.5	1	48	2ZT-1-1-48A	Hill distance fork shaft	1
24	GB1235-76	Model O oil seal ring 30×3.1	1	49	2ZT-1-1-49	Hill distance fork	1
25	2ZT-1-1-18A	Shaft III	1	50	GB308-77	steel balls Φ8	24

No.	Number of part	Name of part	Quantity
51	2ZT-1-1-25	Positioner spring	2
52	GB73-85	Screw M10x20	2
53	GB6170-86	Nut M10	2
54	2ZT-1-1-24	Main poker fork shaft	1
55	2ZT-1-1-23A	Main poker fork	1
56	2ZT-1-1-11	Speed change box front end cover gasket	1
57	2ZT-1-1-10	Speed change box front end cover	1
58	GB5782-86	Bolt M6x16	9
59	GB93-76	Washer 10	1
60	2ZT-1-1-44	Brake belt fixing shaft	1
61	GB97.1-85	Washer 10	1
62	2ZT-1-1-39-00	Brake belt rivetted assembly	1
63	2ZT-1-1-30-00	Clutch handle rivetted assembly	1
64		Clutch handel knob	1
65	GB71-85	Screw M5x10	2
66	2ZT-1-1-43	Clutch poker pin	2
67	2ZT-1-1-31	Clutch balls pressing plate	1
68	GB984.1-86	Collar 45	2
69	2ZT-1-1-41	Clutch bearing base	1
70	2ZT-1-1-42	Clutch bearing base gasket	1
71	2ZT-1-1-29	Clutch spring	1
72	2ZT-1-1-40	Clutch spring seat	1
73	HG4-692-67	Oil seal PD30x55x10	1
74	GB276-64	Bearing 206	1
75	2ZT-1-1-46	Output bearing base gasket	1

No.	Number of part	Name of part	Quantity
76	2ZT-1-1-45-00A	Output shaft assembly	1
77	2ZT-1-1-32-00A	Clutch cone adhered/rivetted assembly	1
78	2ZT-1-1-33-01	Clutch pulley	1
79	2ZT1-1-38	Adjusting shims	2
80	2ZT1-1-36	Positioning sleeve	1
81	HG4-692-67	Oil seal PD22x40x10	1
82	GB97.1-85	Washer 12	1
83	GB93-76	Washer 12	1
84	GB6170-86	Nut M12	1
85	2ZT-1-1-35	Clutch pulley end cover gasket	1
86	2ZT-1-1-34	Clutch pulley-end cover	1
87	GB91-86	Pin 2.5x16	1
88	2ZT-1-1-37	Fork shaft positional plate	1
89	2ZT-1-1-22-06A	Collar sleeve	1
90	GB1160-79	Oil scale	1
91	GB1235-76	Model 0 oil seal ring 38x3.5	1
92	GB276-64	Bearing 104	3
93	GB893.1-86	Collar 42	1

2. Walking transmission box cover

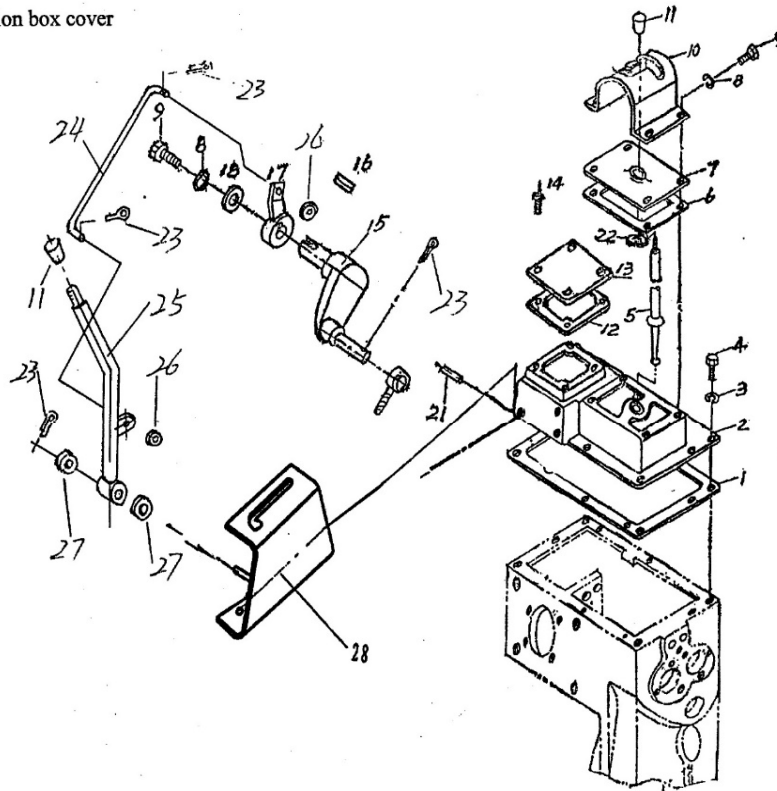


- 4 -

No.	Number of part	Name of part	Quantity	No.	Number of part	Name of part	Quantity
1	2ZT-1-1-47A	Transmission box cover gasket	1	26	GB848-85	Washer 6	2
2	2ZT-1-1-50A-01	Transmission box cover	1	27	GB96-86	Washer 8	2
3	GB93-76	Washer 8	12	28	2ZT-1-6-05B-00	Position plate welding	1
4	GB5782-86	Bolts M8×30	8				
5	2ZT-1-1-50-04	Speed change handle	1				
6	2ZT-1-1-50-17	Cover lid gasket	1				
7	2ZT-1-1-50-02	Cover lid	1				
8	GB93-76	Washer 6	5				
9	GB5782-86	Bolts M6×17	5				
10	2ZT-1-1-50-03	Positioning plate	1				
11	2ZT-1-1-50-10	Speed change handle knob	2				
12	2ZT-1-1-50A-16	Separation positioner cover gasket	1				
13	2ZT-1-1-50A-09	Positioner clutch cover	1				
14	GB818-85	Machine screw M6×10	4				
15	2ZT-1-1-50A-12	Positioner shaft	1				
16	GB1096-79	Key 4×10	1				
17	2ZT-1-1-50A-11-00	Positioner clutch handle weld	1				
18	GB96-85	Washer 6	1				
19	2ZT-1-6-00	Steering handle	1				
20	GB5782-86	Bolts M8×22	4				
21	GB119-86	Pin 4×25	1				
22	2ZT-1-1-50-05	Rubber washer	1				
23	GB91-86	Pin2×12	4				
24	2ZT-1-8-2	Rod	1				
25	2ZT-1-8-1-00	Handle weld	1				

- 5 -

3. Power rack

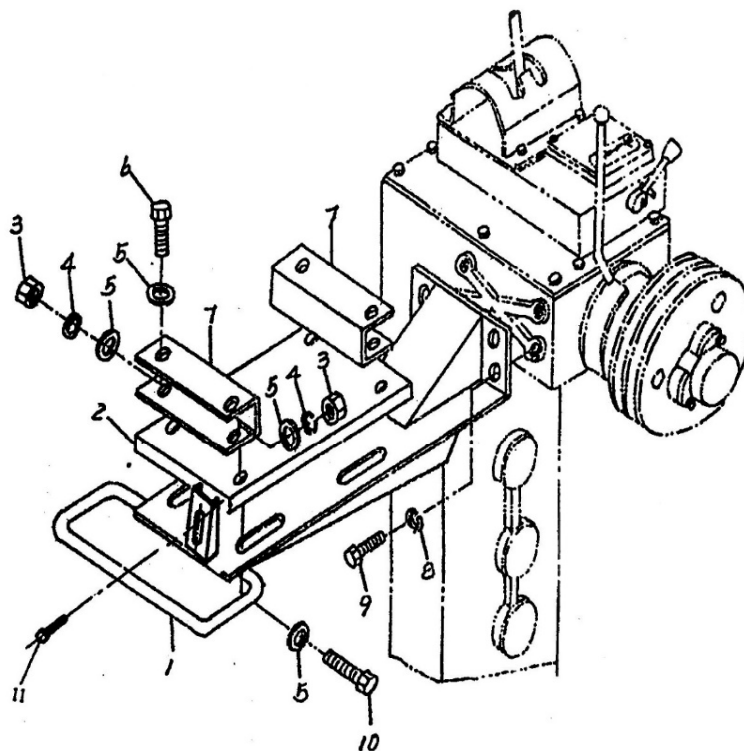


- 6 -

No.	Number of part	Name of part	Quantity
1	2ZT-1-2-00	Engine rack	1
2	2ZT-1-3	Engine cushion wood	1
3	GB6170-86	Nut M10	8
4	GB93-76	Washer 10	8
5	GB97.1-85	Washer 10	16
6	GB5782-86	Bolt M10×35	4
7	2ZT-1-4	Engine iron pad	2
8	GB93-76	Washer 12	4
9	GB5782-86	Bolt M12×25	4
10	GB5782-86	Bolt M10×45	4
11	GB5782-86	Bolt M10×125	1

- 7 -

4. Output shaft

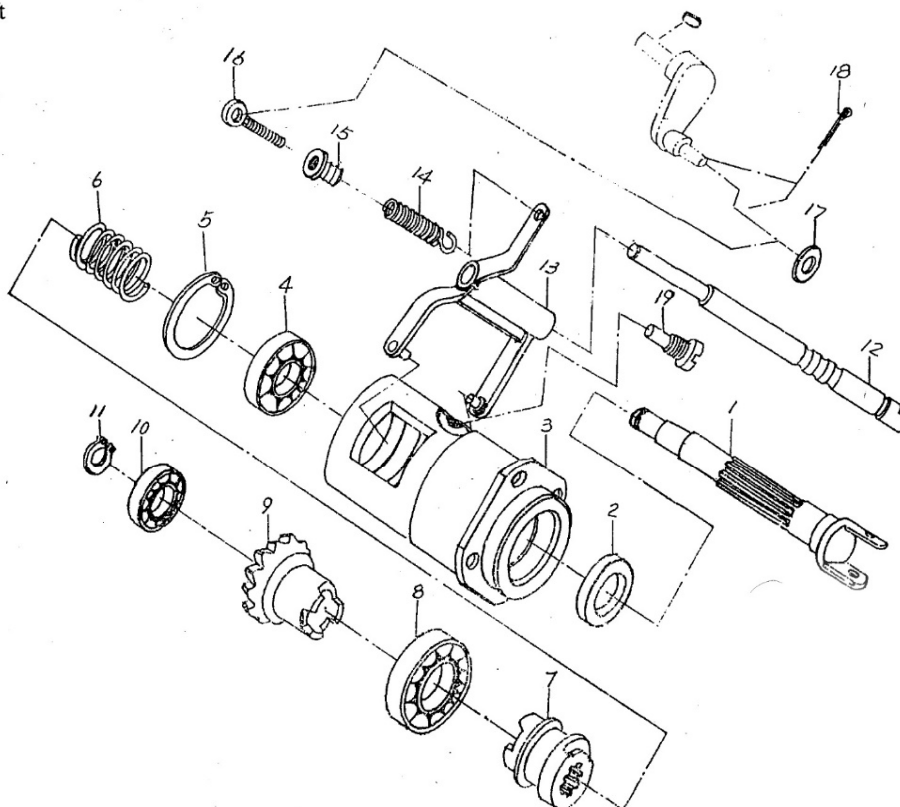


- 8 -

No.	Number of part	Name of part	Quantity
1	2ZT-1-1-45-1A	Output shaft	1
2	HG4-692-67	Oil seal W25×40×5	1
3	2ZT-1-1-45-05A	Output shaft bearing box	1
4	GB276-64	Bearing 104	1
5	GB893-76	Collar 42	1
6	2ZT-1-1-45-02A	Separating jaw spring	1
7	2ZT-1-1-45-04A	Separating jaw	1
8	GB276-64	Bearing 107	1
9	2ZT-1-1-45-06A	Large bevel gear	1
10	GB276-64	Bearing 201	1
11	GB894.1-86	Collar 12	1
12	2ZT-1-1-48A	Seedling distance fork shaft	1
13	2ZT-1-1-51-00	Positioner clutch fork	1
14	2ZT-1-1-50A-06	Extension spring	1
15	2ZT-1-1-50A-07	Adjusting nut	1
16	2ZT-1-1-50A-8-00	Adjusting rod weld	1
17	GB848-86	Washer 8	1
18	GB91-86	Pin 2×12	1
19	2ZT-1-1-45-03A	Positioner screw	1

- 9 -

5. Paddy wheel

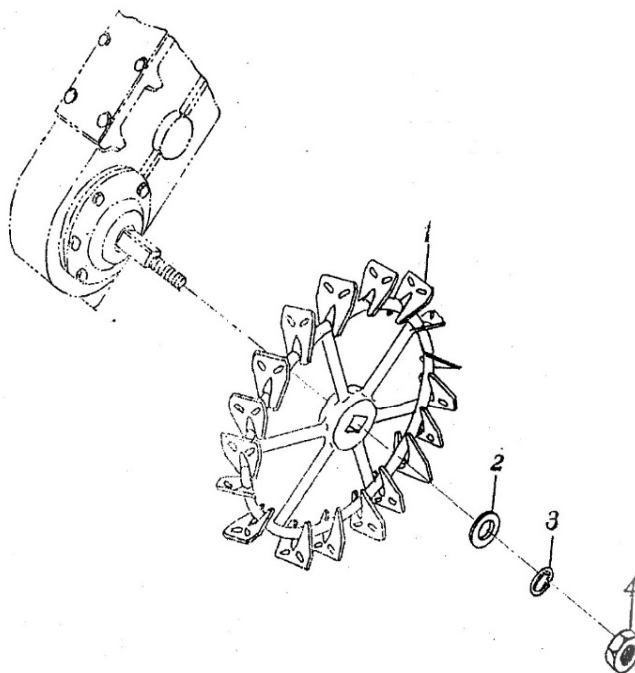


- 10 -

No.	Number of part	Name of part	Quantity
1	2ZT-1-5-00	Paddy wheel	1
2	GB95-85	Washer 20	1
3	GB93-76	Washer 20	1
4	GB6170-86	Nut M20	1

- 11 -

6. Transport rubber-tire wheel

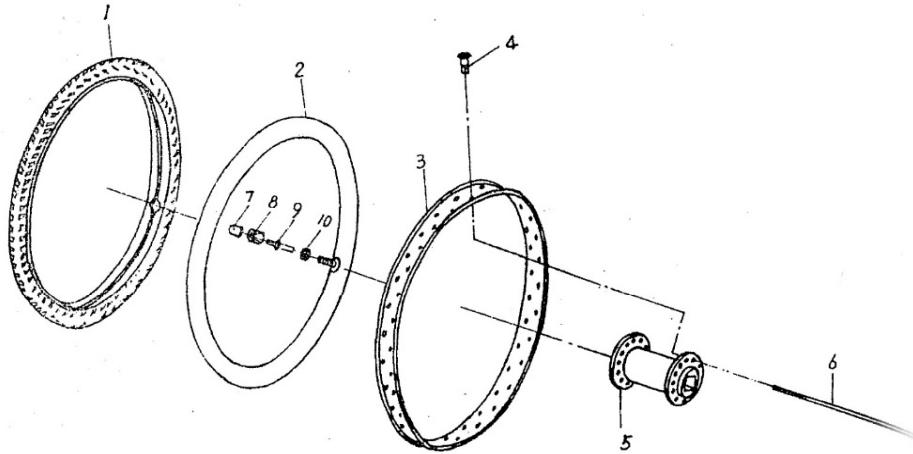


- 12 -

No.	Number of part	Name of part	Quantity
1	HG4-232-65	26x2 $\frac{1}{2}$ soft rim rubber type	1
2		Fortified 26x2 $\frac{1}{2}$ type tube	1
3		Hand cart wheel rim	1
4		Nut (for spokes)	40
5	22T-1-7-01A	Wheel hub	1
6		Hand cart wheel 8K steel wire spoke	40
7		Plastic Nut	1
8		Nut (I)for air valve	1
9		Air valve tubing	1
10		Nut (II)for air valve	1

- 13 -

7. Traction frame

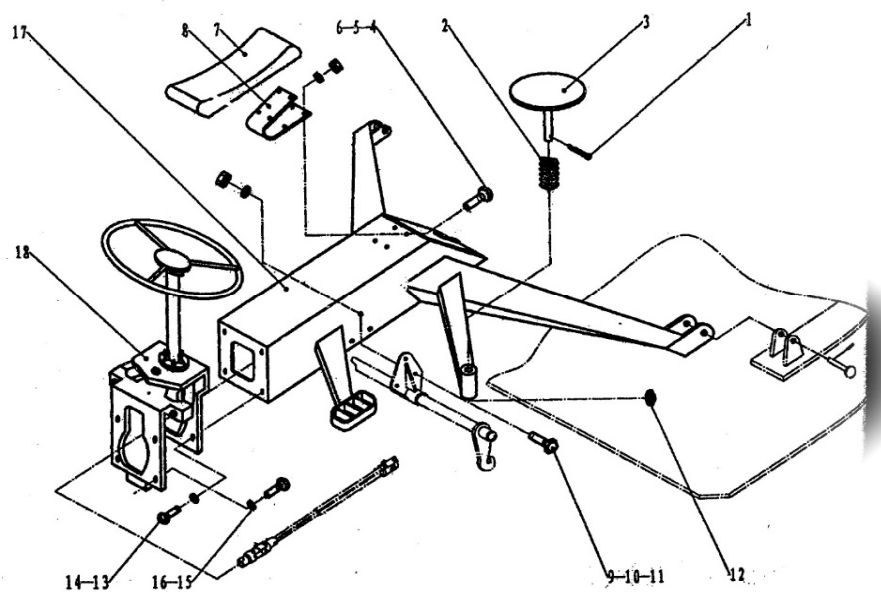


- 14 -

No.	Number of part	Name of part	Quantity
1	GB91-86	Pin 3×30	2
2	2ZT-2-3	Seat spring	2
3	2ZT-2-2-00	Seedling loading seat plate weld	2
4	GB5782-86	Bolt M6×16	4
5	GB93-76	Washer 6	4
6	GB6170-86	Nut M6	4
7	2ZT-2-9-00	Seat	1
8	2ZT-2-10	Seat plate spring	1
9	Gb5782-86	Bolt M8×30	6
10	GB93-76	Washer 8	6
11	GB6170-86	Nut M8	6
12	GB95-85	Washer 12	2
13	GB5782-86	Bolt M10×25	4
14	GB91-86	Washer 10	4
15	GB5782-86	Bolt M12×45	4
16	GB93-76	Washer 12	4
17	2ZT-2-1-00A	Traction frame weld	1
18	2ZT-C61	Steering handle	1

- 15 -

8. Seedling float

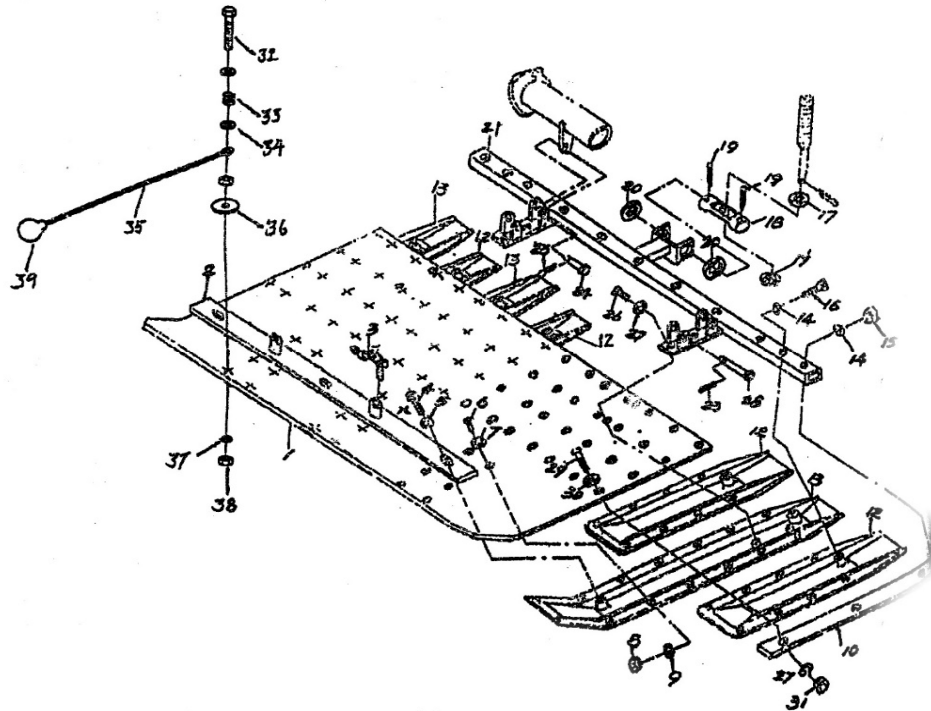


- 16 -

No.	Number of part	Name of part	Quantity
1	2ZT7358-3B-1	Plate float	1
2	2ZT7358-3-8-00	Hanger chain seat weld	1
3	2ZT-3-4-00	Hanger chain	2
4	GB5783-86	Bolt M10×35	4
5	GB93-76	Washer 10	4
6	GB67-85	Screw M6×20	72
7	GB97.1-85	Washer 6	72
8	GB6710-86	Nut M6	72
9	GB93-76	Washer 6	72
10	2ZT7358-3-7	Fixing plate	2
11	GB67-85	Screw M12×50	2
12	2ZT-3-1-00A	Supporting tail skid weld(I)	3
13	2ZT-3-2-00A	Supporting tail skid weld(II)	4
14	GB93-76	Washer 12	9
15	GB6170-86	Nut M12	2
16	GB5782-85	Bolt M12×50	7
17	GB848-85	Washer 10	2
18	2ZT-3-9	Elevating rod fixing pin	1
19	GB91-86	Pin 3.2×35	2
20	GB848-85	Washer 24	2
21	2ZT7358-3B-5	Rectangular tabe weld	1
23	GB91-86	Pin 4×30	4
24	2ZT-12	Frame connecting pin	2
26	GB5783-86	Bolt M8×30	4
27	GB93-76	Washer 8	14

No.	Number of part	Name of part	Quantity
28	2ZT-11	Taaaction frame connecting pin	2
29	GB67-85	Screw M8×25	6
30	GB97.1-85	Washer 8	6
31	GB6170-86	Nut M8	6
32	GB5783-86	Screw M8×45	12
33	2ZT7358-100-01	Spring	2
34	GB95-85	Washer 8	4
35	2ZT7358-100-02	Row mark rod	2
36	GB96-85	Washer 8	2
37	GB93-87	Washer 8	2
38	GB41-86	Nut M8	4
39	2ZT7358-100-03	Ball mark	1

- 17 -

9. Working transmission box

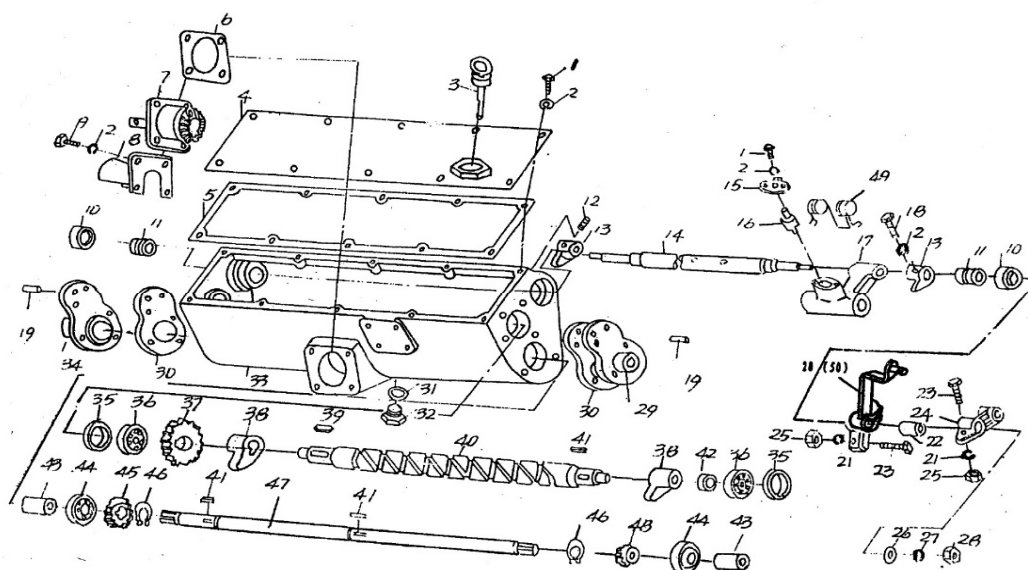


- 18 -

No.	Number of part	Name of part	Quantity	No.	Number of part	Name of part	Quantity
1	GB5783-86	Bolt M6×12	10	26	GB97.1-85	Washer 10	2
2	GB93-76	Washer 6	16	27	GB93-76	Washer 10	2
3	2ZT-4B-5-1-22	Oil scale	1	28	GB6170-86	Nut M10	2
4	2ZT7358-4B-1-1-1	Box cover weld	1	29	2ZT7358-4B-1-3	Box-moving plate(left)	1
5	2ZT7358-4B-1-1-5	Box cover paper gasket	1	30	2ZT7358-4B-1-2	Box-moving plate paper gasket	2
6	2ZT-4B-5-1-21	Gear(I)bearing base gasket	1	31	ZB71-62	Oil ring 22×14	1
7	2ZT-4-1-1-8-00	Bevel gear(I)assembly	1	32	Q/ZB 220-77	Screw plug M14×1.5	1
8	2ZT-14-00	Safety hood weld	1	33	2ZT7358-4B-1-1-1	Transmission box body	1
9	GB5783-86	Bolt M6×20	4	34	2ZT7358-4B-1-1	Box-moving plate(right)	1
10	2ZT-4B-5-1-12	Oil seal	2	35	2ZT-4-1-1-16	Bearing washer	2
11	2ZT-4B-5-1-11	Box-moving shaft sleeve	2	36	GB276-64	Bearing 202	2
12	GB71-85	Screw M6×16	2	37	2ZT-4B-5-1-4	Spiral shaft gear	1
13	2ZT-4B-5-1-6A	Seedling delivery cam	2	38	2ZT-4B-5-1-5A	Active seedling delivery cam	2
14	2ZT7358-4B-1-1-4	Box-moving shaft	1	39	GB1096-79	Key 5×28	1
15	2ZT-4-1-1-6	Finger pin press plate	1	40	2ZT7358-4B-1-1-2	Spiral shaft	1
16	2ZT-4-1-1-7	Finger pin	1	41	GB1096-79	Key 5×14	3
17	2ZT-4B-5-1-8A	Sliding sleeve	1	42	2ZT-4B-5-1-16A	Collar sleeve	1
18	GB65-85	Screw M6×30	2	43	2ZT-4-1-3A	Bushing	2
19	GB119-86	Pin 6×16	2	44	GB276-64	Bearing 203	3
20	2ZT-4B-5-1-3-1-0	Poker arm riveting (R)	1	45	2ZT-4B-5-1-18	Driving shaft gear	1
21	GB93-76	Washer 8	4	46	GB894.1-84	Collar 17	2
22	2ZT-4B-5-1-13	Drive arm shaft sleeve	2	47	2ZT7358-4B-1-1-3	Transmission shaft	1
23	GB5783-86	Bolt M8×25	4	48	2ZT-4-1-1-5-2	Bevel gear(II)	1
24	2ZT-4B-5-1-2	Box-moving drive arm	2	49	2ZT-4B-5-1-7A	Torsional spring	1
25	GB6170-86	Nut M8	4	50	2ZT-4B-5-1-23-1-0	Poker arm riveting (L)	1

- 19 -

10. Bevel gear (I) assembly

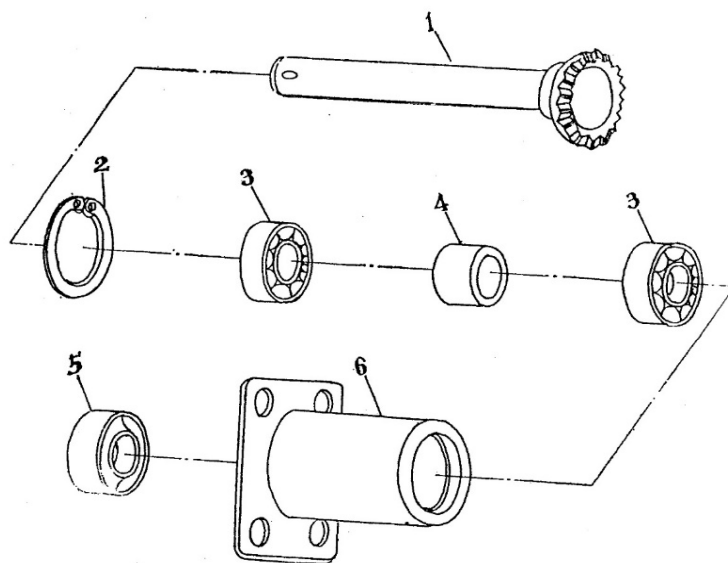


- 20 -

No.	Number of part	Name of part	Quantity
1	ZZT-4-1-1-8-1	Bevel gear(I)	1
2	GB893.1-86	Collar 40	1
3	GB276-64	Bearing 203	2
4	ZZT-4-1-1-8-3	Collar sleeve	2
5	HG4-692-67	Oil seal SD17×35×10	1
6	ZZT-4-1-1-8-2	Bevel gear(I)bearing base	1

- 21 -

11. Chain case (I)

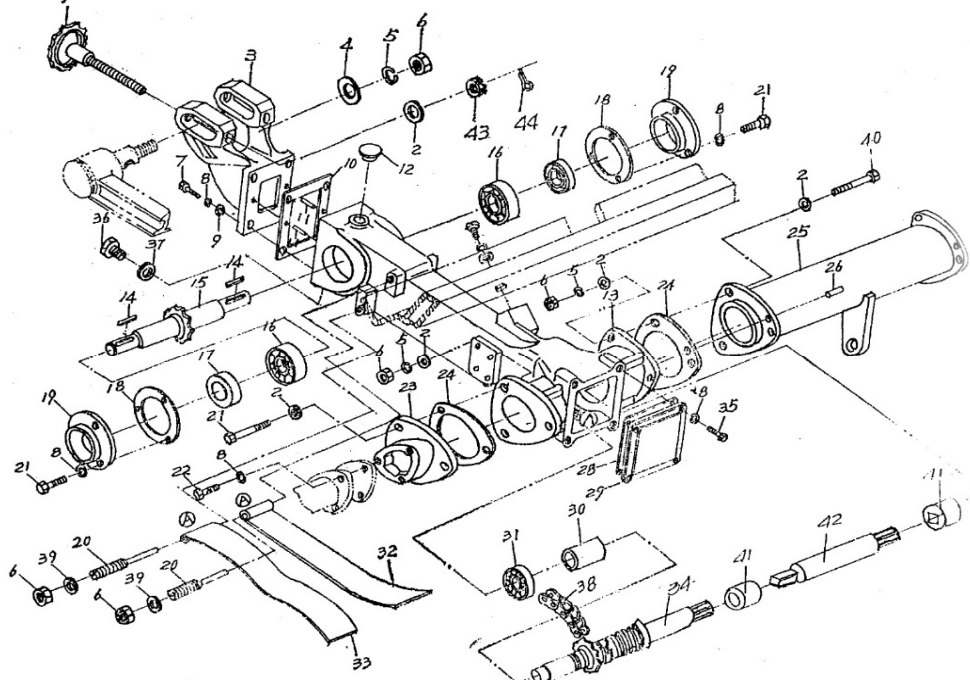


- 22 -

No.	Number of part	Name of part	Quantity	No.	Number of part	Name of part	Quantity
1	2ZT-4-1-6-4-00	Hand adjusting screw knob	2	26	GB119-86	Pin 6×16	1
2	GB848-85	Washer 8	15	27	GB5782-86	Bolt M8×40	3
3	2ZT7358-4B-1-8-1	Chain case rear cover	1	28	2ZT-4-1-2-13	Chain case front cover rubber gasket	1
4	2ZT-4-1-6-5	Washer Φ28	2	29	2ZT-4-1-2-14	Chain case front cover	1
5	GB93-76	Washer 8	8	30	2ZT7358-4-2-02	Safety clutch spacer tube	1
6	GB6170-86	Nut M8	12	31	GB276-64	Bearing 202	1
7	GB5783-86	Bolt M6×25	4	32	2ZT-4-1-2-2	Upper spring plate	1
8	GB93-76	Washer 6	17	33	2ZT-4-1-2-3	Lower spring plate	1
9	GB97.1-86	Washer 6	4	34	2ZT7358-4B-1-2-2	Safety clutch assembly(I)	1
10	2ZT7358-4-21	Chain case rear cover paper gasket	1	35	GB5783-86	Bolt M6×12	4
11	GB119-86	Pin 4×10	2	36	Q/ZB220-77	Screw plug M10×1	1
12	2ZT-4-1-2-4	Lubrication oil lid	1	37	ZB71-62	Oil ring 18×10	1
13	2ZT7358-4B-1-2-1	Chain case(I)	1	38		Light motorcycle chain	2
14	GB1096-79	Key 4×18	2	39	ZB71-62	Oil ring 15×8	2
15	2ZT7358-4B-1-2-1	Sprocket wheel shaft weld	1	40	GB5783-86	Bolt M8×35	3
16	GB276-64	Bearing 302	2	41	2ZT-4-1-3A	Bushing	2
17	HG4-692-67	Oil seal SD15×35×10	2	42	2ZT7358-4-16A	Transmission shaft(II)	1
18	2ZT-4-1-2-6	Oil seal base-paper gasket	2	43	GB6170-86	Nut M8	2
19	2ZT-4-1-5-1	Oil seal base	2	44	GB91-86	Pin 2×20	2
20	2ZT-4-1-2-8	Pin for spring plates	2				
21	GB5783-86	Bolt M6×16	6				
22	GB5782-86	Bolt M6×20	3				
23	2ZT7358-4-2-01	Chain case bearing seat	1				
24	2ZT7358-4-19	Chain case paper gasket	2				
25	2ZT7358-4B-1-3	Right joint tube weld	1				

- 23 -

12. Roller support (right)

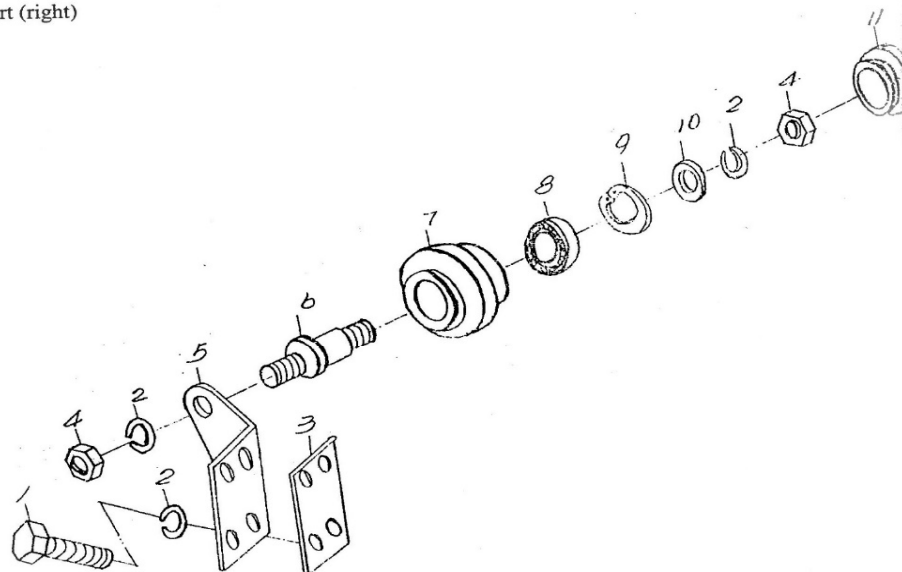


- 24 -

No.	Number of part	Name of part	Quantity
1	GB5782-86	Bolt M8×20	4
2	GB93-76	Washer 8	6
3	2ZT-4B-5-2-4	Paper gasket	1
4	GB6170-86	Nut M8	2
5	2Z5-4B-5-2-3	Roller supporting bracket	1
6	2Z5-4B-5-2-2-1	Roller shaft	1
7	2Z5-4B-5-2-2-2	Roller	1
8	GB276-64	Bearing 200	1
9	GB893.1-86	Collar ring 30	1
10	GB97.1-85	Washer 8	1
11	2ZT-4-1-6-2	End cover	1

- 25 -

13. Chain case(II)

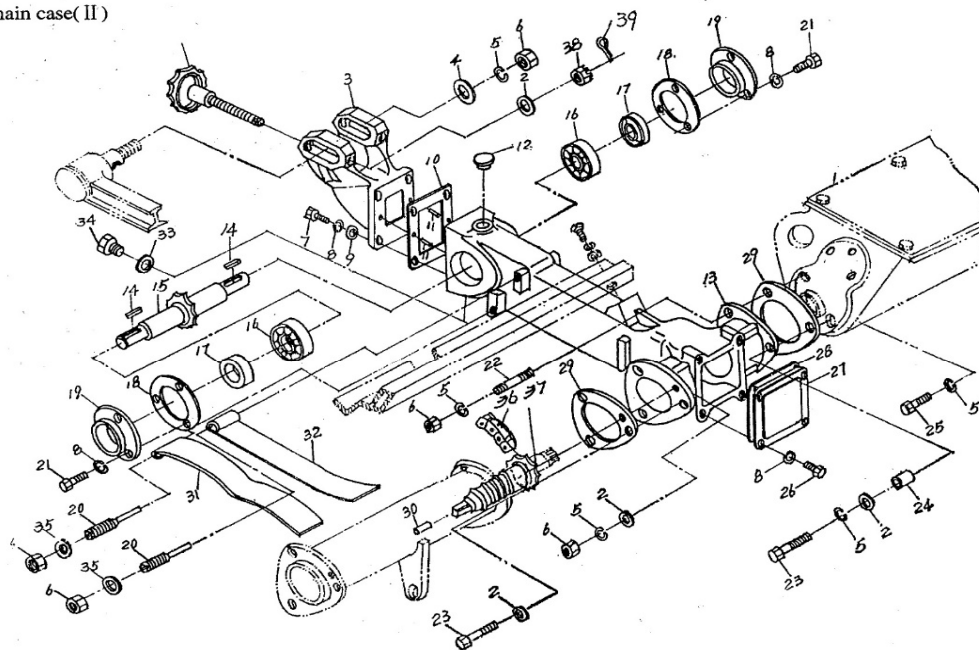


- 26 -

No.	Number of part	Name of part	Quantity
1	2ZT-4-1-6-4-00	Hand adjusting screw knob	2
2	GB848-85	Washer 8	15
3	2ZT7358-4B-1-8-1	Chain case rear cover	1
4	2ZT-4-1-6-5	Washer $\Phi 28$	2
5	GB93-76	Washer 8	9
6	GB6170-86	Nut M8	12
7	GB5783-86	Bolt M6 $\times$ 25	4
8	GB93-76	Washer 6	14
9	GB97.1-86	Washer 6	4
10	2ZT7358-4-21	Chain case rear cover paper gasket	1
11	GB119-86	Pin 4 $\times$ 10	2
12	2ZT-4-1-2-4	Lubrication oil lid	1
13	2ZT7358-4B-1-4-1	Chain case(II)	1
14	GB1096-79	Key 4 $\times$ 18	2
15	2ZT7358-4B-1-2-1	Sprocket wheel shaft weld	1
16	GB276-64	Bearing 302	2
17	HG4-692-67	Oil seal SD15 $\times$ 35 $\times$ 10	2
18	2ZT-4-1-2-6	Oil seal base paper gasket	2
19	2ZT-4-1-5-1	Oil seal base	2
20	2ZT-4-1-2-8	Pin for spring plates	2
21	GB5783-86	Bolt M6 $\times$ 16	6
22	GB900-76	Bolt GM8-M8 $\times$ 35	2
23	GB5783-86	Bolt M8 $\times$ 35	4
24	2ZT7358-4-9	Positioning tube	1
25	GB5783-86	Bolt M8 $\times$ 20	2

No.	Number of part	Name of part	Quantity
26	GB5783-86	Bolt M6 $\times$ 12	4
27	2ZT-4-1-2-14	Chain case front cover	1
28	2ZT-4-1-2-13	Chain case front cover rubber gasket	1
29	2ZT7358-4-19	Chain case paper gasket	2
30	GB119-86	Pin 6 $\times$ 16	1
31	2ZT-4-1-2-3	Lower spring plate	1
32	2ZT-4-1-2-2	Upper spring plate	1
33	ZB71-62	Oil ring 18 $\times$ 10	1
34	Q/ZB220-77	Screw plug M10 $\times$ 1	1
35	ZB71-62	Oil ring 15 $\times$ 8	2
36		Lihgt motorcycle chain	1
37	2ZT7358-4B-1-4-1	Safety clutch assembly(II)	1
38	GB6170-86	Nut M8	2
39	GB91-86	Pin 2 $\times$ 20	2

- 27 -

14. Chain case(III)

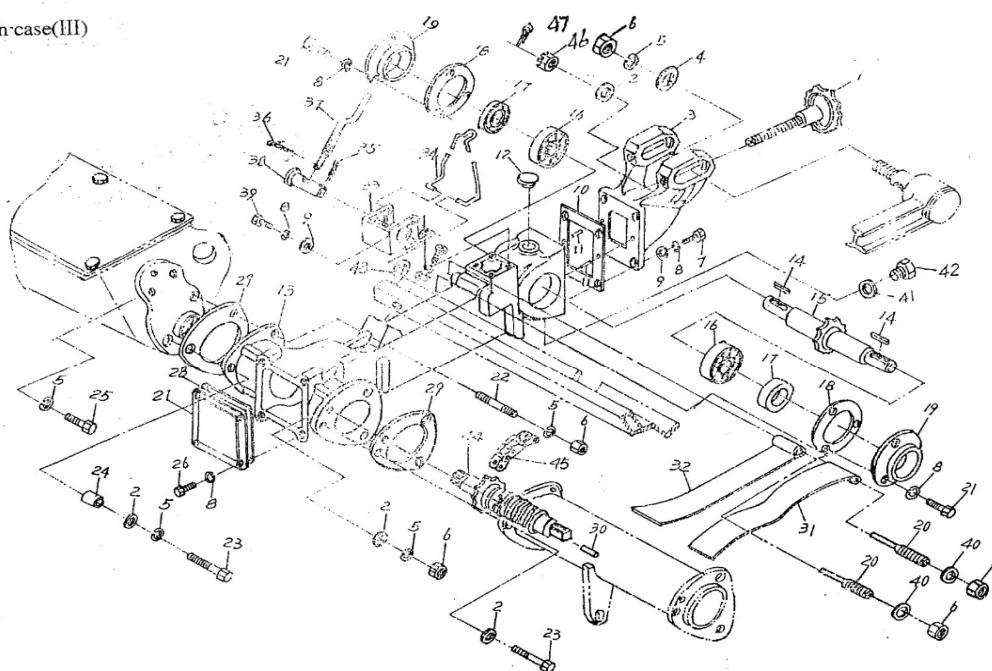


- 28 -

No.	Number of part	Name of part	Quantity	No.	Number of part	Name of part	Quantity
1	2ZT-4-1-6-4-00	Hand adjusting screw knob	2	26	GB5783-86	Bolt M6×12	4
2	GB848-85	Washer 8	15	27	2ZT-4-1-2-14	Chain case front cover	1
3	2ZT7358-4B-1-8-1	Chain case rear cover	1	28	2ZT-4-1-2-13	Chain case front cover rubber gasket	1
4	2ZT-4-1-6-5	Washer Φ 28	2	29	2ZT7558-4-19	Chain case paper gasket	2
5	GB93-76	Washer 8	9	30	GB119-86	Pin 6×16	1
6	GB6170-86	Nut M8	12	31	2ZT-4-1-2-3	Lower spring plate	1
7	GB5783-86	Bolt M6×25	4	32	2ZT-4-1-2-2	Upper spring plate	1
8	GB93-76	Washer 6	14	33	2ZT7358-6-2-00	Elevating mechanism fixing bracket weld	1
9	GB97.1-86	Washer 6	4	34	2ZT-4-5-4	Fastening steel wire	1
10	2ZT7358-4-21	Chain case rear cover paper gasket	1	35	GB91-86	Pin 3.2×35	1
11	GB119-86	Pin 4×10	2	36	GB91-86	Pin 3.2×20	1
12	2ZT-4-1-2-4	Lubrication oil lid	1	37	2ZT-4-5-1	Lifting rod	1
13	2ZT7358-4B-1-5-1	Chain case(III)	1	38	2ZT7358-6-1	Lifting nut	1
14	GB1096-79	Key 4×18	2	39	GB5783-86	Bolt M8×16	4
15	2ZT7358-4B-1-2-1	Sprocket wheel shaft weld	1	40	ZB71-62	Oil ring 15×8	2
16	GB276-64	Bearing 302	2	41	ZB71-62	Oil ring 18×10	1
17	HG4-692-67	Oil seal SD15×35×10	2	42	Q/ZB220-77	Screw plug M10×1	1
18	2ZT-4-1-2-6	Oil seal base paper gasket	2	43	GB848-76	Washer 22	1
19	2ZT-4-1-5-1	Oil seal base	2	44	2ZT7358-4B-1-5-1	Safety clutch assembly(III)	1
20	2ZT-4-1-2-8	Pin for spring plates	2	45		Light motorcycle chain	1
21	GB5783-86	Bolt M6×16	6	46	GB6170-86	Nut M8	2
22	GB900-76	Bolt CM8-M8×35	2	47	GB91-86	Pin 2×20	2
23	GB5783-86	Bolt M8×35	4				
24	2ZT7358-4-9	Positioning tube	1				
25	GB5783-86	Bolt M8×20	2				

- 29 -

15. Chain case(IV)

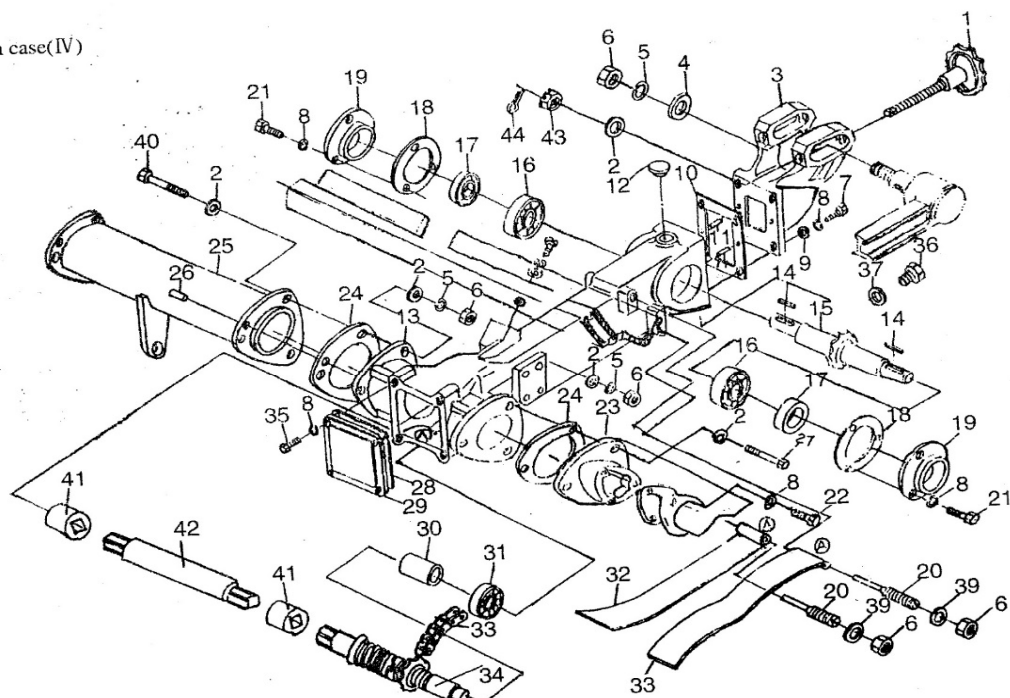


- 30 -

No.	Number of part	Name of part	Quantity
1	ZZT-4-1-6-4-00	Hand adjusting screw knob	2
2	GB848-85	Washer 8	15
3	ZZT7358-4B-1-8-1	Chain case rear cover	1
4	ZZT-4-1-6-5	Washer Φ 28	2
5	GB93-76	Washer 8	8
6	GB6170-86	Nut M8	12
7	GB5783-86	Bolt M6 $\times$ 25	4
8	GB93-76	Washer 6	17
9	GB97.1-86	Washer 6	4
10	ZZT7358-4-21	Chain case rear cover paper gasket	1
11	GB119-86	Pin 4 $\times$ 10	2
12	ZZT-4-1-2-4	Lubrication oil lid	1
13	ZZT7358-4B-1-7-1	Chain case (IV)	1
14	GB1096-79	Key 4 $\times$ 18	2
15	ZZT7358-4B-1-2-1	Sprocket wheel shaft weld	1
16	GB276-64	Bearing 302	2
17	HG4-692-67	Oil seal SD15 $\times$ 35 $\times$ 10	2
18	ZZT-4-1-2-6	Oil seal base paper gasket	2
19	ZZT-4-1-5-1	Oil seal base	2
20	ZZT-4-1-2-8	Pin for spring plate	2
21	GB5783-86	Bolt M6 $\times$ 16	6
22	GB5783-86	Bolt M6 $\times$ 20	3
23	ZZT7358-4-2-01	Chain case bearing base gasket	1
24	ZZT7358-4-19	Chain case paper gasket	2
25	ZZT7358-4B-1-6	Left joint tube weld	1

No.	Number of part	Name of part	Quantity
26	GB119-86	Pin 6 $\times$ 16	1
27	GB5782-86	Bolt M8 $\times$ 40	3
28	ZZT-4-1-2-13	Chain case front cover rubber gasket	1
29	ZZT-4-1-2-14	Chain case front cover	1
30	ZZT7358-4-2-02	Safety clutch spacer tube	1
31	GB276-64	Bearing 202	1
32	ZZT-4-1-2-2	Upper spring plate	1
33	ZZT-4-1-2-3	Lower spring plate	1
34	ZZT7358-4B-1-7-1	Safety clutch assembly(IV)	1
35	GB5783-86	Bolt M6 $\times$ 12	4
36	Q/ZB200-77	Screw plug M10 $\times$ 1	1
37	ZB71-62	Oil ring 18 $\times$ 10	1
38		Light motorcycle chain	1
39	ZB71-62	Oil ring 15 $\times$ 8	2
40	GB5783-86	Bolt M8 $\times$ 35	3
41	ZZT-4-1-3A	Bushing	2
42	ZZT7358-4-16A	Transmission shaft(III)	1
43	GB6178-86	Nut M8	2
44	GB91-86	Pin 2 $\times$ 20	2

- 31 -

16. Roller support(left)

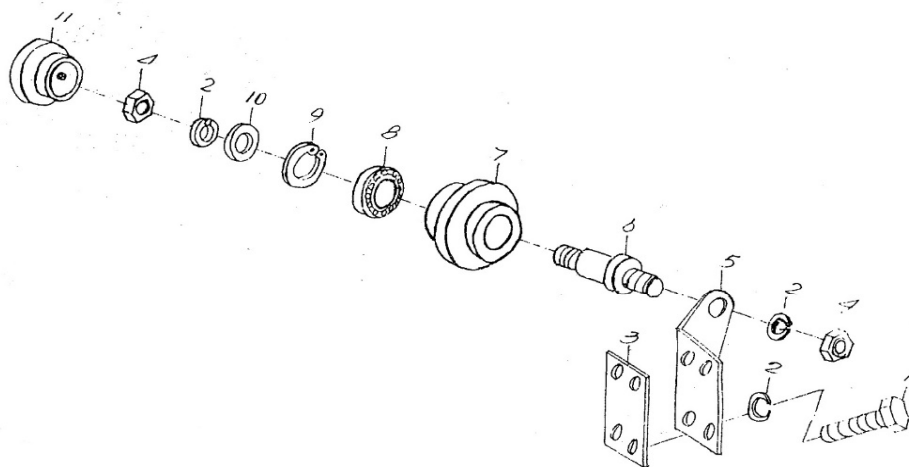


- 32 -

No.	Number of part	Name of part	Quantity
1	GB5782-86	Bolt m8×20	4
2	GB93-76	Washer 8	6
3	2ZT-4B-5-2-4	Paper gasket	1
4	GB6170-86	Nut M8	2
5	2ZT-4B-5-4-2	Roller supporting bracket	1
6	2ZT-4B-5-2-2-1	Roller shaft	1
7	2ZT-4B-5-2-2-2	Roller	1
8	GB276-64	Bearing 200	1
9	GB893.1-86	Collar ring 30	1
10	GB97.1-85	Washer 8	1
11	2ZT-4-1-6-2	End cover	1

- 33 -

17. Seedling gate

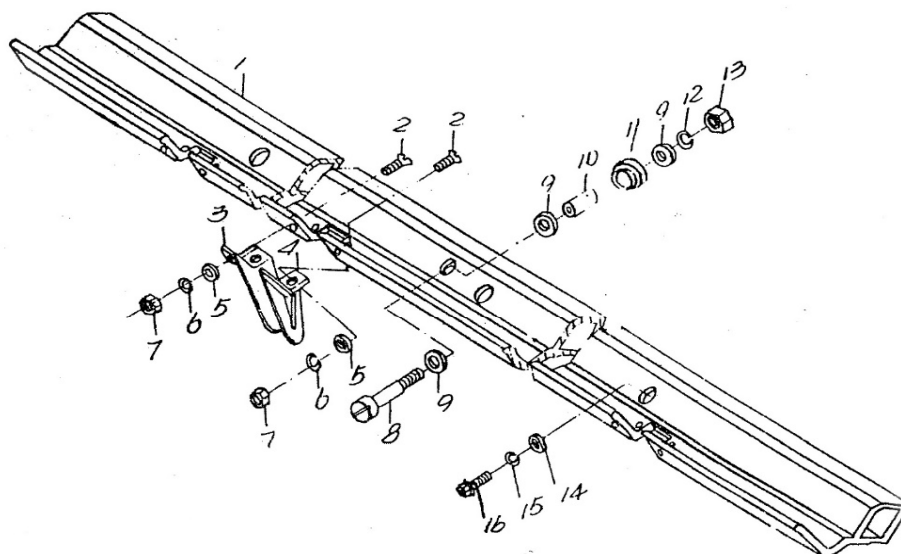


- 34 -

No.	Number of part	Name of part	Quantity
1	2ZT7358-4B-1-9-1	Seedling gate	1
2	GB68-85	Screw M4×10	32
3	2ZT-4-1-9-3-00	Seedling gate protective rubber plate(left)	8
4	2ZT-4-1-9-2-00	Seedling gate protective rubber plate(right)	8
5	GB848-85	Washer 4	32
6	GB93-76	Washer 4	32
7	GB6170-86	Nut M4	32
8	GB65-85	Screw M10×40	1
9	GB848-85	Washer 10	3
10	2ZT-4B-5-5-3	Roller sleeve	1
11	2ZT-4B-5-5-2	Roller (central)under seedling box	1
12	GB93-76	Washer 10	1
13	GB6170-86	Nut M10	1
14	GB97.1-85	Washer 8	4
15	GB93-76	Washer 8	4
16	GB70-85	Screw M8×16	4

- 35 -

18. Safety clutch(I)(II)

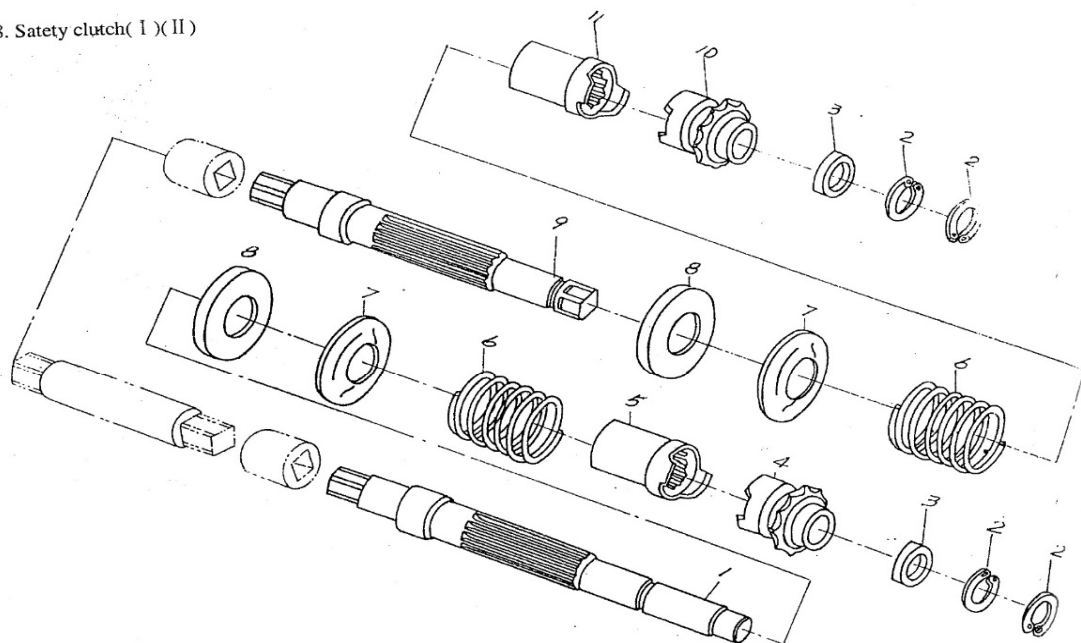


- 36 -

No.	Number of part	Name of part	Quantity
1	2ZT7358-4B-1-2-2-1	Transmission shaft(I)	1
2	GB894.1-86	Collar ring 16	4
3	2ZT7358-4-2-4-03	Safety clutch washer	2
4	2ZT-4-1-5-2-1A-00	Driven sprocket weld(left)	1
5	2ZT-4-1-5-2-2	Safety clutch jaw(left)	1
6	2ZT-4-1-2-7-5	Safety clutch spring	2
7	2ZT-4-1-2-7-6	Safety clutch spring seat	2
8	2ZT-4-1-2-7-8	Φ 20 spring hood	2
9	2ZT7358-4B-1-4-1-1	Transmission shaft(II)	1
10	2ZT-4-1-2-7-3A-00	Driven sprocket weld(right)	1
11	2ZT-4-1-2-7-4	Safety clutch jaw(right)	1

- 37 -

19. Safety clutch(III)(IV)

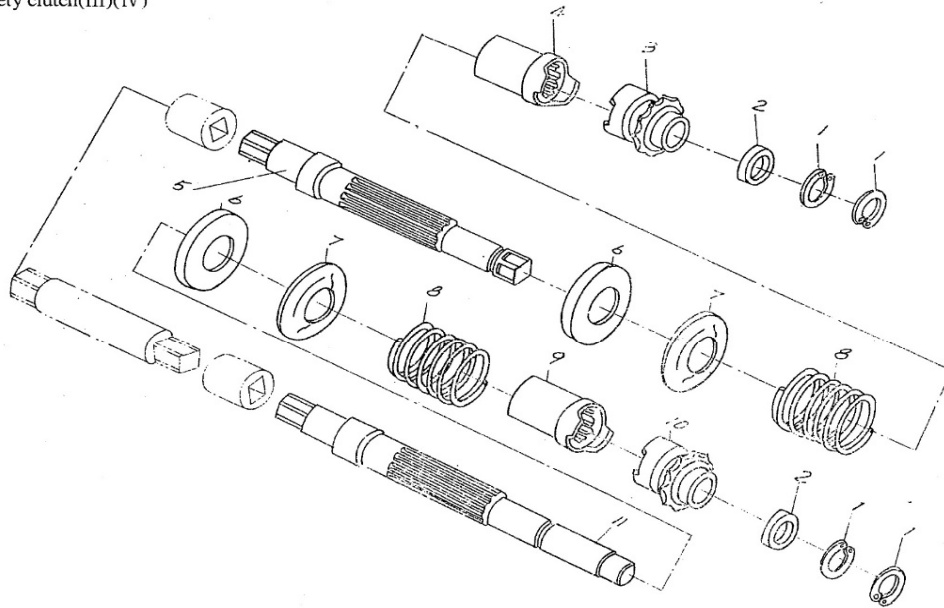


- 38 -

No.	Number of part	Name of part	Quantity
1	GB894.1-86	Collar ring 16	4
2	ZZT7358-4-2-4-03	Safety clutch washer	2
3	ZZT-4-1-5-2-1A-00	Driven sprocket weld(left)	1
4	ZZT-4-1-5-2-2	Safety clutch jaw(left)	1
5	ZZT7358-4B-1-4-1-1	Transmission shaft(II)	1
6	ZZT-4-1-2-7-8	Φ20 spring hood	2
7	ZZT-4-1-2-7-6	Safety clutch spring	2
8	ZZT-4-1-2-7-5	Safety clutch spring seat	2
9	ZZT-4-1-2-7-4	Safety ctutch jaw(right)	1
10	ZZT-4-1-2-7-3A-00	Driven sprocket weld(right)	1
11	ZZT7358-4B-1-2-2-1	Transmission shaft(I)	1

- 39 -

20. Separating and transplanting mechanism(left)

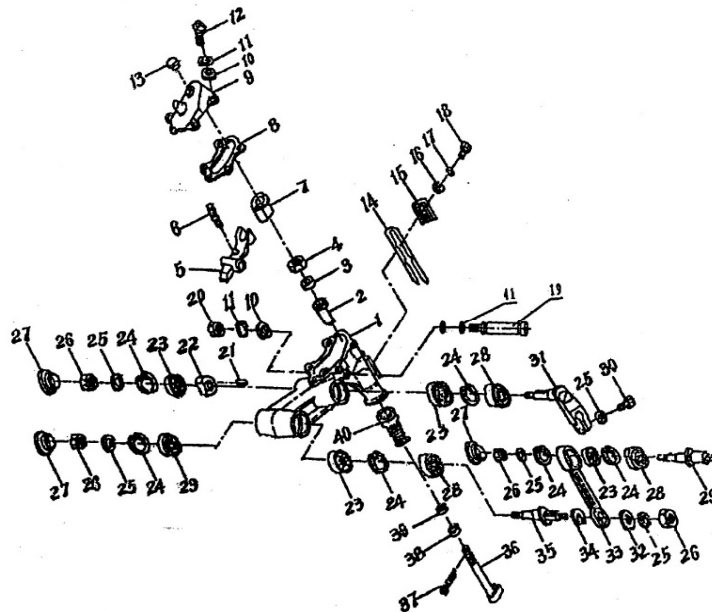


- 40 -

No.	Number of part	Name of part	Quantity
1	2ZT-4-2-1	Transplanter arm (left)	1
2	2ZT-4-2-10	Guide sleeve	1
3	2ZT-4-2-9	Cushion rubber shim	1
4	2ZT-4-2-8	Nut	1
5	2ZT-4-2-6	Poker fork (left)	1
6	2ZT-4-2-4	Seedling pusher spring	1
7	2ZT-4-2-7	Directional piece	1
8	2ZT-4-2-3	Oil resistant rubber gasket	1
9	2ZT-4-2-5	Transplanter arm cover (left)	1
10	GB848-86	Washer 6	6
11	GB93-76	Washer 6	6
12	GB818-85	Screw M6×20	5
13	2ZT-4-1-2-4	Oil hole lid	1
14	2ZT-4-2-16	Separating needle	1
15	2ZT-4-2-11	Pressure cover	1
16	GB848-85	Washer 5	2
17	GB93-76	Washer 5	2
18	GB818-85	Screw M5×20	2
19	2ZT-4-2-17	Pin shaft	1
20	GB6170-86	Nut M6	1
21	GB1096-79	Key 4×10	1
22	2ZT-4-2-2	Seedling pushing cam	1
23	GB276-64	Bearing 200	5
24	GB893.1-86	Collar ring 30	6
25	GB93-76	Washer 8	5

No.	Number of part	Name of part	Quantity
26	GB6170-86	Nut M8	4
27	2ZT-4-1-6-2	End cover	3
28	2ZT-4-1-6-7	Oil seal 15×30×8	3
29	2ZT-4-1-6-6	Rocker arm shaft	1
30	GB5782-86	Bolt M8×28	1
31	2ZT-4-2-18	Crank (left)	1
32	GB96-85	Washer 8	1
33	2ZT-4-1-6-3	Rocker arm	1
34	2ZT-4-3	Split shim	1 group
35	2ZT-4-2-19	Connecting rod shaft	1
36	2ZT-4-2-15-00	Seedling pusher weld	1
37	GB91-86	Pin 2.5×18	1
38	2ZT-4-2-13	Dirt-preventive oil seal	1
39	2ZT-4-2-12	Skeleton oil seal	1
40	2ZT-4-2-14	Protective hood	1
41	GB3452.1-82	Model O oil seal ring 6.9×1.5	2

- 41 -

21. Separating and transplanting mechanism(right)

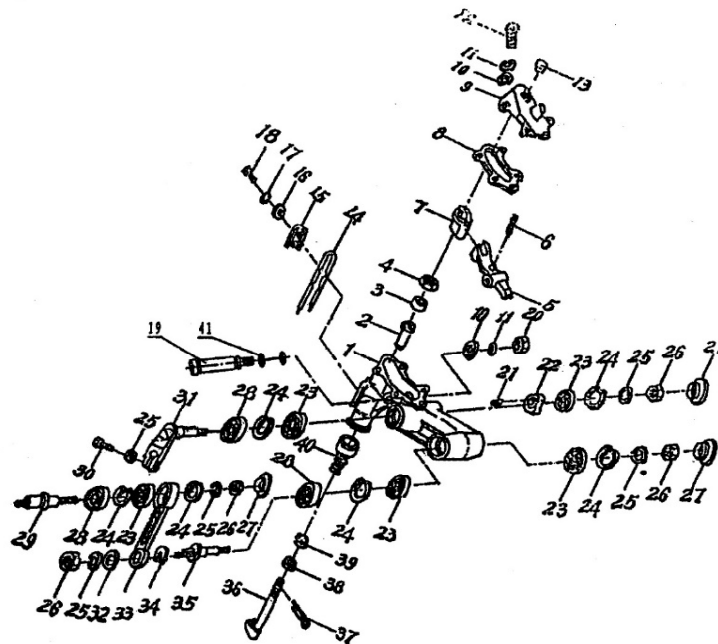


- 42 -

No.	Number of part	Name of part	Quantity	No.	Number of part	Name of part	Quantity
1	2ZT-4-41	Transplanter arm (right)	1	26	GB6170-86	Nut M8	4
2	2ZT-4-2-10	Guide sleeve	1	27	2ZT-4-1-6-2	End cover	3
3	2ZT-4-2-9	Cushion rubber shim	1	28	2ZT-4-1-6-7	Oil seal 15×30×8	3
4	2ZT-4-2-8	Nut	1	29	2ZT-4-1-6-6	Rocker arm shaft	1
5	2ZT-4-4-3	Poker fork (right)	1	30	GB5782-86	Bolt M8×28	1
6	2ZT-4-2-4	Seedling pusher spring	1	31	2ZT-4-4-4	Crank (right)	1
7	2ZT-4-2-7	Directional piece	1	32	GB96-85	Washer 8	1
8	2ZT-4-2-3	Oil resistant rubber gasket	1	33	2ZT-4-1-6-3	Rocker arm	1
9	2ZT-4-4-2	Transplanter arm cover (right)	1	34	2ZT-4-3	Split shim	1group
10	GB848-86	Washer 6	6	35	2ZT-4-2-19	Connecting rod shaft	1
11	GB93-76	Washer 6	6	36	2ZT-4-2-15-00	Seedling pusher weld	1
12	GB818-85	Screw M6×20	5	37	GB91-86	Pin 2.5×18	1
13	2ZT-4-1-2-4	Oil hole lid	1	38	2ZT-4-2-13	Dirt-preventive oil seal	1
14	2ZT-4-2-16	Separating needle	1	39	2ZT-4-2-12	Skeleton oil seal	1
15	2ZT-4-2-11	Pressure cover	1	40	2ZT-4-2-14	Protective hood	1
16	GB848-85	Washer 5	2	41	GB3452.1-82	Model 0 oil seal ring 6.9×1.5	2
17	GB93-76	Washer 5	2				
18	GB818-85	Screw M5×20	2				
19	2ZT-4-2-17	Pin shaft	1				
20	GB6170-86	Nut M6	1				
21	GB1096-79	Key 4×10	1				
22	2ZT-4-2-2	Seedling pushing cam	1				
23	GB276-64	Bearing 200	5				
24	GB893.1-86	Collar ring 30	6				
25	GB93-76	Washer 8	5				

- 43 -

22. Seedling box

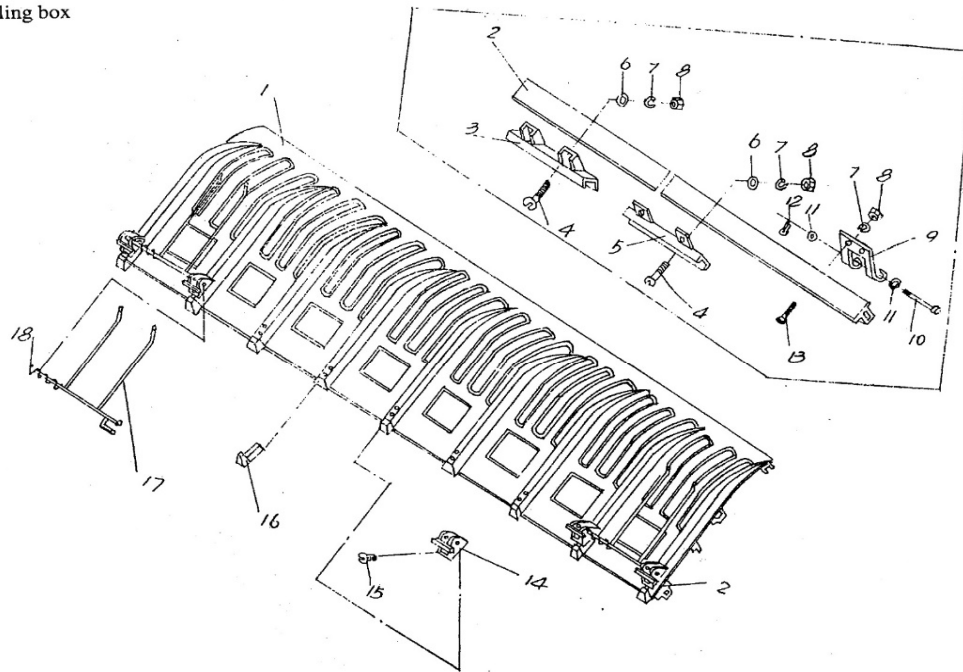


- 44 -

No.	Number of part	Name of part	Quantity
1	2ZT7538-4B-2	Seedling box assembly	1
2	2ZT738-4B-2-3	Lower girder	1
3	2ZT7358-4B-2-2	Guide rail weld(side)	2
4	GB68-85	Screw M6×25	6
5	2ZT7358-4B-2-3	Guide rail weld (center)	1
6	GB848-85	Washer 6	10
7	GB93-76	Washer 6	26
8	GB6170-86	Nut M6	26
9	2ZT-4B-4-6	Driving arm connecting plate	2
10	GB882-86	Pin shaft B8×65	2
11	GB96-85	Washer 8	4
12	GB91-86	Pin 3.2×20	2
13	GB5782-82	Bolt M6×22	4
14	2ZT-4B-4-4-00	Seedling pressing rod trunnion weld	9
15	GB845-85	Self tap screw ST4.8×25-CH	18
16	2ZT-4-6-5	Partition plate head	9
17	2ZT7358-4B-2-5	Seedling pressing rod weld	8
18	2ZT-4B-4-5	Seedling pressing rod spring	8

- 45 -

23. Longitudinal seedling delivering assembly(I)

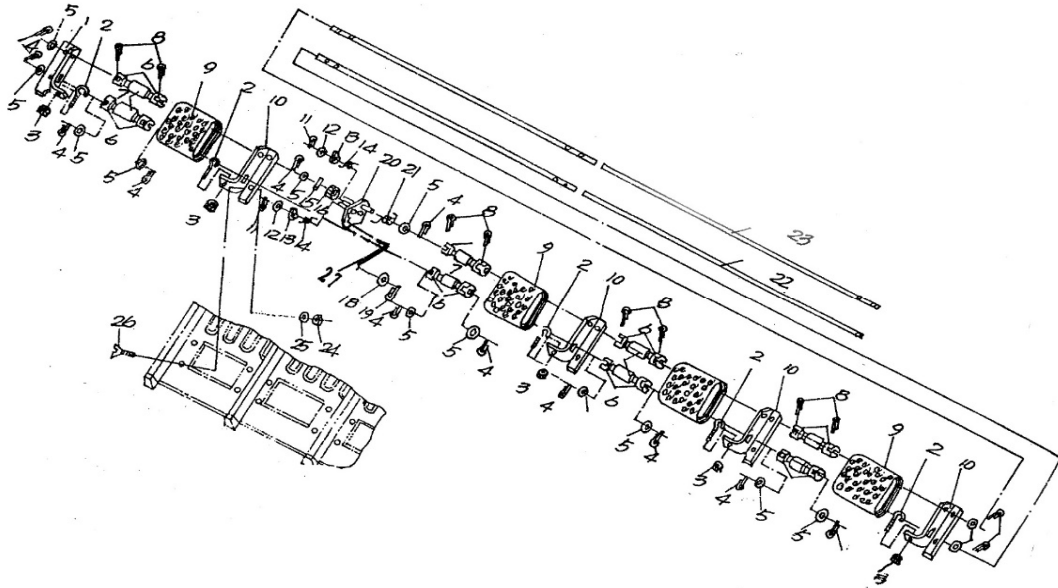


- 46 -

No.	Number of part	Name of part	Quantity
1	2ZT-4B-4-7-1	Seedling delivery roller axle bracket(I)	4
2	2ZT-4B-4-7-5	Adjusting screw rod	5
3	GB6170-86	Nut M5	5
4	GB91-86	Pin 2.5×16	14
5	GB97.1-85	Washer 10	14
6	2ZT-4B-4-7-9-2	Belt pulley plug head	16
7	2ZT7358-4B-2-1-1-1	Belt pulley connecting tube	8
8	GB91-86	Pin 3.2×24	8
9	2ZT7358-4B-2-1-3	Seedling delivery belt	4
10	2ZT-4-6-17-9	Seedling delivery roller	1
11	GB97.1-85	Washer 6	1
12	2ZT-4B-4-7-7	Big torsional spring(I)	1
13	2ZT-4B-4-7-6A-00	Ratchet pedestal welded riveted assmby(I)	1
14	2ZT-4B-4-7-17-8	Torsional spring(I)	2
15	2ZT-4B-4-7-17-4	Ratchet	2
16	GB848-85	Washer 6	2
17	GB91-86	Pin 1.6×12	2
18	2ZT-4-6-17-5	Ratchet wheel	1
19	2ZT-4-6-17-12	Steel wire pin	1
20	GB91-86	Pin 2×12	1
21	2ZT-4B-4-7-10	Seedling delivery roller axle bracket(II)	1
22	2ZT7358-4B-2-1-1	Longitudinal seedling delivery axle(I)	1
23	2ZT7358-4B-2-1-2	Longitudinal seedling delivery axle(II)	1
24	GB6170-86	Nut M6	10
25	GB93-76	Washer 6	10

No.	Number of part	Name of part	Quantity
26	GB68-85	Screw M6×18	10
27	2ZT-4B-5-1-3-01	Rod	1

- 47 -

24. Longitudinal seedling delivering assembly(II)

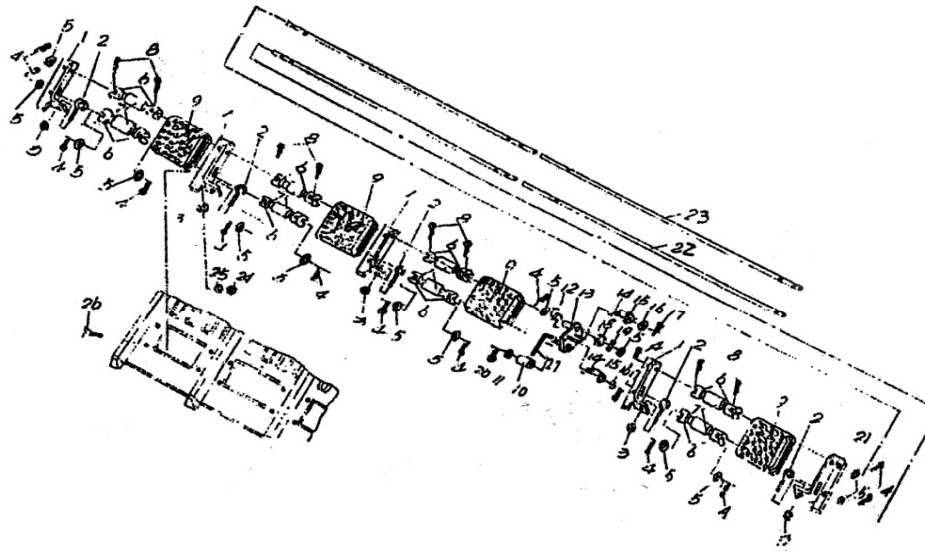


- 48 -

No.	Number of part	Name of part	Quantity
1	2ZT-4B-4-7-1	Seedling delivery roller axle bracket(I)	1
2	2ZT-4B-4-7-5	Adjusting screw rod	5
3	GB6170-86	Nut M5	5
4	GB91-86	Pin 2.5×16	14
5	GB97.1-85	Washer 10	14
6	2ZT-4B-4-7-9-2	Belt pulley plug head	16
7	2ZT7358-4B-2-1-1-1	Belt pulley connecting tube	8
8	GB91-86	Pin 3.2×24	8
9	2ZT7358-4B-2-1-3	Seedling delivery belt	4
10	2ZT-4B-4-4-7-10	Seedling delivery roller axle bracket(II)	4
11	GB91-86	Pin 1.6×12	2
12	GB848-85	Washer 6	2
13	2ZT-4-6-17-4	Ratchet	2
14	2ZT-4B-4-8-3	Torsional spring(II)	2
15	2ZT-4-6-17-12	Steel wire pin	1
16	2ZT-4-6-17-5	Ratchet wheel	1
17	2ZT-4-6-17-9	Seedling delivery roller	1
18	GB97.1-85	Washer 6	1
19	GB91-86	Pin 2×12	1
20	2ZT-4B-4-8-1A-00	Ratchet pedestal welded riveted assmbly(II)	1
21	2ZT-4B-4-8-2	Big torsional spring	1
22	2ZT7358-4B-2-1-1	Longitudinal seedling delivery axle(I)	1
23	2ZT7358-4B-2-1-2	Longitudinal seedling delivery axle(II)	1
24	GB6170-86	Nut M6	10
25	GB93-76	Washer 6	10

- 49 -

No.	Number of part	Name of part	Quantity
26	GB68-86	Screw M6×18	10
27	2ZT-4B-5-1-3-01	Rod	1

25. Supporting tube

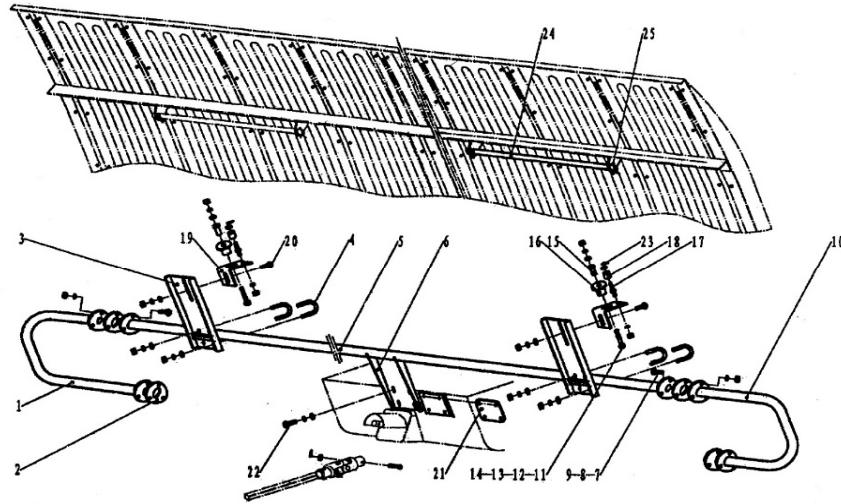


- 50 -

No.	Number of part	Name of part	Quantity
1	2ZT-4B-2-1-0	Supporting arm bent tube weld (right)	1
2	2ZT-4-9-2	Rubber gasket	4
3	2ZT-4B-1-6A	Roller support	2
4	2ZT-4B-1-7	"U" bolt	4
5	2ZT-2-2-0	Supporting arm straight tube weld	1
6	2ZT-4-9-1-1	Tube support	1
7	GB5783-86	Bolt M6×25	6
8	GB859-1987	Washer 6	16
9	GB6170-86	Nut M6	6
10	2ZT-4B-2-1-0	Supporting arm bent tube weld (left)	1
11	GB5782-86	Bolt M8×45	2
12	Gn93-87	Washer shim 8	18
13	GN859-1987	Washer 8	14
14	GB6170-86	Washer M8	14
15	2ZT-4B-1-5	Shaft sieve	2
16	2ZT-4B-1-4	Roller	2
17	2ZT-4B-1-3	Pin Shaft	2
18	2ZT-4B-1-2	Sleeve	2
19	2ZT-4B-1-1	"L" plate	2
20	GB5783-86	Bolt M8×20	2
21	2ZT-4B-3	Supporting arm rubber	1
22	GB5783-86	Bolt M6×20	10
23	GB93-87	Washer shim 6	4
24	GB91-86	Pin 2×14	2
25	2ZT-4B-1-8	Upper roller guide rod	2
26	GB91-86	Pin 3×20	4

- 51 -

26. Tail wheel

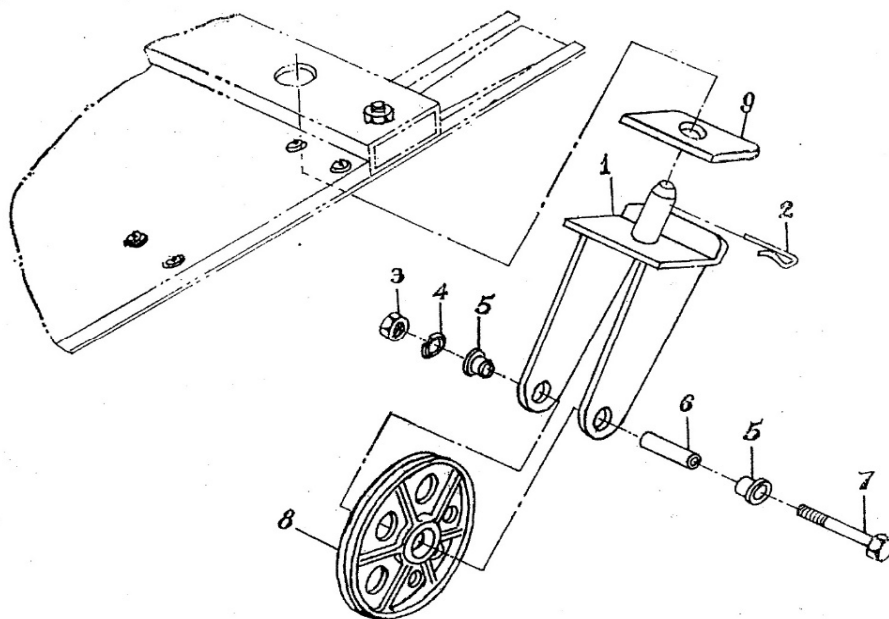


- 52 -

No.	Number of part	Name of part	Quantity
1	2ZT-5-1-00	Tail wheel support weld	1
2	2ZT-13	Tail wheel pin	1
3	GB6170-86	Nut M14	1
4	GB93-76	Washer 14	1
5	2ZT-5-3	Tail wheel bushing	2
6	2ZT-5-4A	Tail wheel axle bushing	1
7	GB5782-86	Bolt M14x90	1
8	2ZT-5-2-00A	Tail wheel combination	1
9	2ZT-5-5	Tail wheel cushion pad	1

- 53 -

27. Universal joint assembly

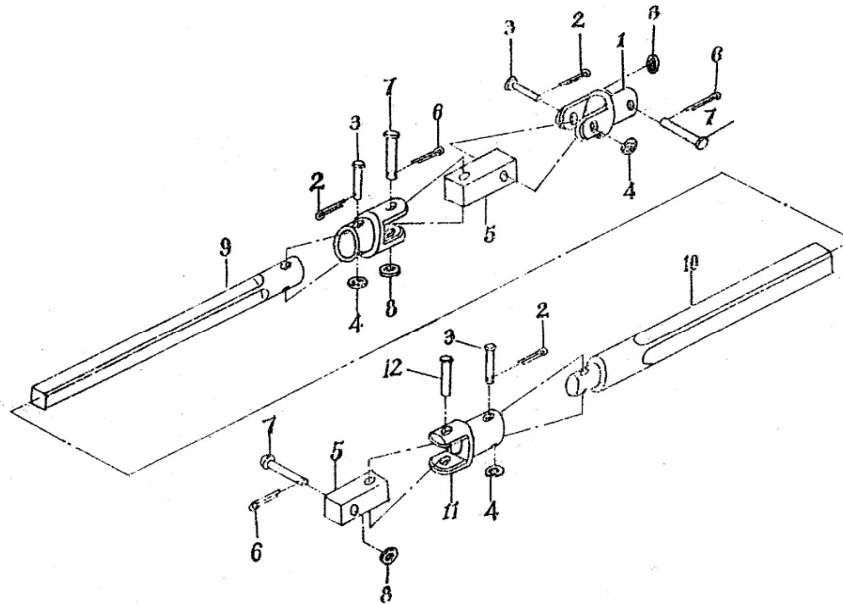


- 54 -

No.	Number of part	Name of part	Quantity
1	2ZT-6-1	Universal joint(I)	1
2	GB91-86	Pin 2×16	3
3	GB882-86	Pin shaft B6×35	3
4	GB97.1-85	Washer 6	3
5	2ZT-6-5	Universal joint square block	2
6	GB91-86	Pin 3×20	3
7	GB882-86	Pin shaft B8×48	3
8	GB97.1-86	Whsher 8	3
9	2ZT-6-2	Square shaft	1
10	2ZT-6B-1-0	Square circular shaftweld	1
11	2ZT-6-4	Universal joint(II)	2
12	GB863.1-86	Rivet 8×48	1

- 55 -

28. Earth bank crosser

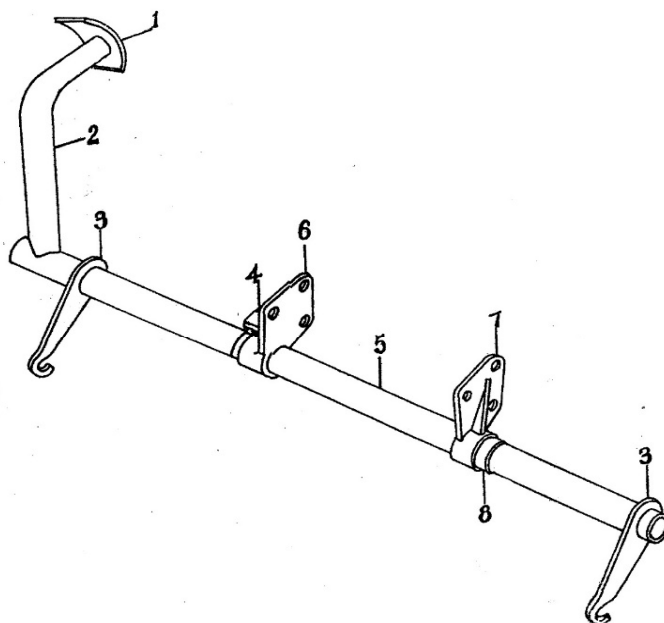


- 56 -

No.	Number of part	Name of part	Quantity
1	2ZT-8-1-5	Foot pedal	1
2	2ZT-8-1-4	Pedal arm	1
3	2ZT-8-1-3	Hang up hook	2
4	2ZT-8-1-2	Limit block	1
5	2ZT-8-1-1	Pedal arm shaft	1
6	2ZT-8-2	Bank crosser right trestle	1
7	2ZT-8-3	Bank crosser left trestle	1
8	2ZT-8-4	Collar	1

- 57 -

29. Hand throttle switch assembly

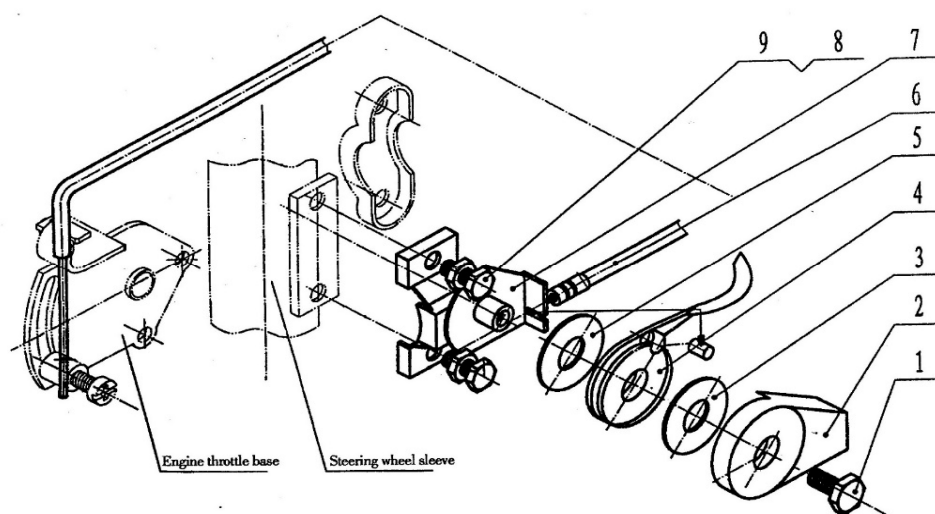


- 58 -

No.	Number of part	Name of part	Quantity
1	2ZT-9-001	Bolt M6×16	1
2	2ZT-9-002	Hand throttle cover	1
3	2ZT-9-003	Plate spring	1
4	2ZT-9-004	Throttle switch	1
5	2ZT-9-005	Anti-friction washer	1
6	2ZT-9-006	Throttle rod	1
7	2ZT-9-007	Throttle base bracket	1
8	GB5781-2000	Bolt M6×20	2
9	GB/T6170-2000	Nut M6	2

- 59 -

30. Belt cover assembly

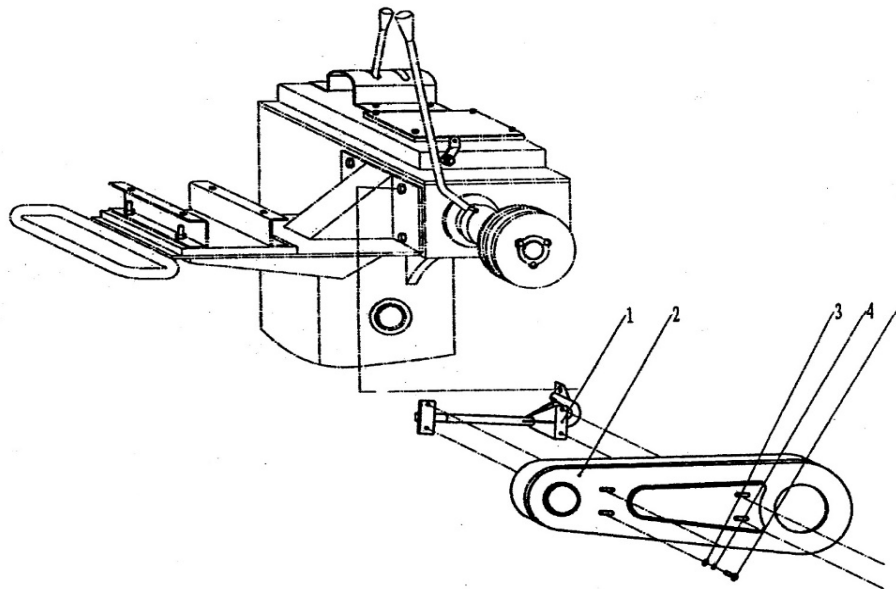

- 60 -

No.	Number of part	Name of part	Quantity
1	2ZT-10-3-00A	Belt cover support(II)	1
2	2ZT-10-1-00A	Belt cover	1
3	GB93-87	Washer 6	4
4	GB859-1987	Washer 6	4
5	GB5783-86	Belt M6×20	4

- 61 -

31. Accompanying tools

