




1	Output shaft		
S. No	KK-No	KK-Name	Qty
1	B1-1	Output shaft seat	
2	B1-2	Oil seal 30x45x10	2
3	B1-3	Bearing 6206	2
4	B1-4	Ring mat 31x38x5	
5	B1-5	Paper mat	
6	B1-6	Output shaft(Right)	
	B1-6-1	Output shaft(Left)	
7	B1-7	Gear 62 teeth	
8	B1-8	Bearing 198905	1
9	B1-9	Bolt M8x25	6
10	B1-10	Spring washer M8	6

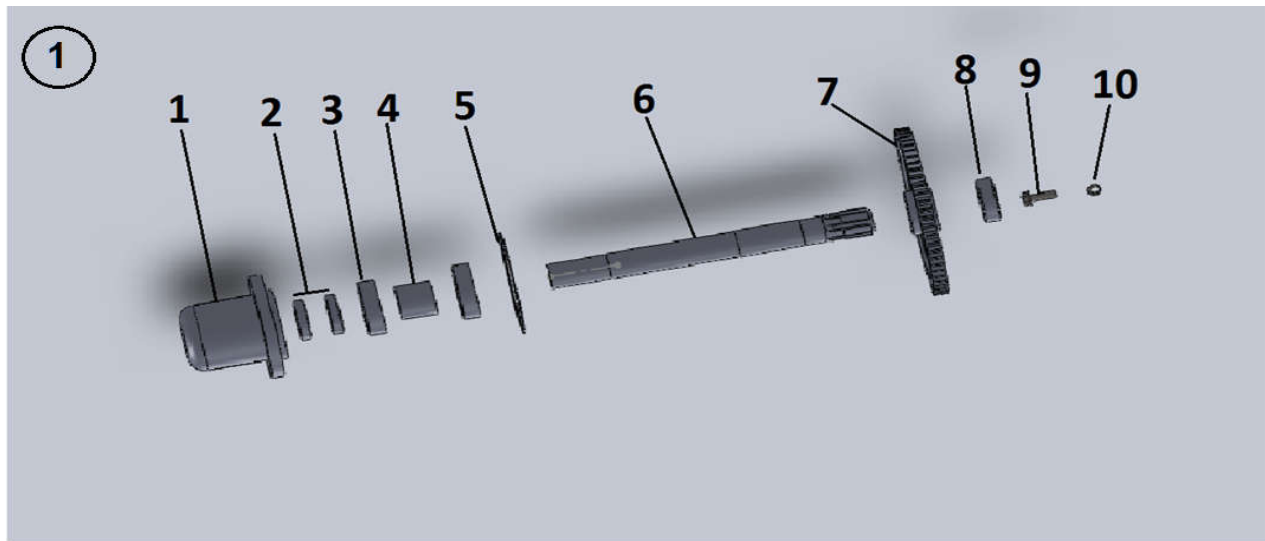


2		Steering shaft	
S. No		Parts Name	Qty
1	B2-1	Steering shaft seat	2
2	B2-2	Bearing 6304	2
3	B2-3	Spring 28x32x3	2
4	B2-4	Steering gear	2
5	B2-5	Steering shaft	1
6	B2-6	Middle gear for steering 52	1
7	B2-7	Steering seat paper mat	2
8	B2-8	Bolt M8x25	6
9	B2-9	Bolt M10x30	1
10	B2-10	Bolt M10x35	1
11	B2-11	Bolt M10	2
12	B2-12	Ring 23x15	1

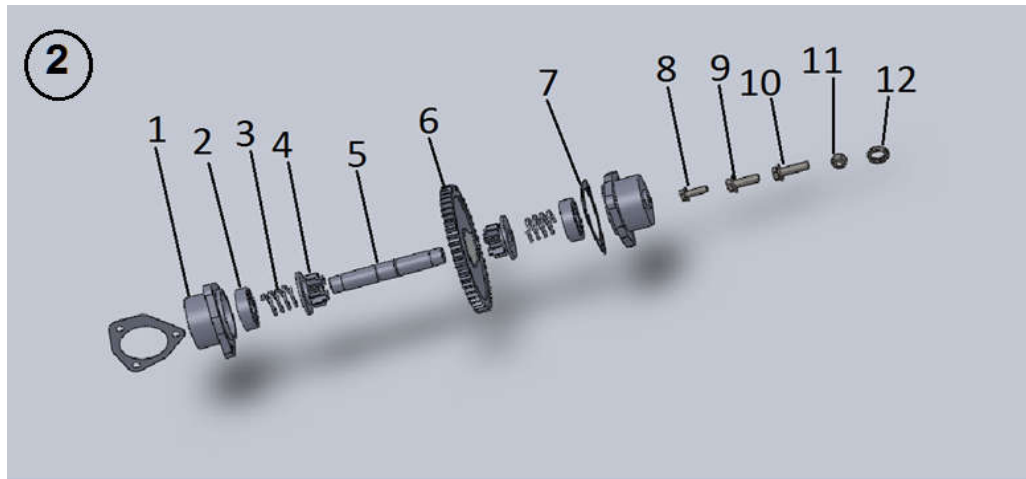


3		Gear shifting shaft	
S. No		Parts Name	Qty
1	B3-1	Main shaft bearing seat	2
2	B3-2	Bearing 6304	1
3	B3-3	Gear shifting shaft	1
4	B3-4	Gear shifting shunt-wound gear	1
5	B3-5	Bearing 6205	1
6	B3-6	Oil seal 25x45x10	1
7	B3-7	Bolt M8x25	6
8	B3-8	Spring washer M8	4
9	B3-9	Bolt M8x20	1
10	B3-10	Flat washer M8	1
11	B3-11	Flat key 6x6x20	1
12	B3-12	Paper mat	2

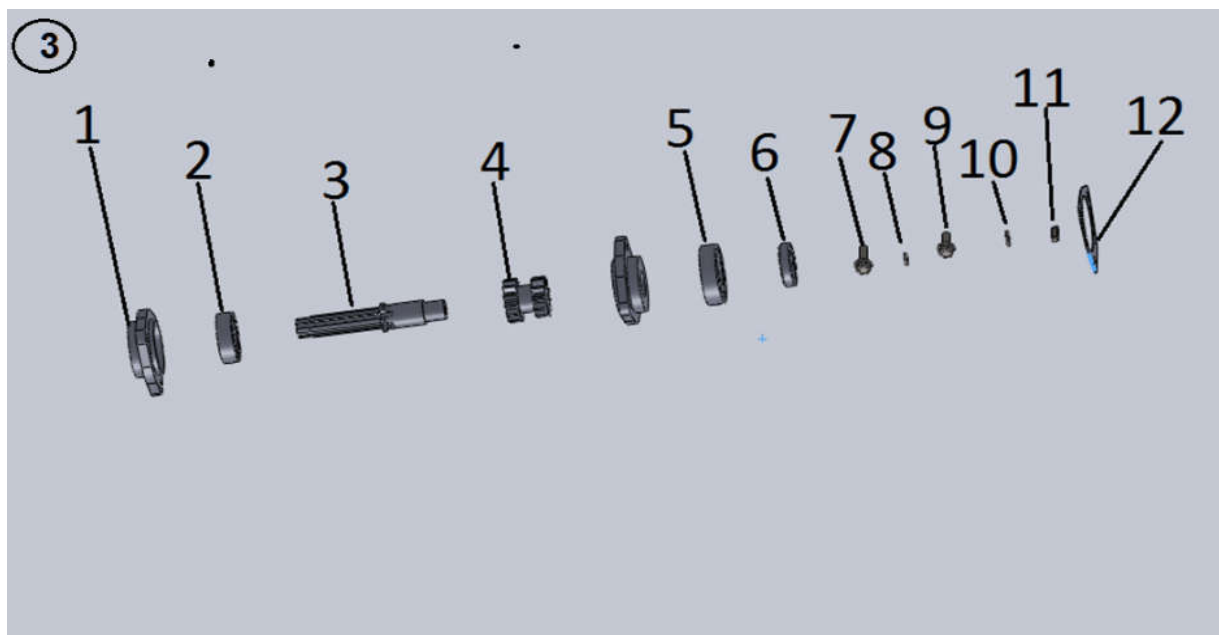


4		Reverse gear shaft	
S. No		Parts Name	Qty
1	B4-1	Reverse gear shaft	1
2	B4-2	Reverse gear tooth	1

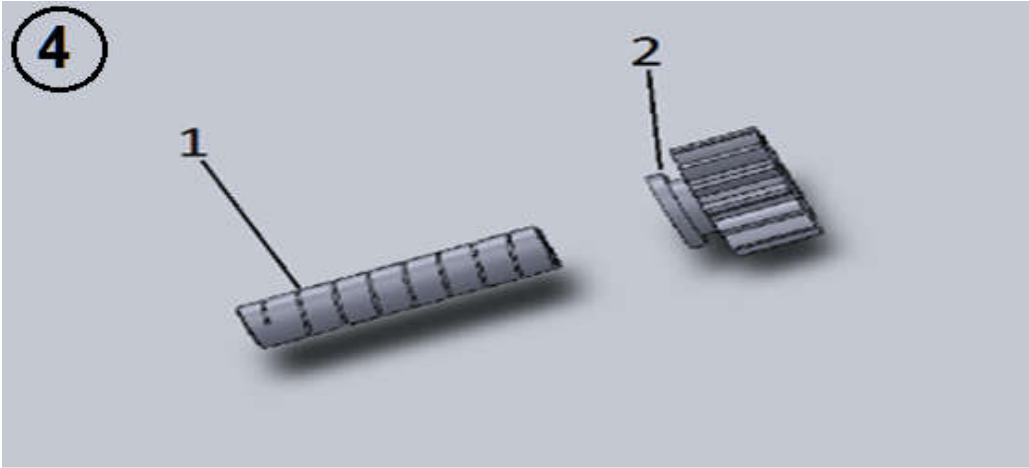


5		Reverse gear shifting fork	
S. No		Parts Name	Qty
1	B5-1	Shifting fork ball M8	1
2	B5-2	Shifting fork spring 8x17x1	1
3	B5-3	Reverse gear shifting fork	1
4	B5-4	Reverse gear shifting fork shaft	1
5	B5-5	Bolt M8x16	2
6	B5-6	Spring washer M8	2
7	B5-7	Flat washer M8	2

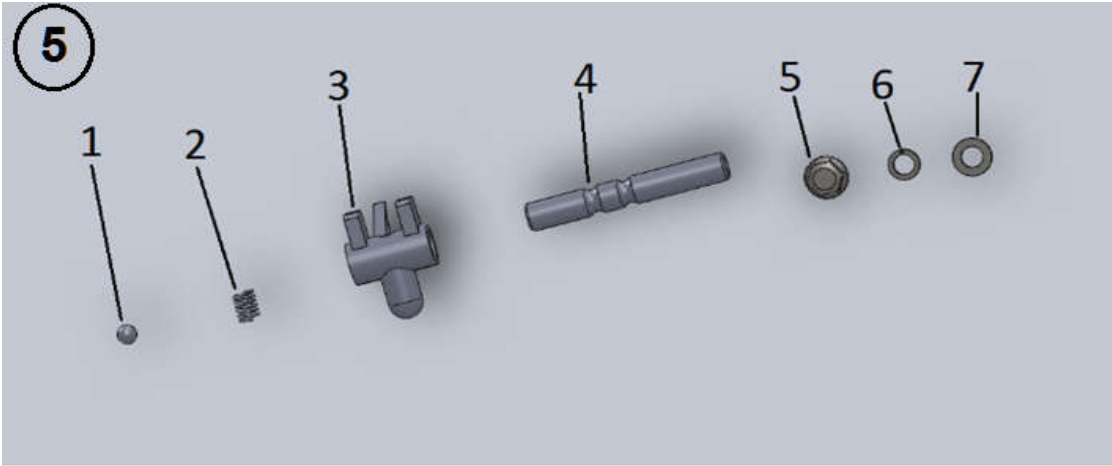


6		Gear shift shifting fork assy	
S. No		Parts Name	Qty
1	B6-1	Gear shift shifting fork shaft	1
2	B6-2	Gear shift shifting fork	1
3	B6-3	Shifting fork spring 8x17x1	1
4	B6-4	Shifting fork ball 8	1

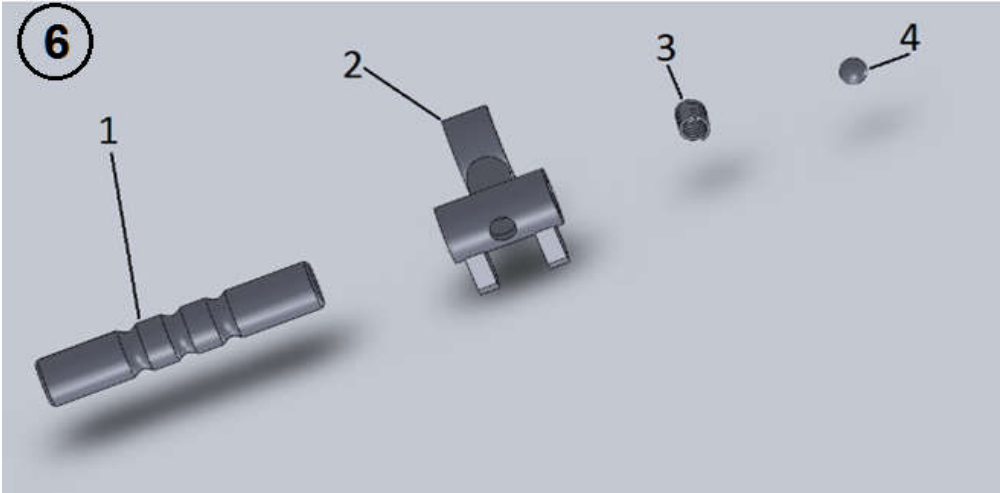


7		Steering shifting fork assy	
S. No		Parts Name	Qty
1	B7-1	Steering bush	
2	B7-2	Steering arm	
3	B7-3	Steering shifting fork	
4	B7-4	O-ring 13x10x2	4
5	B7-5	Steering paper mat	
6	B7-6	Reel bolt M6x20	6
7	B7-7	Nut M10	2

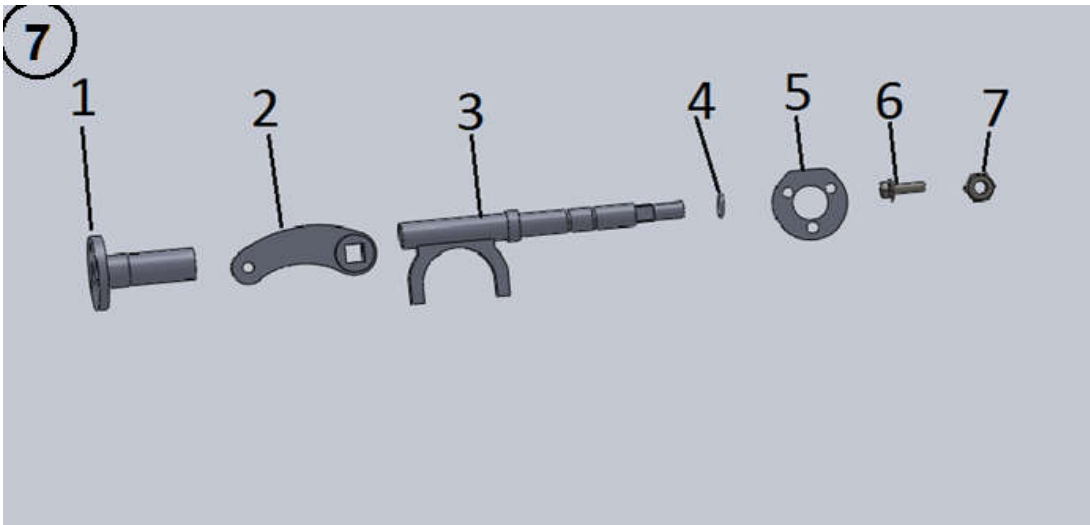

8		Stand pipe assy	
S. No		Parts Name	Qty
1	B8-1	Paper mat(main shaft bearing seat)	1
2	B8-2	Stand pipe	1
3	B8-3	Ball head hold-down plate A	1
4	B8-4	Rubber dust cover	1
5	B8-5	Ball head hold-down plate B	1
6	B8-6	Ball head gear shifting rod	1
7	B8-7	Bolt M6x16	6
8	B8-8	Bolt M6x25	4

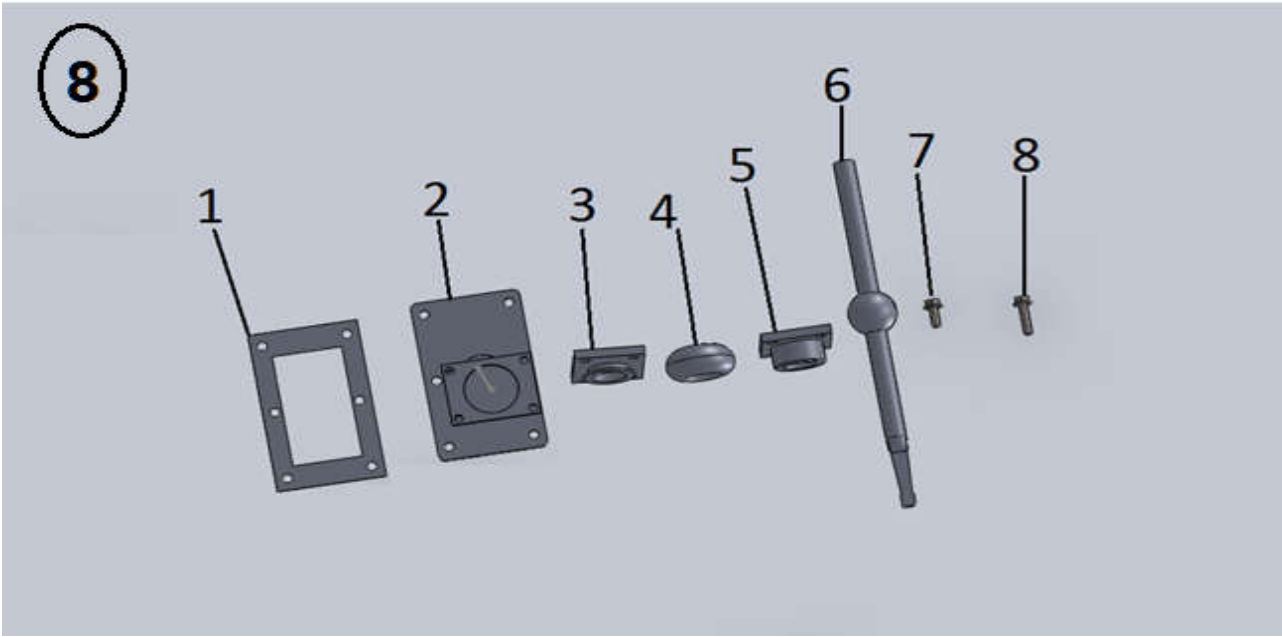


9		Gear shifting rod Assy	
S. No		Parts Name	Qty
1	B9-1	Gear shifting rod sleeve	1
2	B9-2	Gear indicator	1
3	B9-3	Gear shifting straight rod	1
4	B9-4	Gear shifting rod handle ball	1
5	B9-5	Bolt M8x25	1
6	B9-6	Nut M8	1
7	B9-7	Bolt M6x12	4
8	B9-8	Self-lock nut M6	4

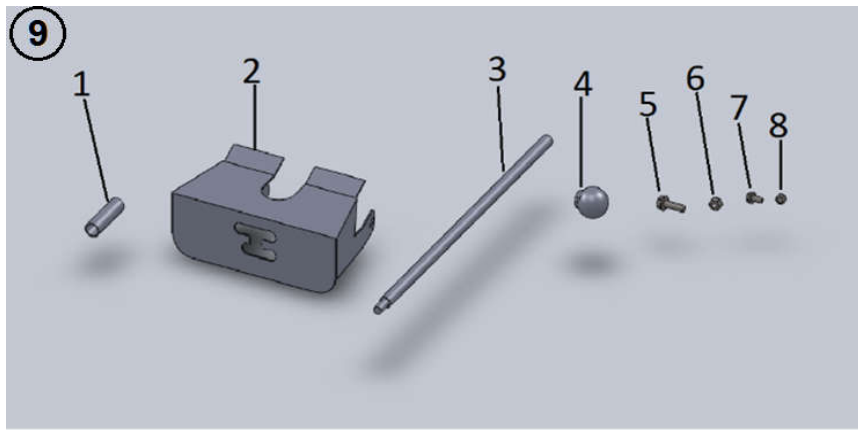



10		Clutch shaft assy	
S. No		Parts Name	Qty
1	B10-1	Clutch Assy	1
2	B10-2	Thrust bearing 688808	1
3	B10-3	Clutch separator	1
4	B10-4	Buy # B10-6	1
5	B10-5	Bearing 6205	1
6	B10-6	Clutch seat	1
7	B10-7	Cutting table chain wheel 20 Teeth	1
8	B10-8	Spherical bearing with seat UC 204	1
9	B10-9	Input chain wheel 16 Teeth	1
10	B10-10	Clutch shaft	1
11	B10-11	Bolt M10x30	2
12	B10-12	Spring washer M10	2
13	B10-13	Flat washer M10	2
14	B10-14	Nut M10	2
15	B10-15	Bolt M8x25	3
16	B10-16	Spring washer M8	3
17	B10-17	Nut M8	3
18	B10-18	Bolt M6x20	1
19	B10-19	Nut M6	1
20	B10-20	Flat key 6x6x30	1
21	B10-21	Flat key 6x6x20	1
22	B10-22	Bolt M8x20	1
23	B10-23	Spring washer M8	1
24	B10-24	Flat washer M8	1
25	B10-25	Clutch Plate	2
26	B10-26	Cover Clutch Housing	1
27	B10-27	Clutch Housing	1
28	B10-28	Dust Cover Clutch	1
29	B10-29	Pressure Plate-1	1
30	B10-30	Clutch Spring	3
31	B10-31	Pressure Plate-2	1

32	B10-32	Eye Bolt-Clutch	3
33	B10-33	Finger -Clutch	3
34	B10-34	Pin for Finger-Clutch	3
35	B10-35	Split pin	3

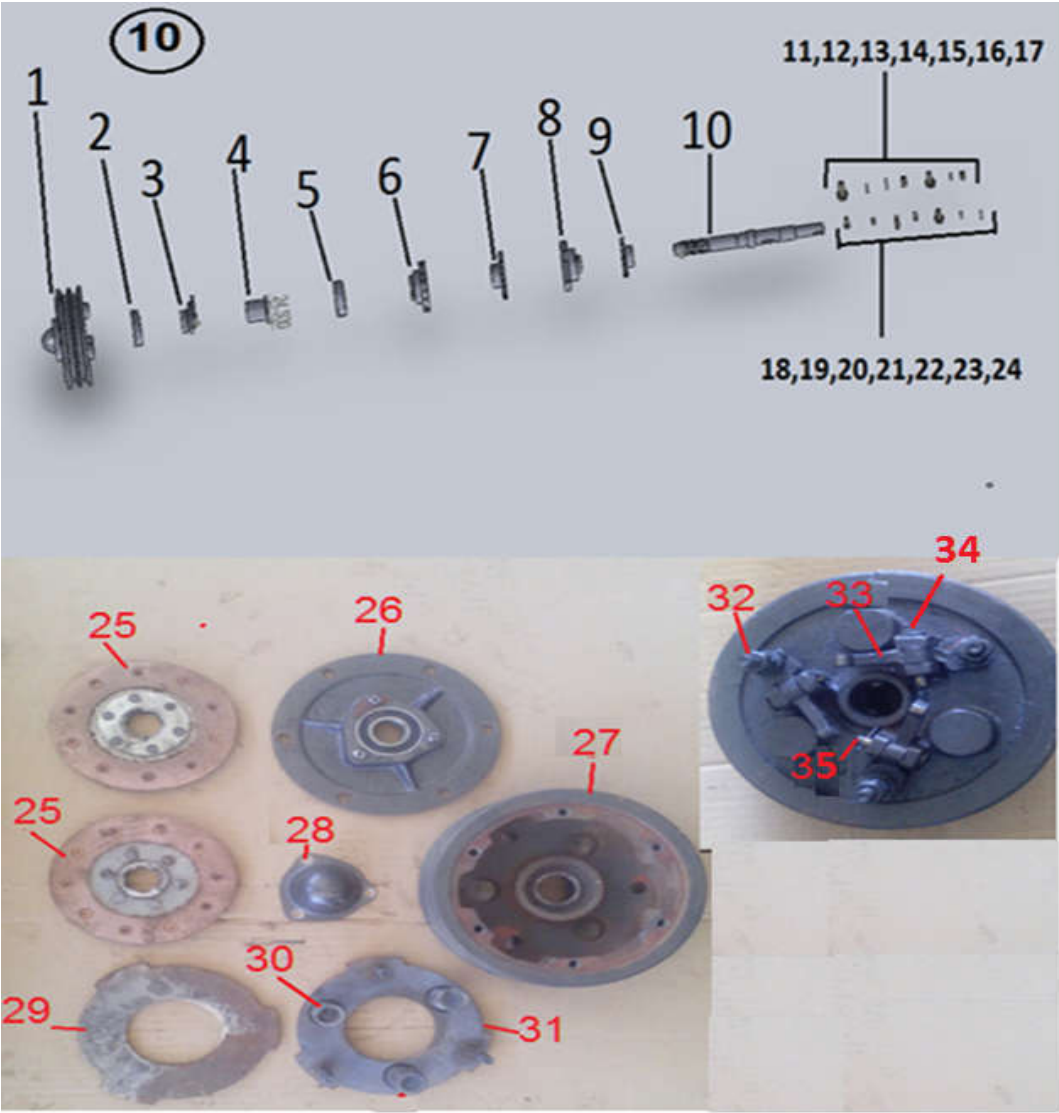


11		Herringbone gear	
S. No		Parts Name	Qty
1	B11-1	N/A	1
2	B11-2	N/A	1
3	B11-3	Input chain wheel	1
4	B11-4	Transmission case	1
5	B11-5	N/A	1
6	B11-6	Chain 68	1
7	B11-7	Chain 46	1
8	B11-8	Bolt M10x110	3
9	B11-9	Bolt M10	3

10	B11-10	Spring washer M10	5
11	B11-11	Bolt M10x15	2
12	B11-12	Bolt M12x35	4
13	B11-13	Bolt M12	4
14	B11-14	Spring washer M12	4
15	B11-15	Flat washer M12	4
16	B11-16	Bolt M10x25	2
17	B11-17	Spring washer M10	2
18	B11-18	Flat washer 35x10x3	2
19	B11-19	Flat key 8x8x60	2
20	B11-20	Wheel Hub (L/R)	2
21	B11-21	Disc Inner (L/R)	2
22	B11-22	Tube	2
23	B11-23	Tyre	2
24	B11-24	Disc Outer (L/R)	2
25	B11-25	Nut-M12	
26	B11-26	Bolt-12X30 Hex	
27	B11-27	Washer-12 Spring	
28	B11-28	Washer-12 Plain	

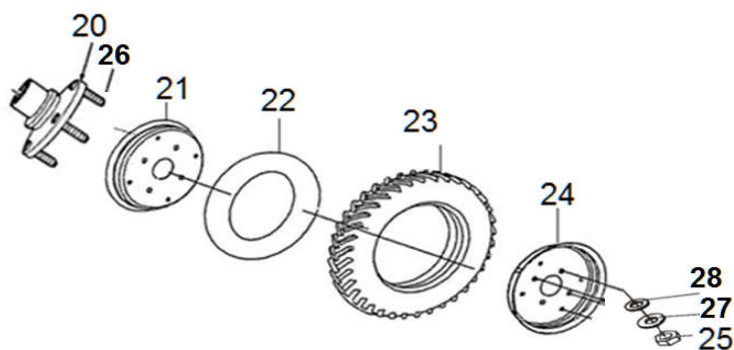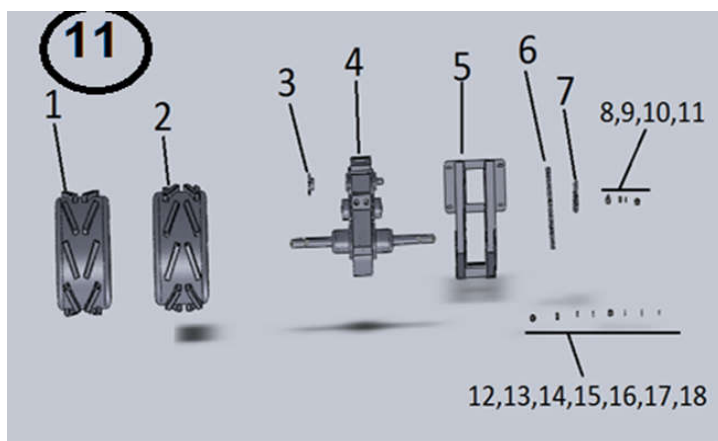

12		Power engine assy	
----	--	-------------------	--


S. No		Parts Name	Qty
1	B12-1	Belt cover rack	1
2	B12-2	Belt cover	1
3	B12-3	U-steel connecting seat 36x54x200x3	2
4	B12-4	Pulley 85	1
5	B12-5	Power engine 170F	1
6	B12-6	Bolt M10x25	4
7	B12-7	Nut M10	4
8	B12-8	Bolt M8x30	4
9	B12-9	Nut M8	4
10	B12-10	Bolt M6x12	3
11	B12-11	Bolt M8x25	1
12	B12-12	flat key 5x5x40	1
13	B12-13	Belt cover Bracket(Small)	1

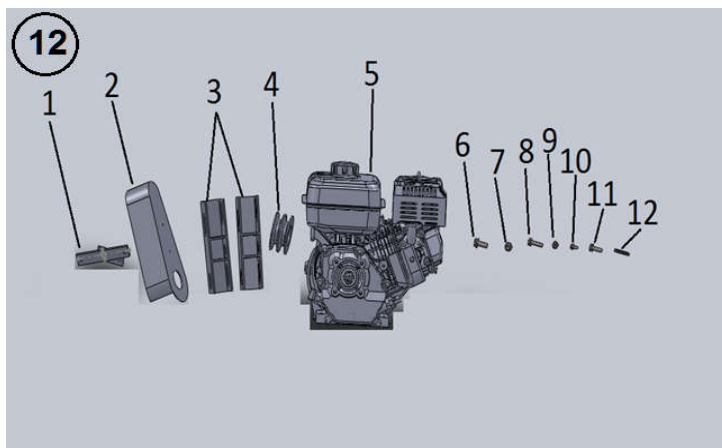


13		Belt & Wire	
S. No		Parts Name	Qty
1	B13-1	Turning wire	1
1-1	B13-1-1	Turning Lever	
1-2	B13-1-2	Cable Stopper	
2	B13-2	Throttle cable	1
3	B13-3	Walking clutch wire 1060 MM	1
4	B13-4	Cutting table clutch wire 1570 MM	1
5	B13-5	Belt B 1219	1




14		Handle rack Assy	
S. No		Parts Name	Qty
1	B14-1	Frame rack	1
2	B14-2	Handle rack	1
3	B14-3	Handle(Left)	1
4	B14-4	Handle(Right)	1
5	B14-5	Spring(Reaper clutch lever)	
5-1	B14-5-1	Spring(Master Clutch)	2
6	B14-6	Clutch pulling rod	2
7	B14-7	Pulling rod cover	2
8	B14-8	Bolt M10x30	2
9	B14-9	Bolt M10x60	2
10	B14-10	Bolt M10	2
11	B14-11	Spring washer M10	4
12	B14-12	Flat washer M10	4
13	B14-13	Bolt M10 x 25	2

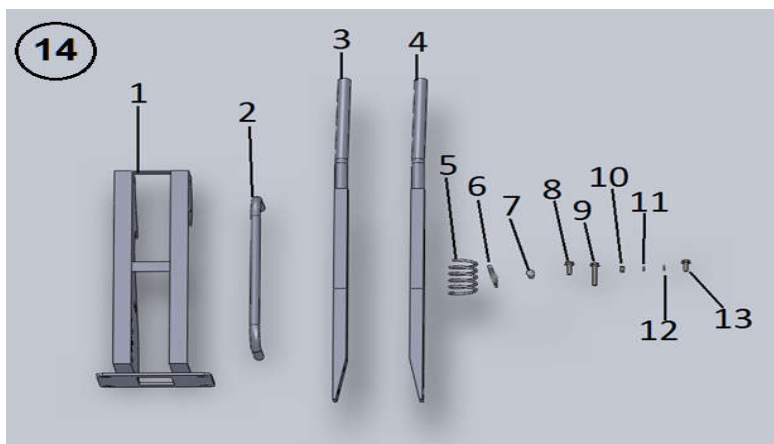

15		Cover tensioning part	
S. No		Parts Name	Qty
1	B15-1	Running chain belt cover	1
2	B15-2	Bolt M8x16	1
3	B15-3	Nut M8	1
4	B15-4	Nylon tensioning wheel	1
5	B15-5	Bolt M10x70	1
6	B15-6	spring washer M10	1
7	B15-7	Flat washer M10	2
8	B15-8	Nut M10	1
9	B15-9	Tensioning wheel push	1

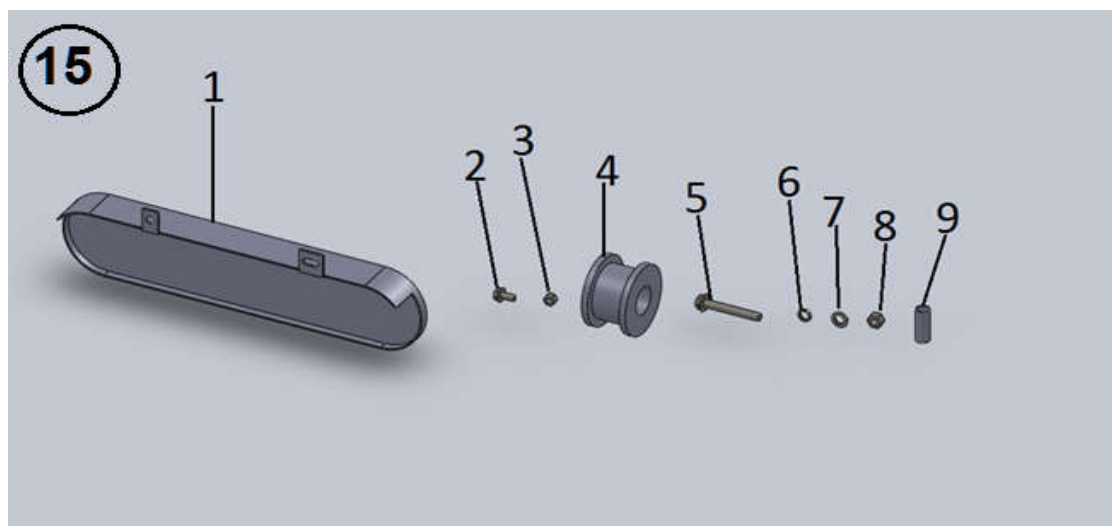


16		Cutting table chain wheel tensioning assy	
S. No		Parts Name	Qty
1	B16-1	Tensioning wheel location shaft	1
2	B16-2	Tensioning wheel torsional spring	1
3	B16-3	Tensional wheel push	1
4	B16-4	tensional wheel shaft	1
5	B16-5	Tensional wheel assemble arm	1
6	B16-6	Tensioning chain wheel	1
7	B16-7	Bolt M10	2
8	B16-8	spring washer M10	2
9	B16-9	bearing 6202	1
10	B16-10	Stop Ring-35 inner	1
11	B16-11	special bolt	1
12	B16-12	plat washer M10	2
13	B16-13	Dust Cover	1

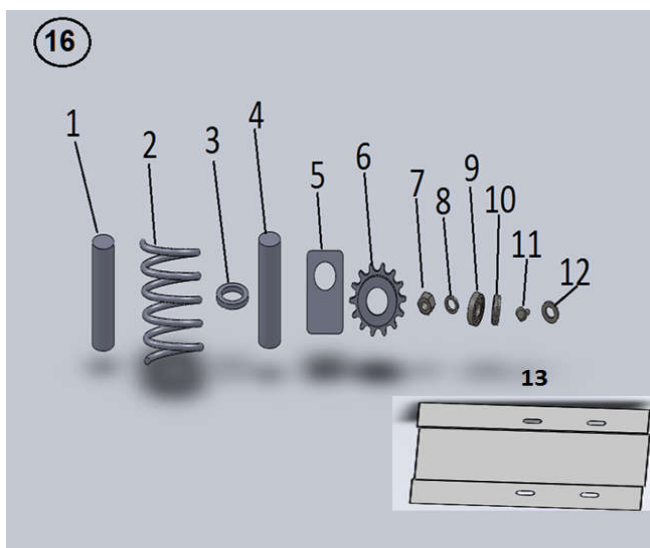

17			
Cutting table gear transmission			
S. No		Parts Name	Qty
1	R17-1	Bolt M8x20	1
2	R17-2	Washer M8	2
3	R17-3	Washer M8	2
4	R17-4	Reaper Input Sprocket 15 Teeth	1
5	R17-5	Bolt M6x15	12
6	R17-6	Washer M6	20
7	R17-7	End Cover(A)	1
8	R17-8	Bearing 6204	4
9	R17-9	Reaper Input Shaft	1
10	R17-10	Key 6x6x25	1
11	R17-11	Key 6x6x35	1
12	R17-12	Spring	1
13	R17-13	Reaper Clutch Sleeve	1
14	R17-14	Bearing 8107	1
15	R17-15	Shifting fork Shaft	1
16	R17-16	Shifting fork	1
17	R17-17	Reaper Tyansmission box body	1
18	R17-18	Cover of Transmission	1
19	R17-19	Washer M6	4
20	R17-20	Bolt M6x15	4
21	R17-21	Oil Bearing	4
22	R17-22	Combine Gear 18 Teeth	1
23	R17-23	Bearing 6303	1
24	R17-24	End Cover(C)	1
25	R17-25	End Cover(B)	1
26	R17-26	Reaper Reversing Shaft	2
27	R17-27	Key 6x6x40	1
28	R17-28	Bolt M10x25	1


29	R17-29	Washer M10	8
30	R17-30	Nut M10	8
31	R17-31	Small Bevel Gear 17 Teeth	8
32	R17-32	Gear 33 Teeth	1
33	R17-33	Bolt M8x16	1
34	R17-34	Big Bevel Gear 28 Teeth	1
35	R17-35	Spacer Ring	1
36	R17-36	Oil Seal 25x40x10	1
37	R17-37	Gland	1
38	R17-38	Bolt M6x25	1
39	R17-39	Key 6x6x20	1
40	R17-40	Reaper Output Shaft	1
41	R17-41	Key 8x7x35	1
42	R17-42	Key 8x7x40	1
43	R17-43	Nut M8	2
44	R17-44	Lock Screw M8x20	2
45	R17-45	Reaper Output Sprocket 18 Teeth	1
46	R17-46	Bearing UC205	1
47	R17-47	Bearing Base FC 205	
48	R17-48	Corner Shaft Sleeve	
49	R17-49	Conneting Rod Head Welding(R)	
50	R17-50	Nut M16	
51	R17-51	Oil Cup M6	
52	R17-52	Dust Preventing Cover(B)	
53	R17-53	Bearing 1203	
54	R17-54	Stop Ring-17 Outer	1
55	R17-55	Dust Preventing Cover(A)	1
56	R17-56	Stop Ring-40 Inner	1
57	R17-57	Bolt M10x40	8

17

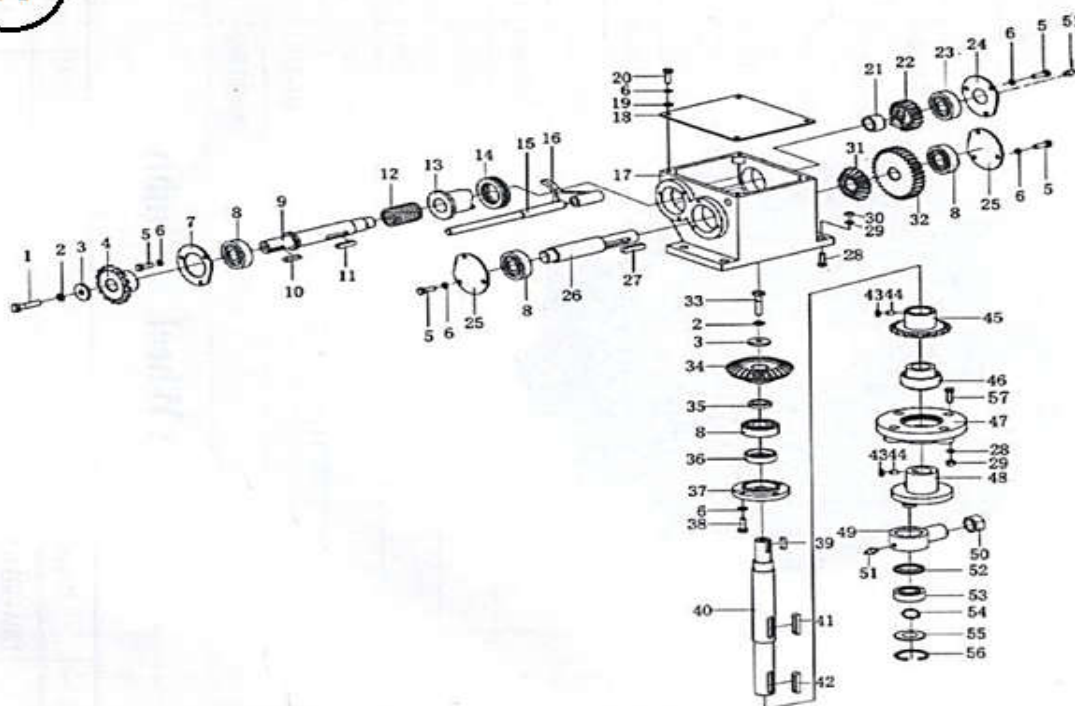


18		PEAPER FRAME ASSEMBLY	
S. No		Parts Name	Qty
1	R18-1	Nut M10	9
2	R18-2	Washer M10	5
3	R18-3	Washer M10	5
4	R18-4	Convey Chain 19 Teeth	1
5	R18-5	Convey chain Tension Adjusting Sprocket supporting plate	2
6	R18-6	Tension Sprocket	2
7	R18-7	Closed Bearing 6202	5
8	R18-8	Stop Ring-15 Outer	2
1	R18-9	Stop Ring-35 Inner	5
10	R18-10	Reaper Frame	1
11	R18-11	Roller Shaft	2
12	R18-12	Convey Chain Supporting Roller	2
13	R18-13	Tension Sprocket Shaft	1
14	R18-14	Tension Sprocket 14 Teeth	1
15	R18-15	Space Ring	1
16	R18-16	Split 2x35	1
17	R18-17	Pin Shaft	1
18	R18-18	Outer Arm Torsion Spring	1
19	R18-19	Rocker Arm Welding	1
20	R18-20	Washer M8	14


21	R18-21	Washer M8	15
22	R18-22	Nut M8	14
23	R18-23	Carriage Bolt M8x25	10
24	R18-24	Bolt M8x20	1
25	R18-25	Washer	1
26	R18-26	Conver Chain 20 Teeth	1
27	R18-27	Convey Chain Transmission Upper Sprocket 20 Teeth	1
28	R18-28	Collar 40	2
29	R18-29	Bearing 6203-2RS	2
30	R18-30	Bolt M8x25	4
31	R18-31	Bearing Base	2
32	R18-32	Transmission Chain 77 Links	1
33	R18-33	Transmission Sprocket 26 Teeth	1
34	R18-34	Key 6x6x15	1
35	R18-35	Transmission Shaft	1
36	R18-36	Key 8x7x20	1
37	R18-37	Key 6x6x20	1
38	R18-38	Convey Chain Transmission Lower Sprocket 20	1
39	R18-39	Transmission Shaft Lower Spacer Ring	1

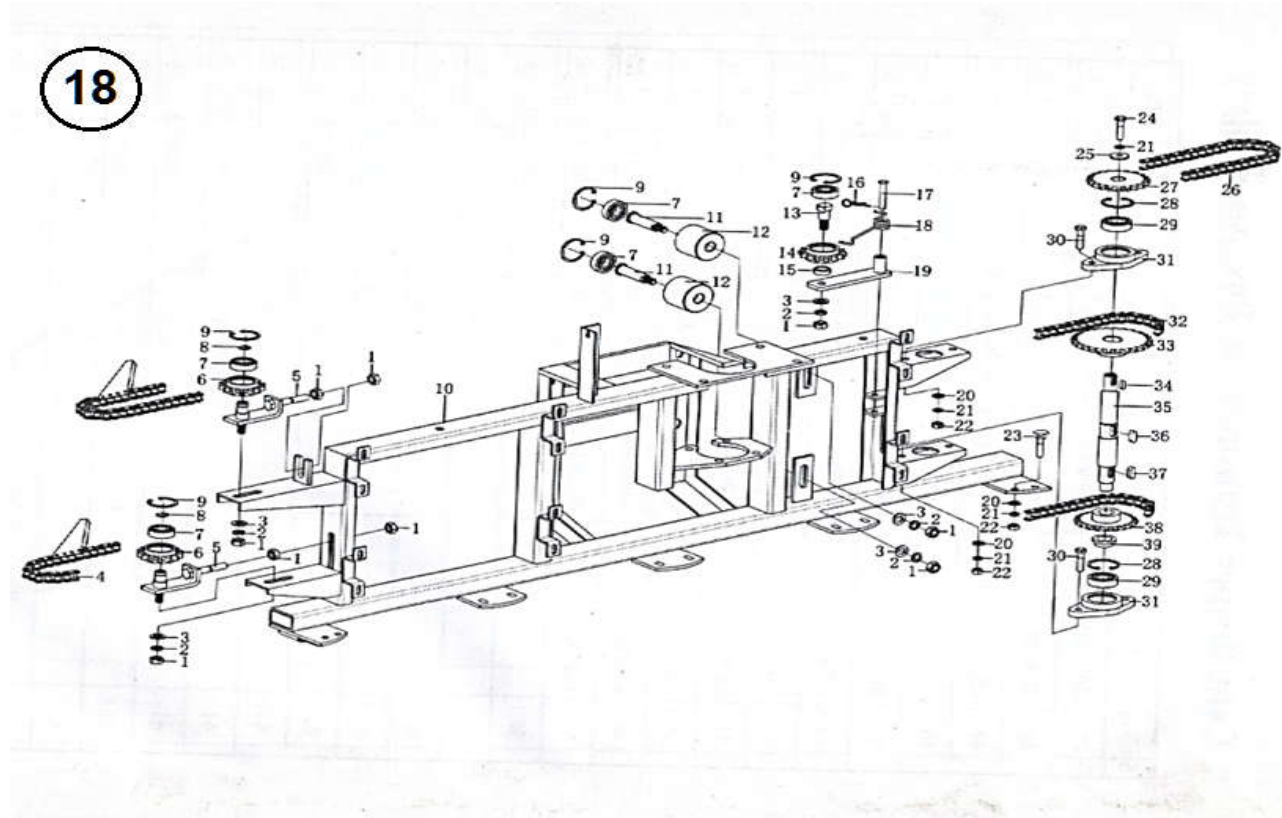


19		REAPER PANEL ASSEMBLY	
S. No		Parts Name	Qty
1	R19-1	Hexagon Bolt with Flange M6x15	10
2	R19-2	Exit Guide Plate(Lower2)	1
3	R19-3	Hexagon Bolt with Flange M8x15	14
4	R19-4	Exit Guide Plate(Upper2)	1
5	R19-5	Lock Nut M6	10
6	R19-6	Panel C	1
7	R19-7	Exit Guide Plate(Lower1	1
8	R19-8	Exit Guide Plate(Upper1	1
9	R19-9	Panel B	1
10	R19-10	Nut M10	4
11	R19-11	Panel Supporter	2
12	R19-12	Crop Guide Plate	1
13	R19-13	Lock Nut M8	14
14	R19-14	Panel A	1

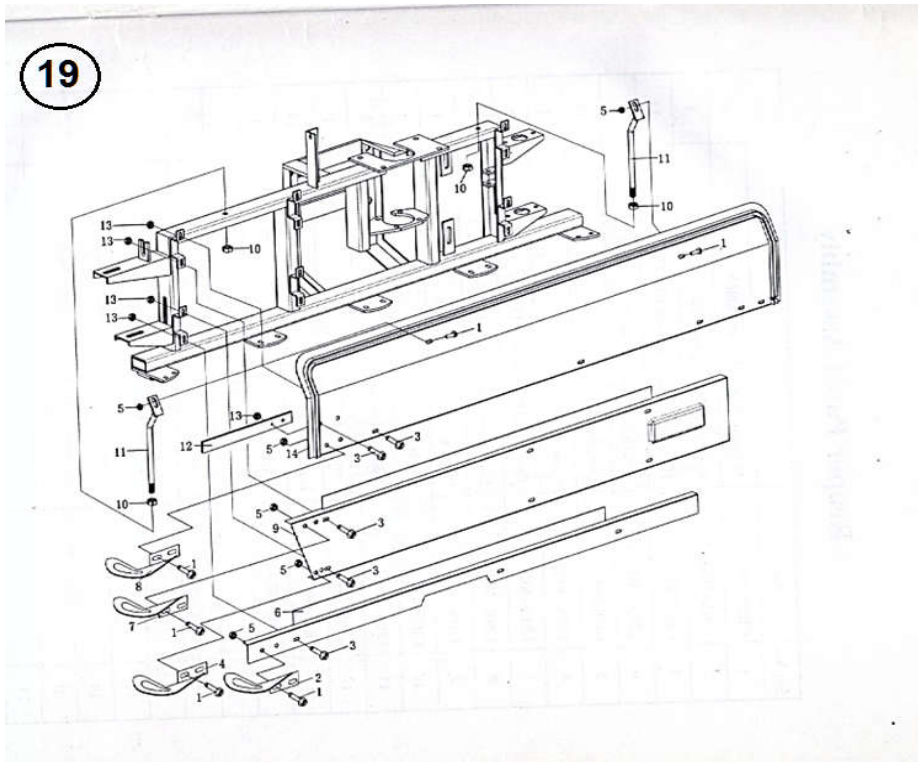


20		CUTTER ASSEMBLY	
S. No		Parts Name	Qty
1	R20-1	Collar 40	1
2	R20-2	Dust Preventing Cover(A)	1
3	R20-3	Collar 17	1
4	R20-4	Bearing 1203	1
5	R20-5	Dust Preventing Cover(B)	1
6	R20-6	Connecting Rod Head Welding(Left)	1
7	R20-7	Connecting Rod	1
8	R20-8	Nut M16 (Left)	1
9	R20-9	Oil Cup M6	1
10	R20-10	Driving Plate	1
11	R20-11	Rivet 6x15	11
12	R20-12	Rivet 6x25	90
13	R20-13	Moving Blade Riveted Bar	1
14	R20-14	Moving Blade	24
15	R20-15	Nut M8	8
16	R20-16	Washer M8	8
17	R20-17	Washer M8	8
18	R20-18	Cutter Pressing Holder	1
18-1	R20-18-1	Cutter Pressing Holder-A	2
18-2	R20-18-2	Cutter Pressing Holder-B	1
19	R20-19	Adjusting Shim	4
20	R20-20	Adjusting Plate A	8
21	R20-21	Adjusting Plate B	4
22	R20-22	Fixed Blade	25
23	R20-23	Fixed Blade Base Bar	1
24	R20-24	Cup Head Square Neck Bolt M8x40	8
25	R20-25	Cutter Assembly	
26	R20-26	Moving Blade Assembly	
27	R20-27	Fixed Blade Assembly	

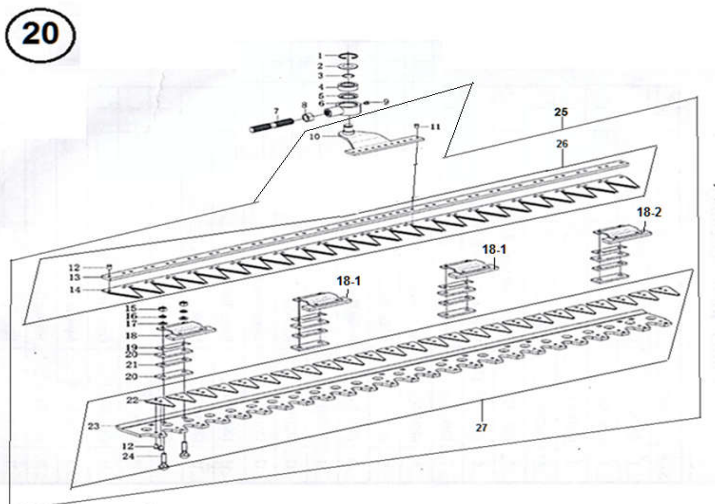

21			
S. No		Parts Name	Qty
1	R21-1	Protective jacket	1
2	R21-2	Support column	1
3	R21-3	Support	1
4	R21-4	Crop lifter	1
5	R21-5/6	Wire A With Compressed spring	1
6			1
7	R21-7	Anti wind device	2
8	R21-8	Working star wheel	1
9	R21-9	Bolt M10x20	1
10	R21-10	Bolt M8x16	1
11	R21-11	Bolt M12x90(SPL-Star Wheel)	1
12	R21-12	Spring washer 12	1
13	R21-13	Flat washer 12	1
14	R21-14	Nut M12	1
15	R21-15	Bolt M8x20	3
16	R21-16	Nut M8	3

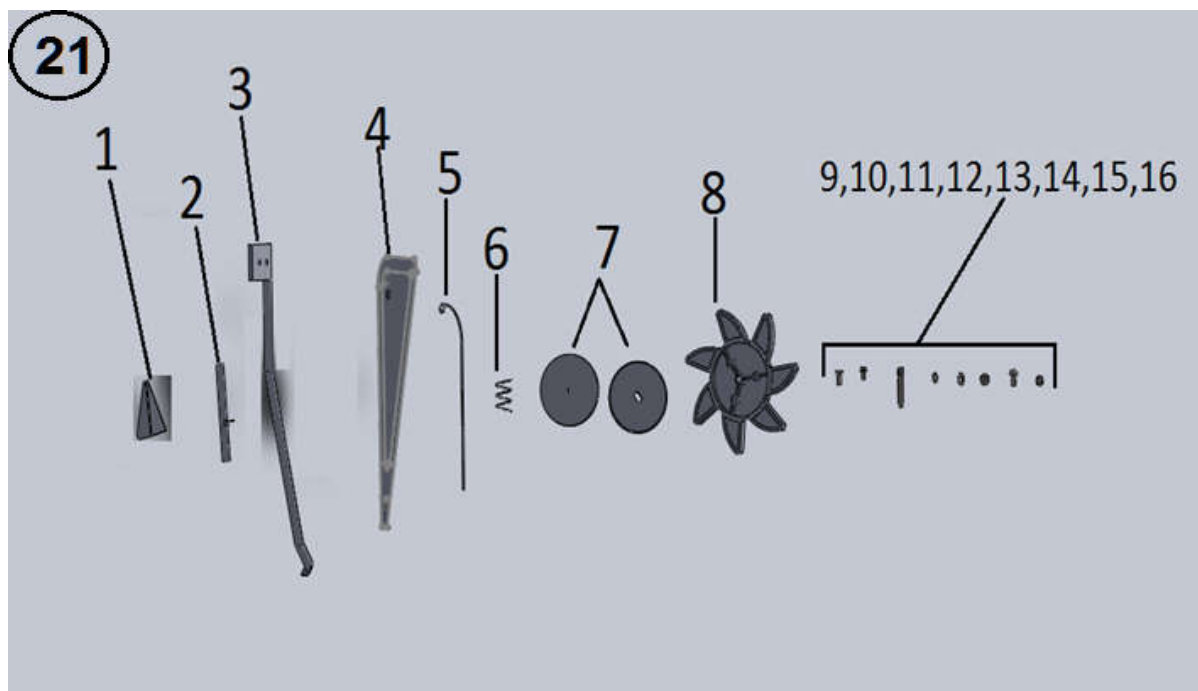


22		B C D Crop lifter	
S. No		Parts Name	Qty
1	R22-1	Protective jacket	1
2	R22-2	Support tube	1
3	R22-3	Support	1
4	R22-4	Crop lifter	1
5	R22-5/6/7	Crop lifting wire A & B With Compressed spring	1
6			1
7			1
8	R22-8	Anti wind device	2
9	R22-9	Working star wheel	1
10	R22-10	Bolt M10x20	1
11	R22-11	Bolt M8x16	1
12	R22-12	Bolt M12x90	1
13	R22-13	Spring washer M12	1
14	R22-14	Flat washer M12	1
15	R22-15	Nut M12	1
16	R22-16	Bolt M8x20	3
17	R22-17	Nut M8	3

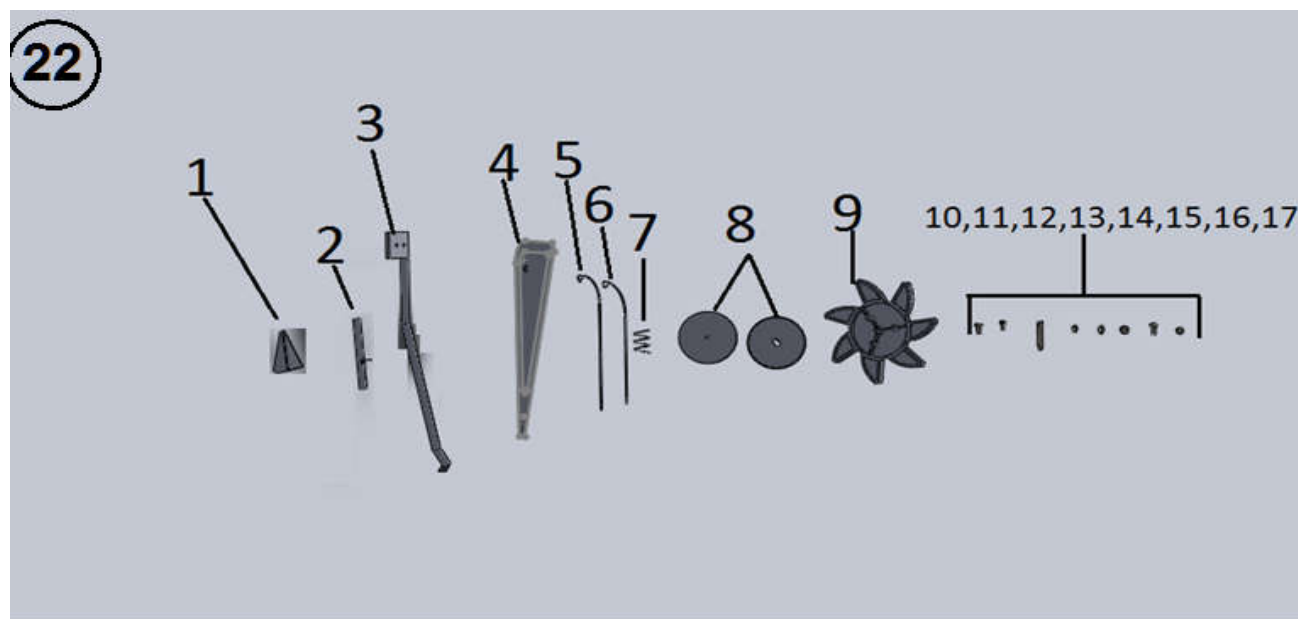

23		Crop indicating board	
S. No		Parts Name	Qty
1	R23-1	Protective jacket	1
2	R23-2	Crop lifting board	1
3	R23-3	Support	1
4	R23-4	Flag pole	1
5	R23-5	Bolt M8x20	3
6	R23-6	Nut M8	3

7	R23-7	Bolt M8x25	2
8	R23-8	Nut M8	2

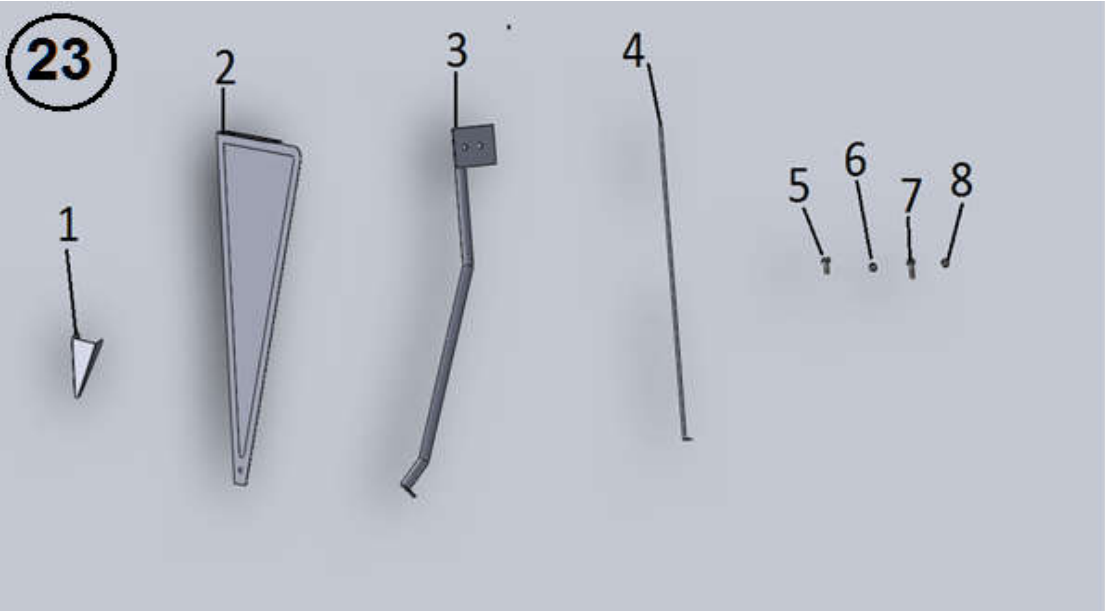

Part No
GB/T5783
GB/T93
120A-2009
120A-2008
GB/T5783
GB/T93
120A-2021
GB/T276
GB/T1096
GB/T1096
GB/T2089
120A-2006
120A-2006
120A-2029
120A-2010
120A-2011
120A-2001
120A-2023
GB/T97.1
GB/T5783
120A-2035
120A-2007
GB/T276
120A-2024
120A-2022
120A-2002
GB/T1096
GB/T5783

GB/T93
GB/T6170
120A-2003
120A-2004
GB/T5783
120A-2015
120A-2014
GB/T9877.1
120A-2016
GB/T5783
GB/T1096
120A-2012
GB/T1096
GB/T1096
GB/T6170
GB75-76
120A-2013
120A-2017-1
120A-2017
120A-2018
120A-2020(R)
GB/T6170
JB/T940.1
120A-2025
GB/T218
GB/T894.1
120A-2019
GB/T893.1
GB/T5783

Part No
GB/T6170
GB/T93
GB/T97.1
120A-3022-1
120A-3009
120A-3138
GB/T276
GB/T894.1
GB/T893.1
120A-3001
120A-3019
120A-3018
120A-3017
120A-3043
120A-3016
GB/T91
120A-3014
120A-3015
120A-3012
GB/T97.1

GB/T93
GB/T6170
120A-3060
GB/T5783
120A-2009
120A-3022
120A-3005
GB/T893.1
GB/T276
GB/T5783
120A-3004
120A-3042
120A-3003
GB/T1096
120A-3002
GB/T1096
GB/T1096
GB/T1096
120A-3008

Part No
GB/T5787
120A-3021-2
GB/T5787
120A-3021-1
GB/T889
120A-3023
120A-3024-2
120A-3024-1
120A-3021
GB/T6170
120A-3020
120A-3025
GB/T889
120A-3024

Part No
GB/T893.1
120A-2019
GB/T894.1
GB/T218
120A-2025
120A-2020(L)
120A-2026
GB/T6170
JB/T940.1
120A-3041-6
GB/T867
GB/T867
120A-3041-7
120A-3041-2
GB/T6170
GB/T93
GB/T97.1
120A-3041-1
120A-3041-8
120A-3041-9
120A-3041-10
120A-3041-3
120A-3041-11
GB/T12
120A-3041
120A-3041-4
120A-3041-5