


Part No	Ref No	Part Name
1	IE34F.1.2	Screw-Air Filter
2	IE34F.1.4	Air Cleaner Outside Cover
3	IE34F.1.1	Air Filter Sponge
4	GB/T9074.4	Screw M5x55-Star
5	IE34F.1.1	Air Cleaner Inside Cover
6	GB/T845	Screw ST 4.2 x 12
7	IE34F.1-3	Choker
8	IE34F.1-2	Choker Handle
9	IE34F.13B	Carburator
10	IE34F-1	Gasket-Carburetor
11	GB/T9074.4	Screw M5x20-Star
12	IE34F.4	Insulator
13	IE34F-2	Gasket-Insulator
14	GB/T119	Pin B3x10-Crankcase
15	GB/T9074.4	Screw M4x16-Star
16	IE34F-5	Fan Cover
17	IE34F-12	Clutch Bolt
18	IE34F-13	Washer A-Clutch
19	IE34F.10.1	Clutch Shoe Assy
20	IE34F-11	Washer B- Clutch
21	IE34F.10-1	Spring Clutch
22	GB/T6171	Nut M8-Flanged Hex
23	GB/T97.1	Washer 8-Plain
24	CG260A-EMC.2B	Cord comp-Wire
25	IE34F.5-1	Grommet Coil
26	IE34F.5-2	Ignition Coil
26a	IE34F.5-2	Fly wheel
27	GB/T9074.4	Screw M5x25-Star
28	IE34F.7-1	Crankcase Big
29	IE34F-4	Guide Plate
30	IE34F.7-12	Gasket-Crankcase
31	IE36F.2	Oil Seal 12x22x7
32	GB/T276	Bearing 6001
33	IE40FP-3Z.3-1	Key-Crank Shaft
34	IE34F.6.1	Crank Shaft Assy
35	IE34F.7-3	Crankcase Small
36	IE34F.8.1	Start Reel
37	IE34F.8-2	Claw Spring
38	IE34F.8-1	Start Claw
39	GB/T9074.6	Screw M5x10-Hex
40	IE34F.11-1	Recoil Spring
41	IE34F.11-2	Rope Reel
42	IE34F.11.1	Starter Cover
43	IE34F.11.1-1	Guide-Starter Rope
44	IE34F.11-3	Starter Rope
45	IE36F.1-1	Starter Handle
46	IE36F.1-5	Gasket-Starter Handle
47	GB/T9074.4	Screw M5x14-Star
48	IE34F-6	Cover-Spark Plug Protective

49	IE34F.3	Guide Cover Assy
50	GB/T9074.4	Screw M4x12-Star
51	IE34F.5-2	Cap-Spark Plug
52	IE40F-3A.8-2	Spring-Spark Plug
53	IE34F.5-3	Dust Cover-Spark Plug
54	BPMR7A (NGK)	Spark Plug
55	GB/T70.1	Screw M5x20-Allen
56	GB/T93	Washer 5-Spring
57	GB/T848	Washer 5-Plain
58	IE34F-3	Gasket Muffler
59	IE34F.2	Muffler
60	IE34F-14	Stud Bolt/ Screw
61	GB/T96	Washer 5-Spring
62	GB/T6187.1	Nut M5-Flanged Hex
63	IE34F-8	Cylinder
64	IE34F-9	Gasket-Cylinder
65	IE34F.6-5	Piston Ring
66	IE34F.6-6	Piston
67	IE34F.6-1	Needle Bearing Ring
68	IE34F.6-3	Piston Pin
69	IE34F.6-4	Needle Bearing-Piston Pin
70	IE34F.6-2	Circlip-Piston Pin
71	IE32FL.6.2-1	Fuel Tank Lid
72	CG420.1.3.1-2	Gasket Fuel Tank Lid
73	EB-415.4.1.1-1	N/A
74	IE32FL.6.2-2	N/A
75	IE34F.9.2-2	Fuel Pipe Long
76	IE34F.9.2-1	Fuel Pipe Short
77	IE36FF.8.1-1	Fuel Pipe Grommet
78	IE34F.9.2-3	Petrol Filter
79	IE34F.9.1	Fuel Tank
80	GB/T9074.3	Screw M5x16-Star
81	GB/T9074.4	Screw M5x16-Star
82	IE34F.8	Start Reel Assy
83	IE34F.11	Starter Assy
84	IE32FL.6.2-3	N/A
85	IE32FL.6.2-4	N/A
86	IE32FL.6.2	Buy #71 Fuel Tank Lid
87		N/A
88	IE34F.1	Air Filter Assy

ENGINE: 1E34F

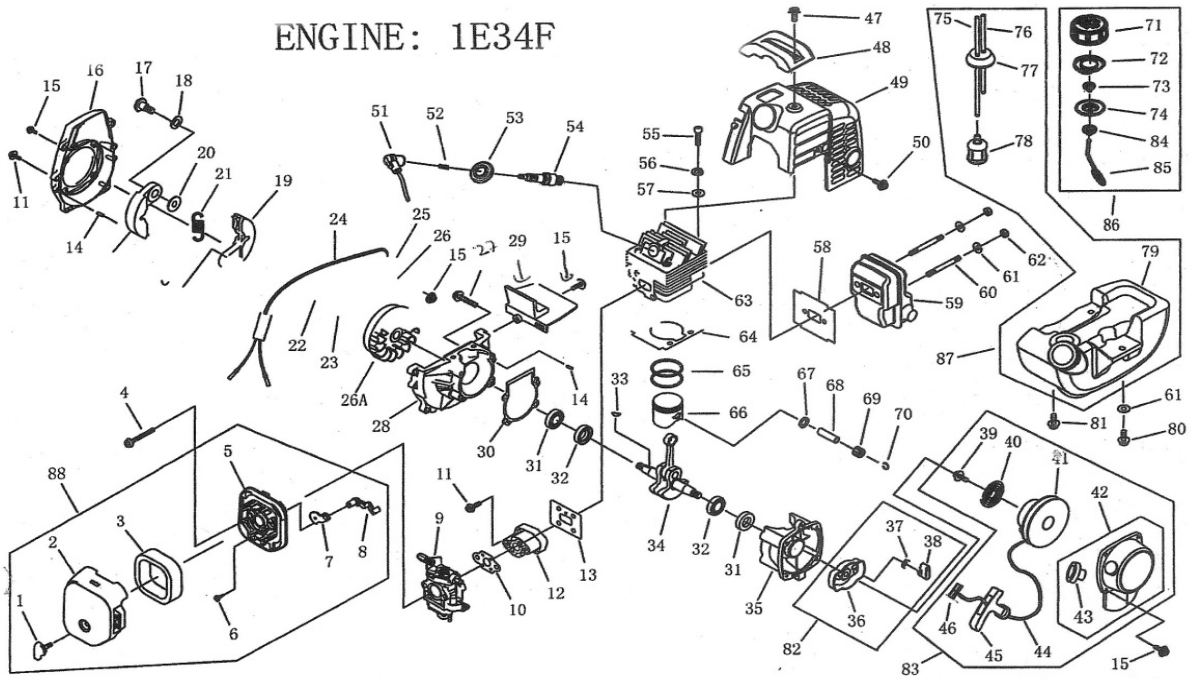

Part No	Ref No	Part Name
1	2320003854	Handle bar sheath/Grip
2	2320018231	Handle Bar Tube
3	2320007926	Flex Accelerator
4	2320018230	Fix Plate-Switch On/Off
5	2320019063	Switch On/Off
7		
6	2310000486	Screw M5x30-Star
8	2320018229	Throttle Cable
9	2320019062	Protection Seat/Outer Cable
9-01		Inner Cable
10	19001055	Clutch Comp Assy
11	2320011326	Active Bolt(Flexible Softpin)
12	2320019061	Linker/Left Cover
13	2310001042	Stop Ring 15-Outer
14		Bearing 6202 2RZ
15	2310000196	Stop Ring 35-Inner
16	2320019109	Clutch Drum
17		Screw M6x20-Hex
19		Flexible Shaft Seating
20	2320019736	Cover/Bush Shaft Seating
21		Bearing 6002 2RZ
22		Bush-Gear & Gear Shaft
23		Gear and Gear Shaft Drive
24	2320017832	Washer/Gasket-Side Plate
25	2320017831	Side Plate
27	2310000927	Cup/Grease Nipple
28	2320017839	Gear-Shaft
29	10200603	Cover/Bush Gear Axis
30	2320017875	Gear Axis

31	2310000458	Screw ST M4x12
32	2320017833	Upper Fan Housing
33	2310001637	Nut M10-Hex
34	2310000753	Washer 10-Plain
35	2320017891	Fan Leaflet
36	2320017899	Fixed Spline Sheath
37	2310000460	Screw M4x12-Star
38	2320017835	Down Fan Housing
39	2310000966	Bearing 6000 2RZ
40	2320017834	Washer 10-Shim
41		Seat-Fan Housing
42	2310000141	Nut M4-Nylon
43	2310000822	Screw M4x25-Star
44	2320017837	Fixing Ring/screw clip
45	2310001644	Nut M4-Nylon
47	2320017836	Wind Pipe
51	2320017838	Fixed Ring-Wind Pipe
52	2320017842	Side Plate-Right
54	2320017830	Bag Hook
56	2320019736	Cooper Cover
58	2310000215	Bag Hook
59	2320017884	Long Handle
60	2320019075	Bush-Long Handle
61	2320017885	Rack/Grip-Long Handle
63	2320017843	Guide Plate-Right
64	2320017889	Plate Comp
65	2320017883	Blade Edge Press Piece
66	2320017881	Blade Upper
67	2320017983	Blade Adjusting-Spacer&Bolt
68	2320017882	Blade Lower
72	2320017841	Guide Plate-Left
73	2320017840	Side Plate-Left
74	2320017879	Plate
75	2310000436	Screw M3x8-Star
76	2320017880	Gasket Gearcase
81	10301496	Gear Box Lower
82	2310001663	Bearing 608
83	2320017878	Washer/Steel Plate
84	10200607	Connecting Cover/Rod
85	2310001647	Bearing 618
86	2310001648	Bearing 6806 Z
87	2320017877	Cam
88		Gear
89		Gear Box Upper
90		Grease Nipple
91	2310000970	Bearing 6001 2RZ
92	2310001662	O' Washer-Gear Box Upper
94	2320008569	Plate-Handle
95	2320001843	Gasket/Bracket-Handle
99		Rubber pad

100		Bracket Big
101		Bracket Small
102		Screw 5x12 star
103		Belt
104		Nut M6 Flanged Hex
105		Bedding (Joint)
106		Nut M10 Flanged Hex
107		Bearing Plate
108		Bedding Holder
109		Bedding Bracket
110		Frame

