

Part no	Description
1	Pressure Handle
2	Handle Cap
3	Trigger
4	Trigger Handle
5	Trigger Lock
6	Nozzle
7	Nozzle O-ring (Front)
8	Nozzle Assembly
9	Nozzle O-ring (Back)
10	Pressure Rod
11	Pressure Spring
12	Pressure O-ring (Front)
13	Pressure O-ring (Back)
14	Bottle Handle
15	Bottle O-ring
16	Outlet Tube
17	Outlet Filter
18	Pressure Chamber
19	Oil-Seal
20	Pressure Chamber O-Ring
21	Pressure Chamber Oil-Seal/HOUSING
22	Pressure Chamber Rod
23	Bottle

