

Product	Chainsaw - Chain Sharpener	KisanKraft™ Invoice Date	
Brand	KisanKraft	KisanKraft™ Invoice No.	
Model		Serial #	
WARRANTY PERIOD	6 MONTHS	FOR THE SPECIFIED PERIOD FROM THE DATE OF SALE OR DELIVERY WHICHEVER IS EARLIER.	
Dealer's Invoice Date		Dealer's Invoice No.	
Buyer's Info (Name, Address, Phone, etc.):		Dealer's Stamp (Address, Phone, TIN, etc.):	
Buyer's Sign		Dealer's Sign	

What is covered: KisanKraft Machine Tools Private Limited and its manufacturers warrant this product to be free from defects in material or workmanship. All parts defective in material and workmanship are covered.

This warranty will only cover defects arising under normal usage.

This warranty is limited to repair or replacement by KisanKraft Machine Tools Private Limited or its manufacturers at the premises of Authorized Dealers, of such parts as appear to KisanKraft or its manufacturers, upon inspection, to be defective in material and/or workmanship. KisanKraft or its manufacturers make no warranty with respect to trade accessories not manufactured or sold by them.

What is not covered: The *warranty shall become null and void* and neither KisanKraft Machine Tools Private Limited nor any of its manufacturers, nor its authorized dealers assumes any responsibility, if the failure was caused by the following:

- (1) Operation of product with incorrect fuel or lubricants,
- (2) Incorrect usage of machine or misuse,
- (3) Lack of maintenance,
- (4) Negligence,
- (5) Accident or physical damage,
- (6) Repairs made by unauthorized parties and/or with unauthorized parts,
- (7) Improper set up, adjustments, tampering or altered products

This warranty is null & void, if you fail to register the warranty with KisanKraft by sending the KisanKraft Copy with dealer's stamp.

KisanKraft Machine Tools Private Limited

Important: (1) Normal maintenance and adjustments to the product is the responsibility of the customer. (2) Normal wear and tear is not covered under warranty (3) Rubber/plastic parts and consumables such as blades, clutch and clutch-bell, spark-plugs, nylon line, air-filters, fuel-filters, oil seals etc. are not covered under the warranty.

No Warranty On Electrical Motor / Electrical Parts / Battery Etc.

Incidental / Consequential Loss: KisanKraft Machine Tools Private Limited or its manufacturers will not be liable for general damages, including bodily injuries, or for incidental or consequential damages including, but not limited to, loss of use, loss of profits, loss of production, expense of substitute equipment or other commercial loss or damage.

Limitation of Liability: This limited warranty is in lieu of all other express warranties, obligations, or liabilities. Any implied warranties, obligations or liabilities, including, but not limited to, any implied warranty of merchantability shall be limited in duration to the applicable warranty period. Any action for breach of any warranty hereunder, including, but not limited to, any implied warranty of merchantability must be brought within the applicable warranty period.

Modifications of Warranty: No agent, representative, dealer, or employee of KisanKraft Machine Tools Private Limited or any of its manufacturers has the authority to increase or alter the obligations of this warranty.

Assignment / Transfer of warranty: The warranty cannot be assigned and shall not transfer if the product is resold by the first buyer. The above warranties are extended to the first end user (original purchaser), and no warranty is made, nor authorized to be made assignable on resale by the first end user.

What you must do to obtain limited warranty service: To obtain performance of any obligation under this warranty for failure during the applicable warranty period, deliver the defective product, to the nearest Authorized Dealer. KisanKraft Machine Tools Private Limited, its manufacturers and its dealers reserve the right to inspect the claimed defective part(s) to determine if the malfunction is the result of a defect covered by this warranty. Please note that the decision of KisanKraft Machine Tools Pvt Ltd with respect to any warranty claim is final.

Receipt is required for availing warranty services

Jurisdiction: All disputes are subject to Bangalore court's jurisdiction.

Our Products

- ◆Chainsaws◆Brush Cutters and Accessories◆Harvesters◆
- ◆Engines and Water Pumps◆Hand Tools◆Garden Tools ◆
- ◆Cultivators and Accessories◆Sprayers and Accessories◆
- ◆Transplanter and Post Hole Digger ◆ Milking Machines ◆

This warranty is null & void, if you fail to register the warranty with KisanKraft by sending the KisanKraft Copy with dealer's stamp.

KisanKraft Machine Tools Private Limited

Operation Manual



KisanKraft Machine Tools Pvt. Ltd.

Sri Huchhanna Tower, #4, 1st Main, 7-A Cross, Maruthi Layout, Dasarahalli,
HAF Post, Hebbal, Bangalore 560024, Karnataka, INDIA

- ◆ Bangalore ◆ Ahmedabad ◆ Coimbatore ◆ Hyderabad ◆ Pune ◆ Hinudpur ◆
◆ Jaipur ◆ Karnal ◆ Kolkata ◆ Lucknow ◆ Mandi-HP ◆ Raipur ◆ Ernakulam ◆

CONTENTS

BEFORE GETTING STARTED 7

APPLICATION 7

SAFETY INSTRUCTIONS & SYMBOLS 7

PRODUCT OVERVIEW 11

ASSEMBLY 14

OPERATION 15

MAINTENANCE 17

PARTS DIAGRAM 18

PARTS LIST 19

Product	Chainsaw - Chain Sharpener	KisanKraft™ Invoice Date	
Brand	KisanKraft	KisanKraft™ Invoice No.	
Model		Serial #	
WARRANTY PERIOD	6 MONTHS	FOR THE SPECIFIED PERIOD FROM THE DATE OF SALE OR DELIVERY WHICHEVER IS EARLIER.	
Dealer's Invoice Date		Dealer's Invoice No.	
Buyer's Info (Name, Address, Phone, etc.):		Dealer's Stamp (Address, Phone, TIN, etc.):	
Buyer's Sign		Dealer's Sign	

What is covered: KisanKraft Machine Tools Private Limited and its manufacturers warrant this product to be free from defects in material or workmanship. All parts defective in material and workmanship are covered.

This warranty will only cover defects arising under normal usage.

This warranty is limited to repair or replacement by KisanKraft Machine Tools Private Limited or its manufacturers at the premises of Authorized Dealers, of such parts as appear to KisanKraft or its manufacturers, upon inspection, to be defective in material and/or workmanship. KisanKraft or its manufacturers make no warranty with respect to trade accessories not manufactured or sold by them.

What is not covered: The *warranty shall become null and void* and neither KisanKraft Machine Tools Private Limited nor any of its manufacturers, nor its authorized dealers assumes any responsibility, if the failure was caused by the following:

- (1) Operation of product with incorrect fuel or lubricants,
- (2) Incorrect usage of machine or misuse,
- (3) Lack of maintenance,
- (4) Negligence,
- (5) Accident or physical damage,
- (6) Repairs made by unauthorized parties and/or with unauthorized parts,
- (7) Improper set up, adjustments, tampering or altered products

This warranty is null & void, if you fail to register the warranty with KisanKraft by sending the KisanKraft Copy with dealer's stamp.

KisanKraft Machine Tools Private Limited

Important: (1) Normal maintenance and adjustments to the product is the responsibility of the customer. (2) Normal wear and tear is not covered under warranty.

(3) Rubber/plastic parts and consumables such as blades, clutch and clutch-bell, spark-plugs, nylon line, air-filters, fuel-filters, oil seals etc. are not covered under the warranty.

No Warranty On Electrical Motor / Electrical Parts / Battery Etc.

Incidental / Consequential Loss: KisanKraft Machine Tools Private Limited or its manufacturers will not be liable for general damages, including bodily injuries, or for incidental or consequential damages including, but not limited to, loss of use, loss of profits, loss of production, expense of substitute equipment or other commercial loss or damage.

Limitation of Liability: This limited warranty is in lieu of all other express warranties, obligations, or liabilities. Any implied warranties, obligations or liabilities, including, but not limited to, any implied warranty of merchantability shall be limited in duration to the applicable warranty period. Any action for breach of any warranty hereunder, including, but not limited to, any implied warranty of merchantability must be brought within the applicable warranty period.

Modifications of Warranty: No agent, representative, dealer, or employee of KisanKraft Machine Tools Private Limited or any of its manufacturers has the authority to increase or alter the obligations of this warranty.

Assignment / Transfer of warranty: The warranty cannot be assigned and shall not transfer if the product is resold by the first buyer. The above warranties are extended to the first end user (original purchaser), and no warranty is made, nor authorized to be made assignable on resale by the first end user.

What you must do to obtain limited warranty service: To obtain performance of any obligation under this warranty for failure during the applicable warranty period, deliver the defective product, to the nearest Authorized Dealer. KisanKraft Machine Tools Private Limited, its manufacturers and its dealers reserve the right to inspect the claimed defective part(s) to determine if the malfunction is the result of a defect covered by this warranty. Please note that the decision of KisanKraft Machine Tools Pvt Ltd with respect to any warranty claim is final.

Receipt is required for availing warranty services

Jurisdiction: All disputes are subject to Bangalore court's jurisdiction.

Our Products	◆Chainsaws◆Brush Cutters and Accessories◆Harvesters◆ ◆Engines and Water Pumps◆Hand Tools◆Garden Tools ◆ ◆Cultivators and Accessories◆Sprayers and Accessories◆ ◆Transplanter and Post Hole Digger ◆ Milking Machines◆
-------------------------	--

This warranty is null & void, if you fail to register the warranty with KisanKraft by sending the KisanKraft Copy with dealer's stamp.

KisanKraft Machine Tools Private Limited

BEFORE GETTING STARTED

Congratulations on the purchase of your new device. With it, you have chosen a high quality product.

The operating instructions constitute part of this product. They contain important information on safety, use and disposal. Before using the product, familiarize yourself with all of the operating and safety instructions. Use the product only as described and for the applications specified.

IMPORTANT: Keep this manual safety and in the event that the product is passed on, hand over all documents to the third party.











APPLICATION



This chain sharpener is suitable for sharpening the standard saw chains.

The equipment is not designed for any other type of application (e.g. grinding with a coolant liquid, grinding other work pieces or materials such as asbestos, which are hazardous to health).

It is not designed for commercial use. The equipment is designed for use by adults. Young people under the age of 16 are NOT permitted to use the equipment.

SAFETY INSTRUCTIONS & SYMBOLS

 Warning!	When using power tools, observe the following basic safety measures for the prevention of electric shocks and the risk of damages, injury and fire.
	Read and observe the operating instructions pertaining to the equipment.
	Instruction symbols (the instruction is explained at the place of the exclamation mark) with information on preventing damage. Help symbols with information on improving tool handling.
	Risk of injury from the rotating tool! Keep hands away.
	Risk of electric shock! Disconnect from the mains before carrying out maintenance and repair work.
	Do not expose the unit to rain
 	Risk of injury! Wear ear, eye and hand protection!
	Wear breathing protection
	Risk of cuts! Wear Cut-resistant gloves

	Safety class II
	Do not dispose of electrical equipment in household waste

GENERAL SAFETY INSTRUCTIONS:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given instruction or under supervision concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- For reasons of safety, children and young people under the age of 16 and people who are unfamiliar with the operating instructions are not permitted to use the equipment.

Safe operation:

- **Keep work area clear**- Cluttered areas and benches invite injuries.
- **Consider work area environment.**
 - Do not expose tools to rain. Do not use tools in damp or wet locations. Water entering a power tool will increase the risk of electric shock.
 - Keep work area well lit.
 - Do not use tools in the presence of flammable liquids or gases.
 - Power tools create sparks which may ignite the dust or fumes.
- **Guard against electric shock.**
Avoid body contact with earthed or grounded surfaces (e.g. pipes, radiators, ranges, refrigerators).
- **Keep other persons away.**
Do not let persons, especially children not involved in the work touch the tool or the extension cord and keep them away from the work area.
- **Store idle tools.** When not in use, tools should be stored in a dry locked up place, out of reach of children.
- **Do not force the tool.** It will do the job better and safer at the rate for which it was intended.
- **Use the right tool.**
 - Do not force small tools to do the job of a heavy duty tool.
 - Do not use tools for purposes not intended; for example do not use circular saws to cut tree limbs or logs.
 - Use of the power tool for operations different from those intended could result in a hazardous situation.
- **Dress properly.**
 - Do not wear loose clothing or jewelry, they can be caught in moving parts.
 - Anti-skid footwear is recommended when working outdoors.
 - Wear protective hair covering to contain long hair.
- **Use protective equipment.**
 - Use safety glasses.
 - Use face or dust mask if working operations create dust.
- **Connect dust extraction equipment.** If the tool is provided for the connection of dust extraction and collecting equipment, ensure these are connected and properly used.

- **Do not abuse the cord.** Never pull the cord to disconnect it from the socket. Keep the cord away from heat, oil and sharp edges.
- **Secure work:** Where ever possible use clamps to hold the work. It is safer than using your hand.
- **Do not overreach.** Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- **Maintain tools with care.**
 - Many accidents are caused by poorly maintained power tools.
 - Keep cutting tools sharp and clean for better and safer performance.
 - Follow instruction for lubricating and changing accessories.
 - Inspect tool cords periodically and if damaged get it repaired by an authorized service personnel.
 - Inspect extension cords periodically and replace if damaged.
 - Keep handles dry, clean and free from oil and grease.
- **Disconnect tools.** When not in use, before servicing and when changing accessories disconnect tools from the power supply.
Such preventive safety measures reduce the risk of starting the power tool accidentally.
- **Remove adjusting keys and wrenches.** Form the habit of checking to see that keys and adjusting wrenches are removed from the tool before turning it on.
A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- **Avoid unintentional starting.** Ensure switch is in "off" position when plugging in.
- **Use outdoor extension leads.** When the tool is used outdoors, use only extension cords intended for outdoor use and so marked.
- **Stay alert.** Use common sense and do not operate the tool when you are tired. A moment of inattention while operating power tools may result in serious personal injury.
- **Check damaged parts.** This will ensure that the safety of the power tool is maintained.
 - Before further use of tool, it should be carefully checked to determine that it will operate properly and perform its intended function.
 - Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting and any other conditions that may affect its operation.
 - A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated in this instruction manual. Have defective switches replaced by an authorized service center.
 - Do not use the tool if the switch does not turn on and off. There is a risk of injury.
- **WARNING** Use of any accessory or attachment other than one recommended in this instruction manual may present a risk of personal injury.
- **Have your tool repaired by a qualified person.** This electric tool complies with the relevant safety rules. Repairs should only be carried out by qualified persons using original spare parts; otherwise this may result in considerable danger to the user.
- If the supply cord of this power tool is damaged, it must be replaced by a specially prepared cord available through the service organization.


- Connect the device only to power point with a residual current protective device (RCD) with a measured residual current of not more than 30 mA.
- Keep the mains cable and extension cable away from the grinding disk and saw chain. In the event that it is damaged, immediately disconnect the plug from the socket.
- Do not touch the cable before it has been disconnected from the mains as there is a risk of electric shock.
- Before use carry out a visual inspection of the grinding disk. Do not use grinding disks that are spoiled, cracked or otherwise damaged. Replace a worn grinding disk.
- Never operate the device without the visual protection disk.
- Do not work with the device if you are tired or after the consumption of alcohol or tablets. Always take a break from the work in good time.
- Do not use the device in an explosive atmosphere or where sparks could cause fire, explosion etc. Failure to observe this will result in a risk of fire or explosion.
- Keep your hands away from the grinding disk and chain teeth when the device is in use. Do not move the chain by hand. This will cause a risk of injury.
- Never place your fingers between the grinding disk and rotary disk or between the grinding disk and protection disk. This will cause a risk of crushing.
- The chain becomes hot during grinding. Do not touch the machined location, as there is a risk of being burnt.
- Use only grinding disks recommended by the manufacturer. Do not use saw blade.
- Switch off the device and disconnect the plug
 - to release a jammed insertion tool,
 - if the connecting cable is damaged or tangled,
 - In the case of unusual noises.

Grinding Wheel Warnings.


- Do not use a grinding wheel if it is chipped, cracked, or worn. You can check if the wheel has cracks not visible to the human eye by hanging it up by the central hole and tapping it with a non-metal object (i.e. Screwdriver handle).
- Only use grinding wheels that fit the Arbor (7/8"). Do not try to change or modify the mounting hole on a grinding wheel to make it fit.
- Do not over tighten the Grinder Lock Cap (#9). Hand tighten it. Over tightening may cause the wheel to break or disintegrate.
- Never use the Chainsaw Sharpener without the Grinding Wheel Cover (#11) in place.
- Always test the Grinding Wheel (#8) by running it for a minute prior to contact with a chain.
- Keep away from the wheel it is turning, and make sure no one is standing close, in the line of the wheel rotation trajectory.
- If the grinding wheel vibrates, turn off the machine immediately and check that it is mounted securely, and that is not damaged.
- Never try to stop the grinding wheel with your hands, even if you are wearing safety gloves. The wheel will cut through gloves and your hand, causing serious injury.
- Never operate tool without the Grinding Wheel Cover in place.
- Replacement grinding wheel listed speed must meet or exceed RPM rating of the tool.

Warning!! This machine is designed to sharpen chainsaw chains. Do not attempt to sharpen any other tools, and do not attempt to grind any other objects.

PRODUCT OVERVIEW

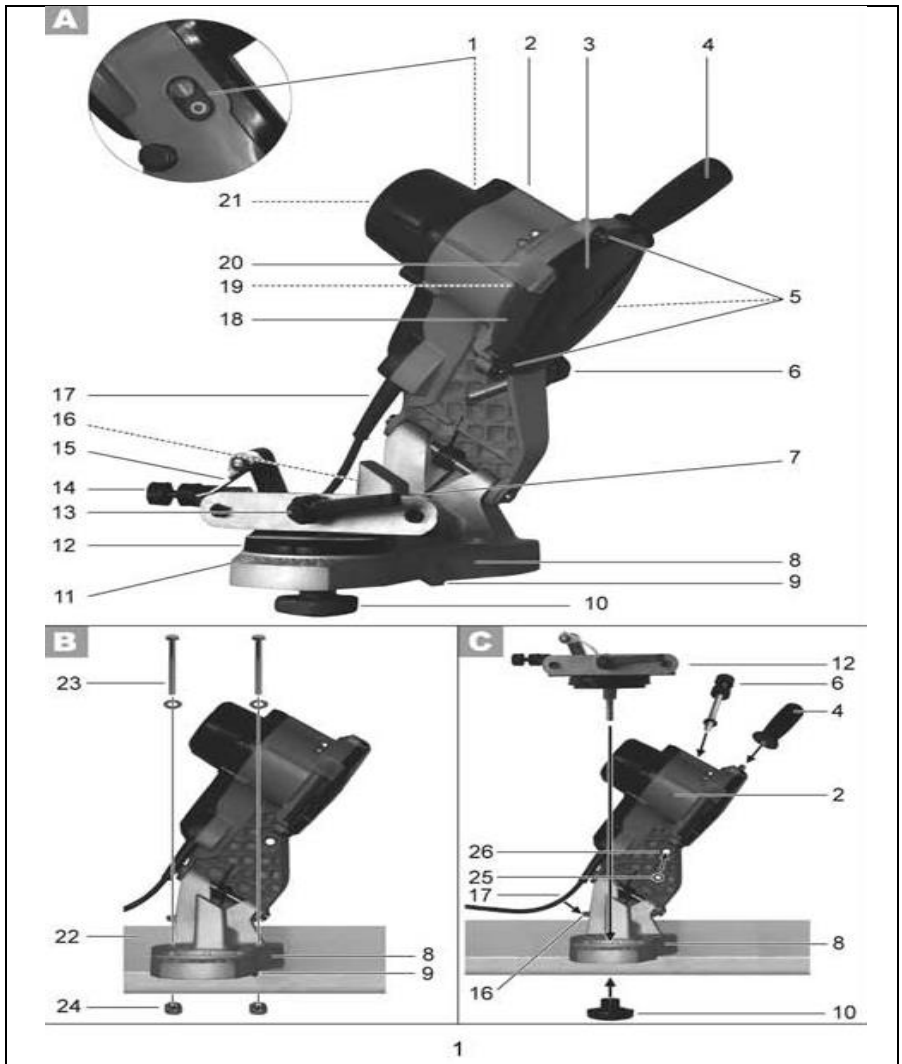



<ol style="list-style-type: none">1. On/Off switch2. Grinding head3. Grinding disk cover4. Handle5. Fixing screws for grinding disk cover6. Adjusting screw and adjusting nut for depth stopper7. Guide rail8. Grinding plinth	<ol style="list-style-type: none">9. Stop notches10. Locking screw for chain clamping unit11. Scale for rake angle (+300 to -300)12. Chain clamping unit and rotary disk.13. Chain tensioning and clamping lever14. Chain feed adjusting screw and adjusting nut15. stopper16. Cable hook (not shown)
---	--

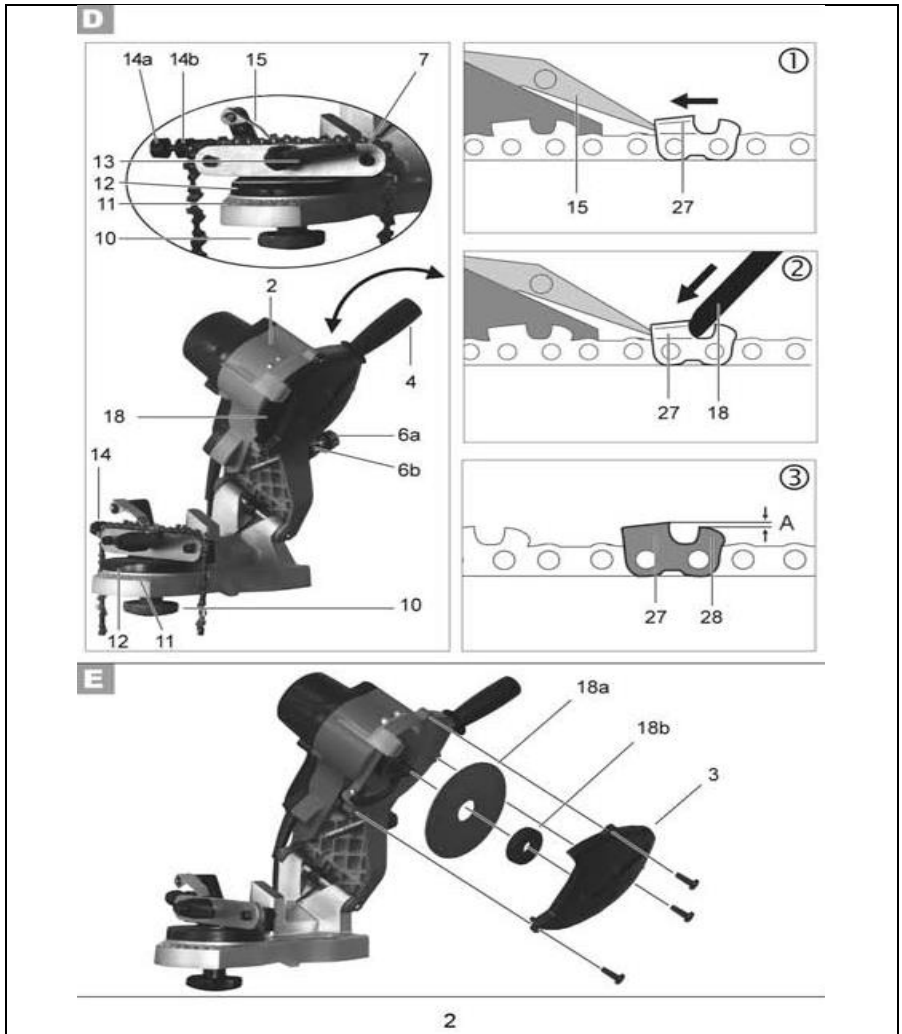

<ul style="list-style-type: none"> 17. Mains cable 18. Grinding disk and grinding disk nut (not shown) 19. Fixing screws for the protective screen 20. Protective screen 21. Ventilation openings (not shown) 22. Worktop 	<ul style="list-style-type: none"> 23. 2 screws (for mounting on the worktop) 24. 2 nuts (for mounting on the worktop) 25. Mounting nut (for chain adjusting screw) 26. Recess in the grinding head 27. Cutting tooth (chain saw) 28. Depth limiter lug (chain saw)
---	---

FUNCTION DESCRIPTION: Before starting the appliance, firmly mount it on a worktop. It is driven by an electric motor with protection against overheating and restart for added safety. The rake angle is easily adjustable between 30° and +30° using a rotary disk. The chain guide rail has a variably adjustable stopper. To sharpen, swivel the grinding head. The equipment is fitted with a protective screen in order to protect the user.

ASSEMBLY
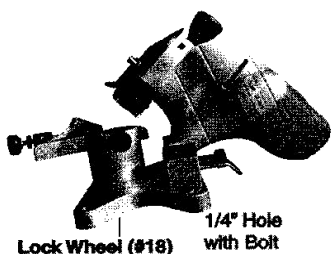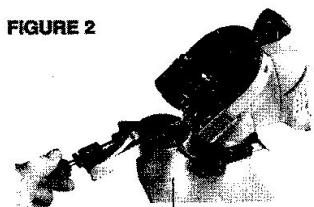
<p>1. When installing the sharpener on a workbench, make sure that the Lock Wheel (#18) is accessible, as shown in the mounting picture in FIGURE 1.</p>	<p style="text-align: center;">FIGURE 1</p>  <p style="text-align: center;">Lock Wheel (#18) 1/4" Hole with Bolt</p>
<p>2. Bolt (bolts not included) the unit directly to the workbench through the two 1/4" holes on the Base (#17). The workbench must have a solid surface capable of supporting the weight of this product, the work piece and assorted tools, See FIGURE 2.</p>	<p style="text-align: center;">FIGURE 2</p>  <p style="text-align: center;">Base (#17)</p>


Warning! Always unplug the unit before changing grinding wheels, or when making any adjustments to the sharpener

Mounting a Grinding Wheel. (Refer figure 3 & 4)

1. Raise the Top Housing (#4) and lock it in the up position by tightening the Lock Stop (#6).
2. Remove the two screws holding the Grinding Wheel Cover (#11). Set the cover aside.
3. Unscrew the Grinder lock Cap (#9) that holds the Grinding Wheel (#8) in place.
4. Install the new wheel on the Grinding Wheel Base (#7), making sure it fits properly.

Note: Do not use a grinding wheel if it is chipped, cracked, or worn. You can check if the wheel has cracks not visible to the human eye by hanging it up by the central hole and tapping it with a non-metal object (i.e. Screwdriver handle). If it is in good condition it will produce a metallic sound. A dull sound indicates a crack or break.

5. Replace the Grinder Lock Cap (#9).
6. Replace the Grinding Wheel Cover (#11).
7. Replace the Lock Stop (#6) and lower the Top Housing (#4).
8. Never operate the tool without the Grinding Wheel Cover in place

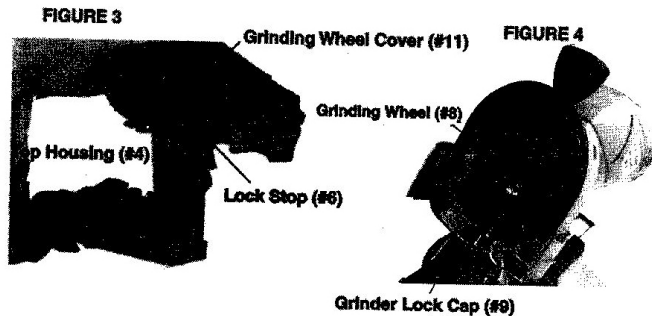

OPERATION

Warning! Always unplug the unit while adjusting chain to be sharpened.

Note: Raise the Top Housing (#4) while adjusting the chain.

1. Clean the chain before sharpening. Wash it with a non-flammable solvent. Do not use gasoline. Dry the chain.
2. Lift up the chain stop (#23) and secure the chain in the sliding guides (#31). See FIGURE 6.
3. Lower the Chain Stop (#23) so that it is positioned on the tooth (cutter) you want to start with. See FIGURE 5
4. Refer FIGURES 5 & 6. Loosen the Lock Wheel (#18) to allow entire housing to turn. Rotate the housing to match the degree of angle you need on the Angle Gauge. Chains come in various sizes with varying degrees of sharpening the angles. Check with your chain manufacturer's manual to determine what degree you need to sharpen at. Once the degree is set, tighten the Lock Wheel (#18).

FIGURE 5



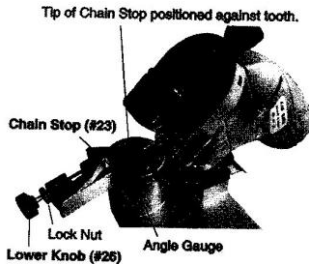


FIGURE 6

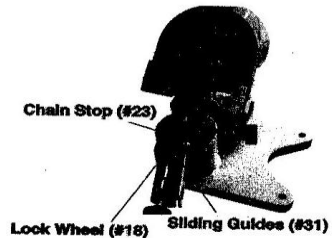

5. Lower the Top Housing (#4) so that the Grinding Wheel (#8) skims the chain tooth.
6. Hold it at that position while you tighten the lock stop (#6) so that the wheel will only go down to that point. See FIGURE 7
7. Depending on the amount of material you wish to remove, tighten or loosen the Lower Knob (#26) and see the Lock Nut. See FIGURE 5. The Lower Knob (#26) has a Lock Nut which will determine how much material is removed. Once you set the lock Nut, fully tighten the Lower Knob (#26).

FIGURE 7

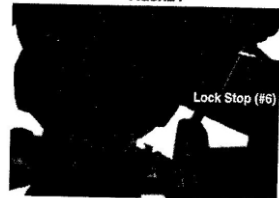

8. Lock the chain in the sliding guides (#31) by turning the Handle (#34). See FIGURE 8. The Handle (#34) should be situated so that you can easily release and tighten it. You will need to release it each time you move to the next link, and tighten it to sharpen each link.

FIGURE 8

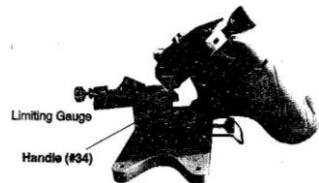


FIGURE 9




9. If the chain has been repeatedly sharpened, the chain depth limiting gauges may need to be taken down with a flat file (not included). See FIGURES 8 & 9. File down each gauge so that they are at a lower level than the cutting teeth

Sharpening:

1. Put on your protective gear and make sure the immediate area is clear of bystanders.
2. Plug in the Power Cord (#3) and push the green button on the Switch Plate (#5) to turn on the machine.
3. Slowly lower the grinding wheels as shown in FIGURE 10. If you notice slight errors in your settings, turn off the unit and unplug it before you make your adjustments.

FIGURE 10

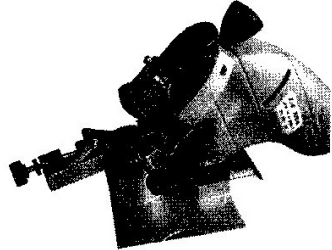


Note: A good grind occurs when the contact between the wheel and the teeth are gradual and smooth. Do not stop too long on each tooth.

4. After sharpening one tooth, turn off the machine. Lift the Top Housing (#4), release the Handle (#34), and move the chain so that the next link is positioned in the Chain Stop (#23). Tighten the Handle (#34). Turn the machine back on and continue sharpening the next tooth. Repeat this process until you have sharpened all of the links set up for this angle.
5. After you finished sharpening all of the teeth set for your current angle, turn off the machine by pushing the red button on the switch plate (#5) and unplug the unit.
6. Follow the steps given under operation, double check machine and turn it on Housing (#4) so that the Grinding Wheel (#8) skims the chain tooth, and lock it in place. Follow all of the steps given under operation, double checking machine and turn it on hasn't been sharpened is positioned against the Chain Stop (#23) and locked in as explained above.
7. As you did with the first half of the chain, be sure to lower the Top Housing (#4) so that the Grinding Wheel (#8) skims the chain tooth, and lock it in place. Follow the steps given under operation, double check the machine and turn it on.
8. After you repeat all the steps under Sharpening, your chain is ready to be mounted on your saw.

MAINTENANCE

1. Keep the sharpener clean and free of dust, metal debris and dirt.
2. Check the Grinding Wheel before each use to make sure it isn't damaged. Do not use a grinding wheel if it is chipped, cracked, or worn. You can check if the wheel has cracks not visible to the human eye by hanging it up by the central hole and tapping it with a non-metal object (i.e., screwdriver handle). If it is in good condition it will produce a metallic sound. A dull sound indicates a crack or break.
3. Replace the Grinding wheel when it grids down to a diameter of 3 inches.

PARTS DIAGRAM

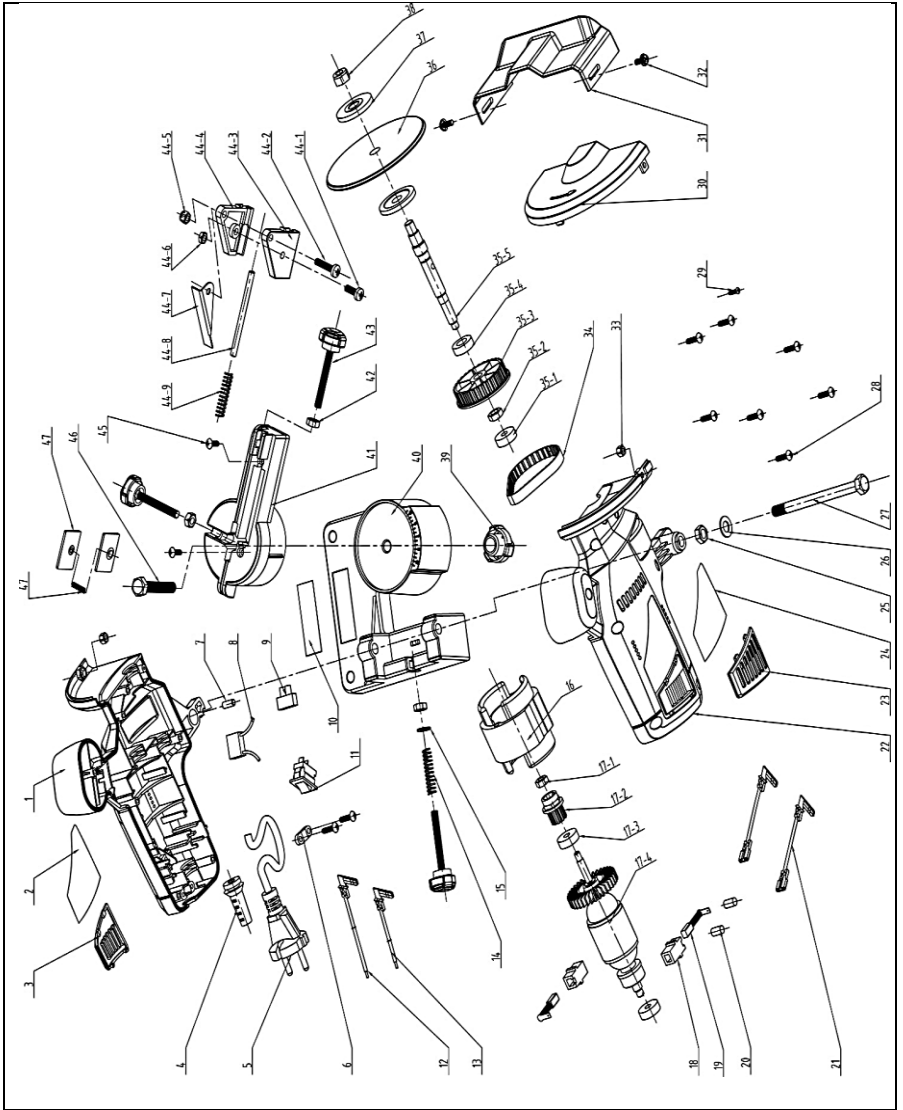

PARTS LIST

SI.No	Part No.	Part Name	SI.No	Part No.	Part Name
1	8006-277201	Left housing	30	8020-277201	cover
2		label	31	8024-277201	cover
3	8020-277202	wind cover left	32	8SJAB40-12B	Screw
4	8332-200701	cable cover	33	8NA-04B	nut
5	8422-277201	cable	34	8345-277201	Belt
6	8184-282101	press ban	35	8440-277202	Output shaft set
7	8091-277201	pin	35-1	BC-061906-ST	
8	8416-277201	capacitance	35-2	8NA-08B	
9	8411-522201	Connection set	35-3	8122-277201	
10		Warning label	35-4	BC-10905-ST	
11	8042-230106	Switch	35-5	8085-277201	
12	8413-277202	Connection line	36	8234-277201	Disc
13	8413-277203	Connection line	37	8334-277201	Fix cover
14	8342-277201	Spring	38	8NG-08B	Screw
15	8WF-06B	Washer	39	8313-277201	Big knob
16	8405-277201	Stator	40	8144-277201	sit
17	8440-277201	Rotor set	41	8137-277201	angle set
17-1	8NA-06B		42	8NA-06B	nut
17-2	8122-277202		43	8313-277202	small knob
17-3	BC-061906-ST		44	8440-277203	gliding block module
17-4	8402-277201		44-1	8SJAD05-14B	
18	8409-277201	brush holder	44-2	8SJAD05-20B	
19	8406-277201	cable brush	44-3	8301-277202	
20	8087-462202	Rubber pole	44-4	8301-277201	
21	8413-277201	Connection line	44-5	8NG-05B	

Sl.No	Part No.	Part Name	Sl.No	Part No.	Part Name
22	8006-277202	right housing	44-6	8NA-05B	
23	8020-277203	wind cover right	44-7	8325-277201	
24		label	44-8	8086-277201	
25	8NG-08B	screw	44-9	8342-277202	
26	8WF-08B	washer	45	8SJAB40-08B	Screw
27	8206-277201	screw	46	8SFD08-45B	Screw
28	8SJAB40-16B	Screw	47	8321-277201	nip
29	8SJAB30-12B	Screw	48	8342-277203	Spring

KisanKraft has a large range of products to serve the farmers. A list of our products is given below:

<p>Brush Cutters and Accessories</p> <ul style="list-style-type: none">Brush Cutter/Power WeederBackpack Brush CutterTea PrunerPole pruner with EngineReaper AttachmentBlades-CircularBlades (2 & 3 points)BaffleNylon RopeTap & Go <p>Chainsaws</p> <ul style="list-style-type: none">Petrol ChainsawElectric ChainsawChain Sharpening Machine <p>Engines and Water Pumps</p> <ul style="list-style-type: none">Engine –Diesel-(Horizontal)Engine –Diesel(Vertical)Engine-KeroseneWater Pump with Petrol EngineWater Pump with Kerosene EngineWater Pump with Diesel Engine <p>Hand Tools</p> <ul style="list-style-type: none">SecateursFolding SawGarden RakeGarden ShovelHedge ShearLopperTelescopic Hedge ShearTelescopic Lopping ShearTree PrunerTelescopic Steel Pipe & Fruit Picker BagSheep Shear <p>Garden Tools</p> <ul style="list-style-type: none">Electric Pressure WasherHedge TrimmerLawn Mower (Electric, Petrol & Manual)Leaf Blower	<p>Cultivators and Accessories</p> <ul style="list-style-type: none">Petrol and Diesel <p>Sprayers and Accessories</p> <ul style="list-style-type: none">Battery SprayerPortable Power SprayerTrolley SprayerManual Knapsack SprayerManual Pressure SprayerRose CansHose Crimping MachineHTP SprayerHTP Delivery HoseHTP Hose ReelHTP StandHTP Gun / Lance(Brass RodKnapsack Power SprayerMister / Duster / Granuel SpreaderHTP Sprayer Set with Diesel EngineHTP Sprayer Set with Kerosene EngineFogging Machine <p>Milking Machine</p> <ul style="list-style-type: none">Wood ShredderFodder Ensiling Chaff CutterFodder Grinder Chaff CutterFodder Mini Chaff Cutter <p>Harvester</p> <ul style="list-style-type: none">Maize ShellerMaize Sheller + DehuskerMaize Combine HarvesterOnion Digger Carlotti ItalyTea Leaf HarvesterSugarcane Combine HarvesterSugarcane Leaf Stripper <p>Transplanter and Post Hole Digger</p> <ul style="list-style-type: none">Paddy Transplanter (2 & 8 Rows)Transplanter-Vegetable & TobaccoPost Hole Digger(4" to 14" Augers)
---	--

Wide Range of Products for Every Need



Product	Chainsaw - Chain Sharpener	KisanKraft Invoice Date	
Brand	KisanKraft	KisanKraft Invoice No.	
Model		Serial #	
WARRANTY PERIOD	6 MONTHS	FOR THE SPECIFIED PERIOD FROM THE DATE OF SALE OR DELIVERY WHICHEVER IS EARLIER.	
Dealer's Invoice Date		Dealer's Invoice No.	
Buyer's Info (Name, Address, Phone, etc.):		Dealer's Stamp (Address, Phone, TIN, etc.):	
Buyer's Sign		Dealer's Sign	

What is covered: KisanKraft Machine Tools Private Limited and its manufacturers warrant this product to be free from defects in material or workmanship. All parts defective in material and workmanship are covered.

This warranty will only cover defects arising under normal usage.

This warranty is limited to repair or replacement by KisanKraft Machine Tools Private Limited or its manufacturers at the premises of Authorized Dealers, of such parts as appear to KisanKraft or its manufacturers, upon inspection, to be defective in material and/or workmanship. KisanKraft or its manufacturers make no warranty with respect to trade accessories not manufactured or sold by them.

What is not covered: The *warranty shall become null and void* and neither KisanKraft Machine Tools Private Limited nor any of its manufacturers, nor its authorized dealers assumes any responsibility, if the failure was caused by the following:

- (1) Operation of product with incorrect fuel or lubricants,
- (2) Incorrect usage of machine or misuse,
- (3) Lack of maintenance,
- (4) Negligence,
- (5) Accident or physical damage,
- (6) Repairs made by unauthorized parties and/or with unauthorized parts,
- (7) Improper set up, adjustments, tampering or altered products.

This warranty is null & void, if you fail to register the warranty with KisanKraft by sending the KisanKraft Copy with dealer's stamp.

KisanKraft Machine Tools Private Limited

Important: (1) Normal maintenance and adjustments to the product is the responsibility customer. (2) Normal wear and tear is not covered under warranty.(3) Rubber/plastic parts and consumables such as blades, clutch and clutch-bell, spark-plugs, nylon line, air-filters, fuel-filters, oil seals etc. are not covered under the warranty.

No Warranty On Electrical Motor / Electrical Parts / Battery Etc.

Incidental / Consequential Loss: KisanKraft Machine Tools Private Limited or its manufacturers will not be liable for general damages, including bodily injuries, or for incidental or consequential damages including, but not limited to, loss of use, loss of profits, loss of production, expense of substitute equipment or other commercial loss or damage.

Limitation of Liability: This limited warranty is in lieu of all other express warranties, obligations, or liabilities. Any implied warranties, obligations or liabilities, including, but not limited to, any implied warranty of merchantability shall be limited in duration to the applicable warranty period. Any action for breach of any warranty hereunder, including, but not limited to, any implied warranty of merchantability must be brought within the applicable warranty period.

Modifications of Warranty: No agent, representative, dealer, or employee of KisanKraft Machine Tools Private Limited or any of its manufacturers has the authority to increase or alter the obligations of this warranty.

Assignment / Transfer of warranty: The warranty cannot be assigned and shall not transfer if the product is resold by the first buyer. The above warranties are extended to the first end user (original purchaser), and no warranty is made, nor authorized to be made assignable on resale by the first end user.

What you must do to obtain limited warranty service: To obtain performance of any obligation under this warranty for failure during the applicable warranty period, deliver the defective product, to the nearest Authorized Dealer. KisanKraft Machine Tools Private Limited, its manufacturers and its dealers reserve the right to inspect the claimed defective part(s) to determine if the malfunction is the result of a defect covered by this warranty. Please note that the decision of KisanKraft Machine Tools Pvt Ltd with respect to any warranty claim is final.

Receipt is required for availing warranty services

Jurisdiction: All disputes are subject to Bangalore court's jurisdiction.

Our Products

- ◆Chainsaws◆Brush Cutters and Accessories◆Harvesters◆
- ◆Engines and Water Pumps◆Hand Tools◆Garden Tools ◆
- ◆Cultivators and Accessories◆Sprayers and Accessories◆
- ◆Transplanter and Post Hole Digger ◆ Milking Machines ◆

This warranty is null & void, if you fail to register the warranty with KisanKraft by sending the KisanKraft Copy with dealer's stamp.

KisanKraft Machine Tools Private Limited